

MINIATURE SCENERY

INSTRUCTIONS DERELICT TRANSPORT HEAD

PREPARATION


You will need:

- Cutting mat or something to protect your table.
- PVA/Wood glue or superglue if you prefer.
- Small file or sand paper.
- Small blade / hobby knife




GENERAL PROCESS


- Clear plenty of table space, you will need it.
- Parts should remove easily from the board by pressing through and popping them out. It's a good idea to cut through the tiny joins first though, and some parts (particularly smaller, more detailed parts) may need more careful persuasion.
- Use file or sand paper to remove the small bur caused by the connection to the frame.
- It's a good idea to familiarise yourself with how the pieces fit together before gluing.
- Slot the parts together as shown by the pictures below, applying glue wherever there is a connection. (unless shown otherwise)
- Parts may be a very tight fit, slight trimming or sanding of parts may be needed for ease of assembly.

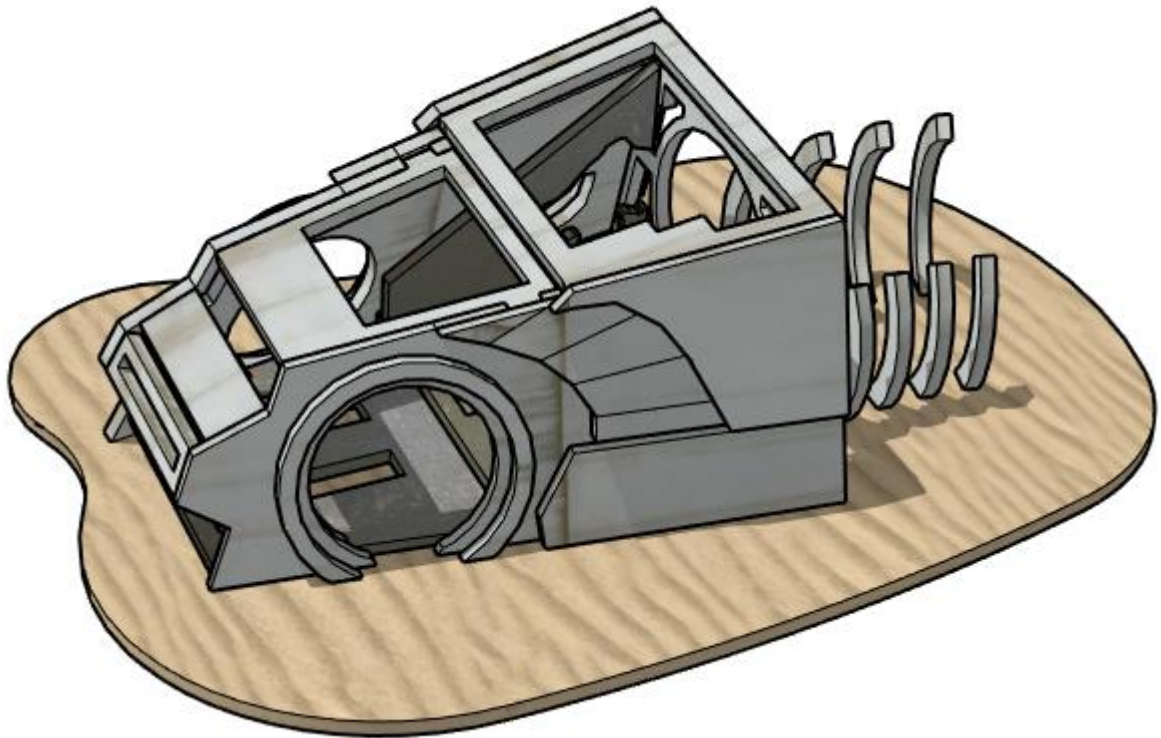





MINIATURE SCENERY

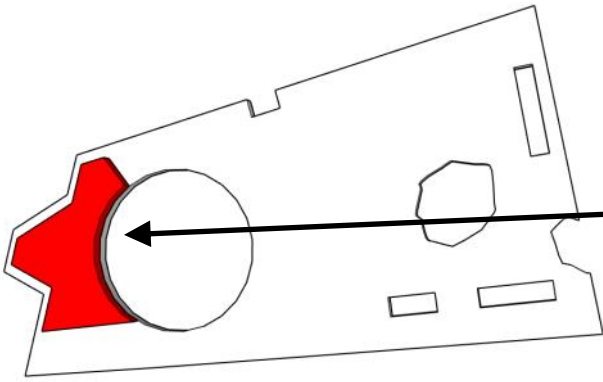









LINE UP THE RED PARTS
TO THE EDGE OF THE CIRCLE LEAVING
EVEN SPACING ON THE JAGGED EDGE.

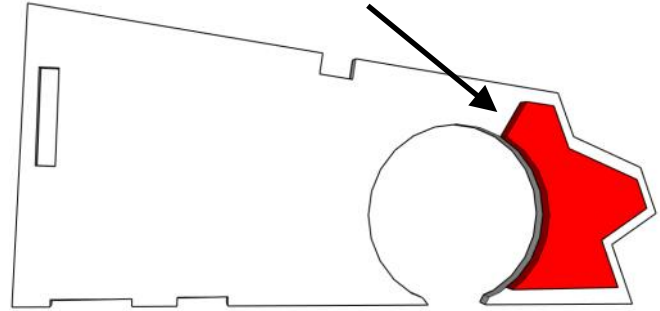




OPPOSITE SIDE TO ENGRAVING

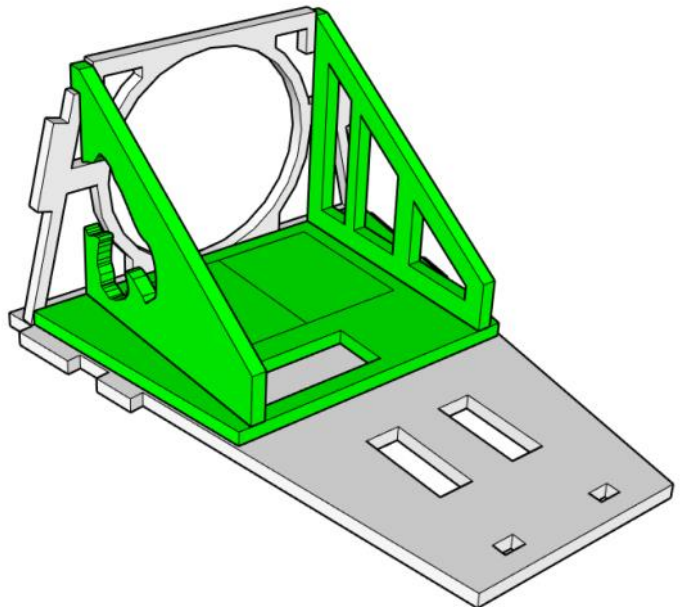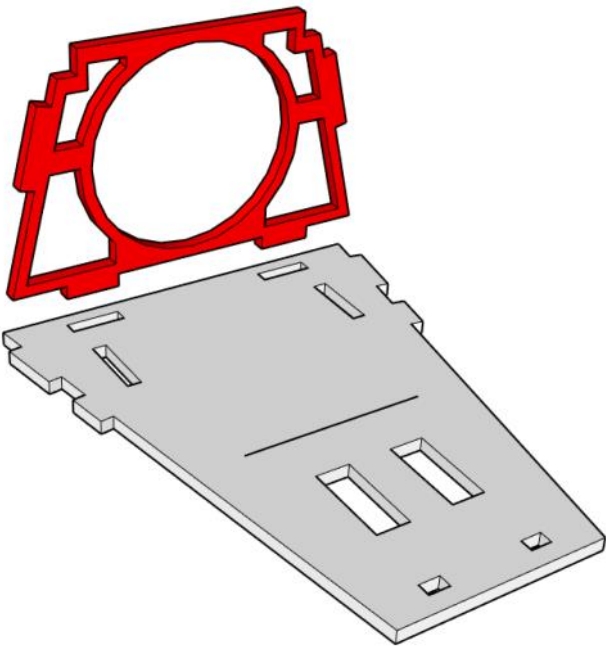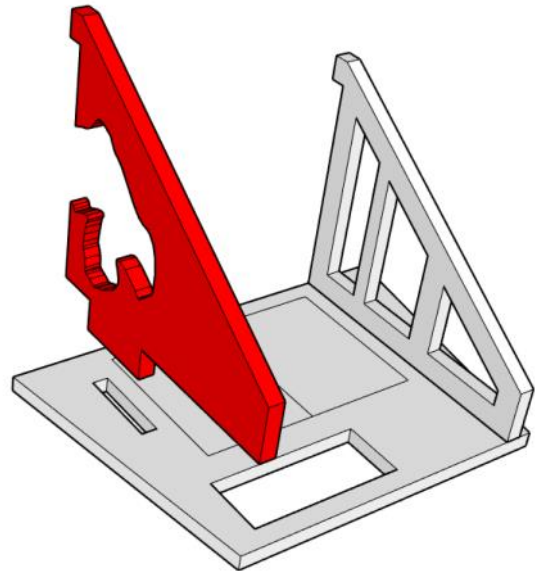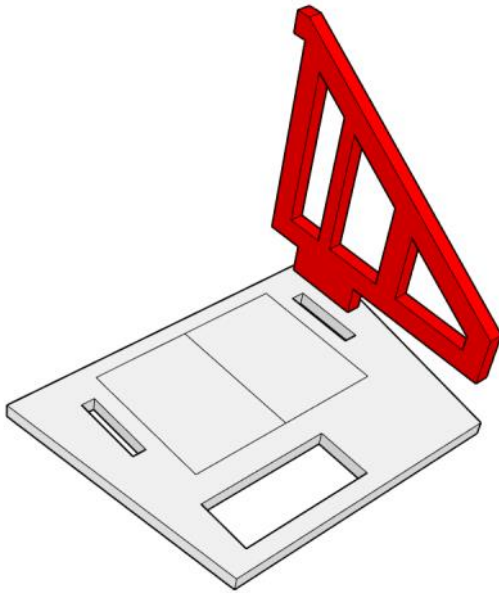




MINIATURE SCENERY

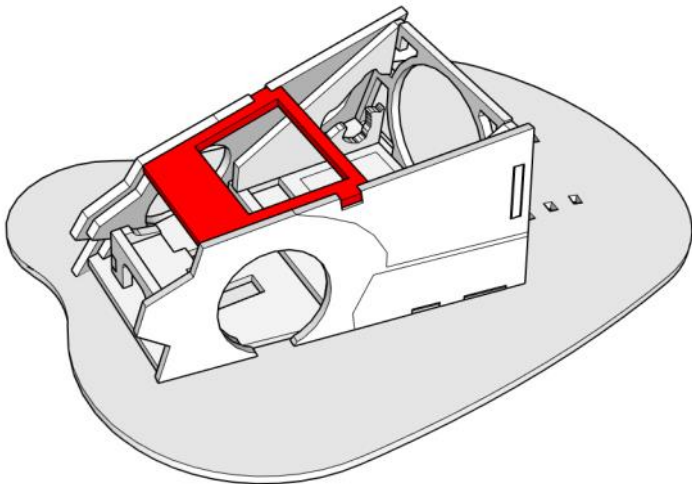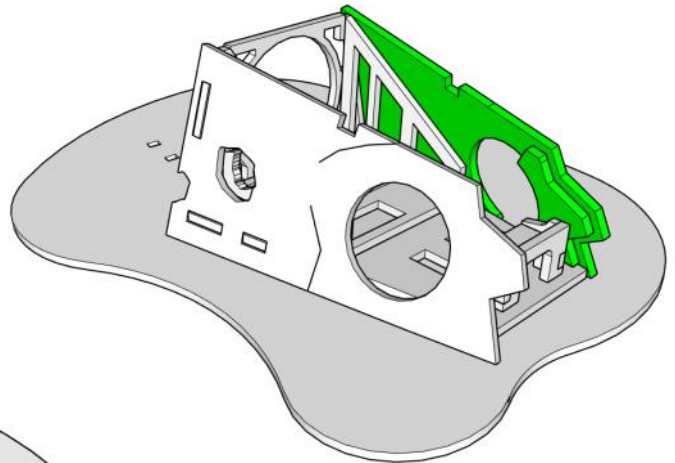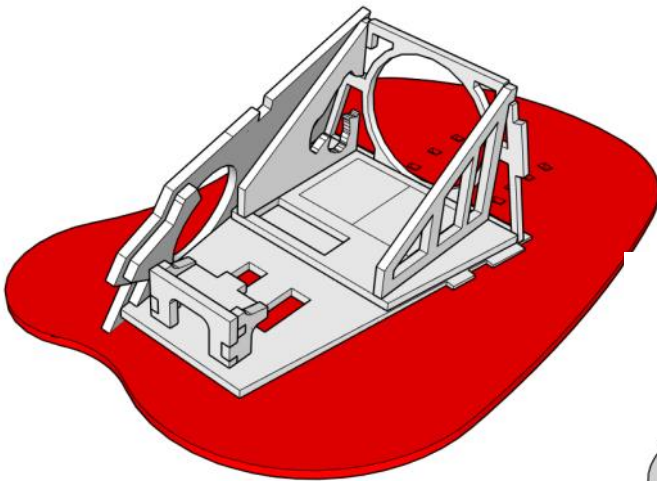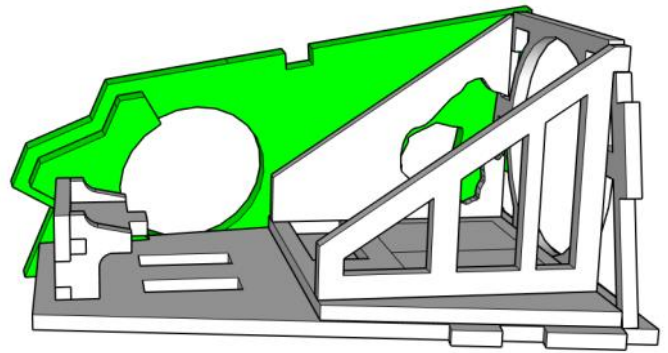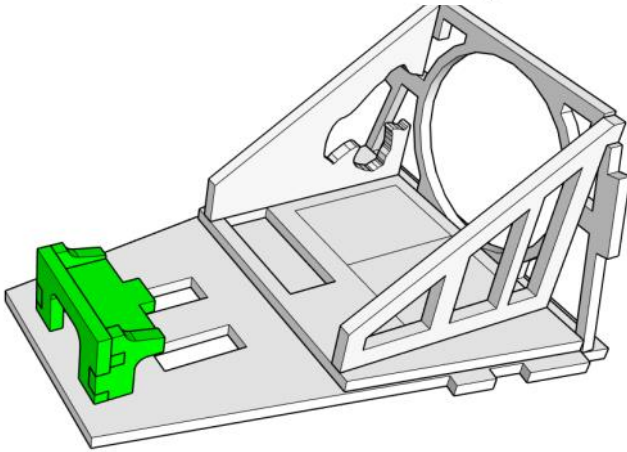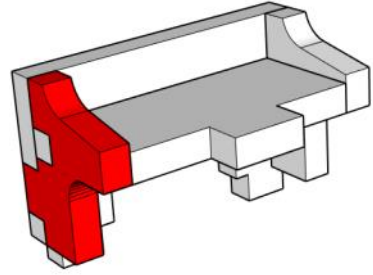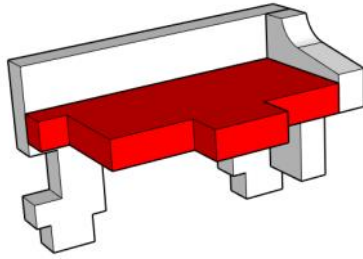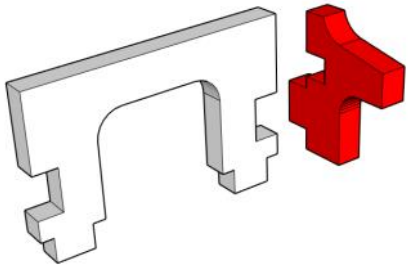

MINIATURE SCENERY

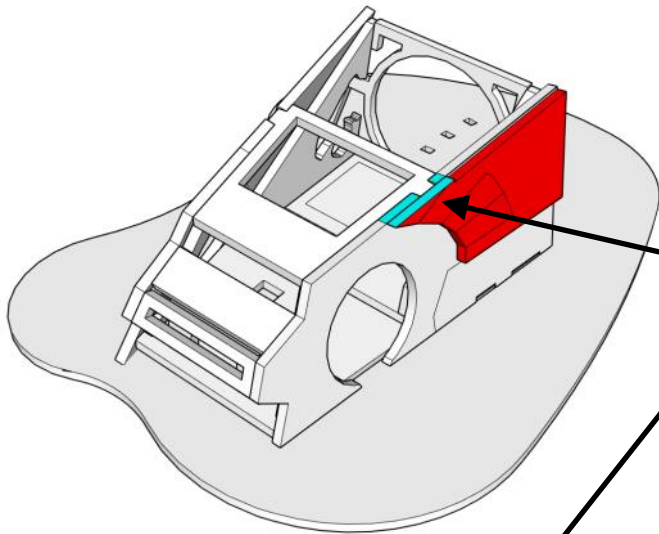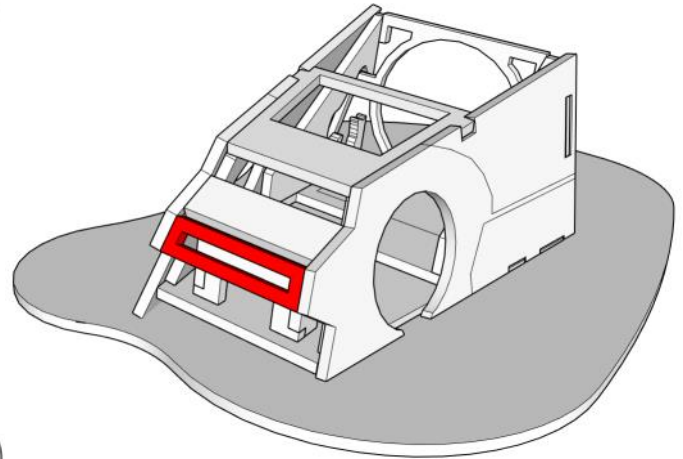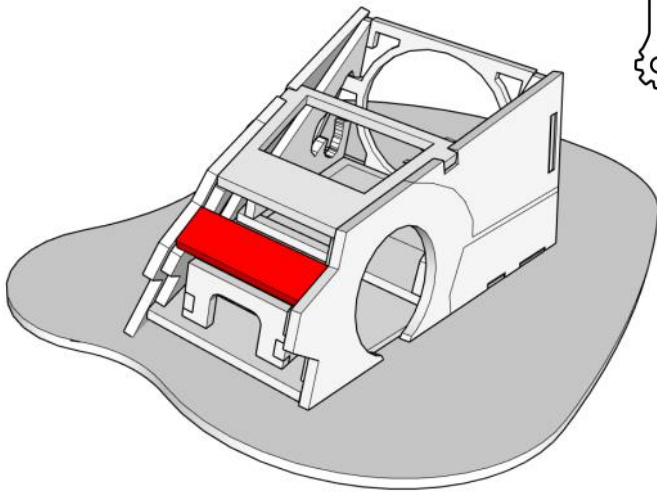

LINE UP THE BLUE PARTS TO THE EDGES

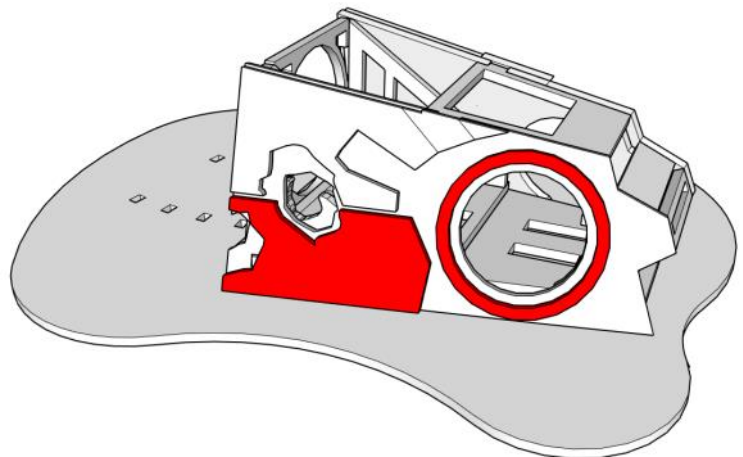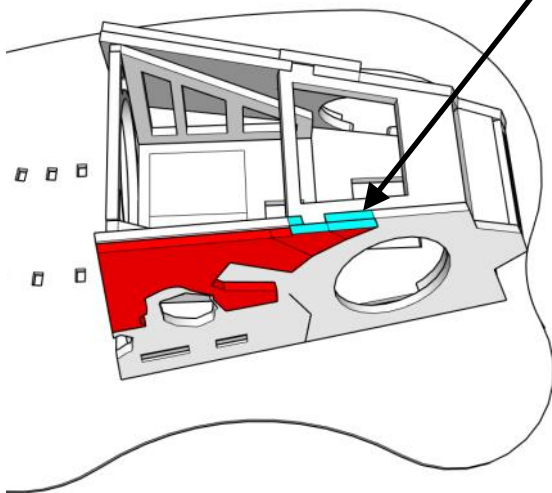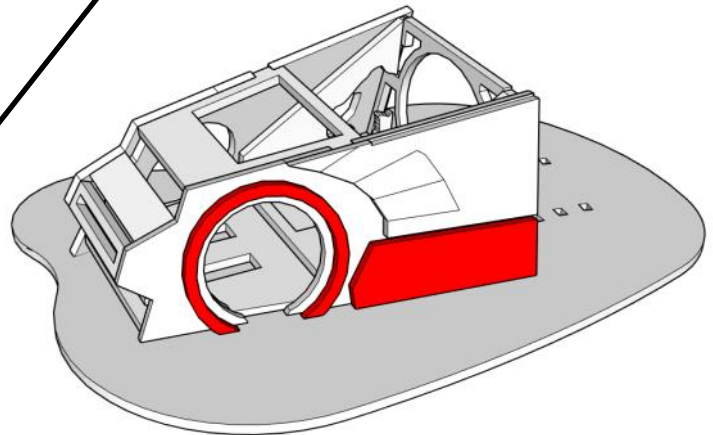

MINIATURE SCENERY

