

MINIATURE SCENERY

INSTRUCTIONS MODULATOR ARRAY

PREPARATION


You will need:





- Cutting mat or something to protect your table.
- PVA/Wood glue or superglue if you prefer.
- Small file or sand paper.
- Small blade / hobby knife





GENERAL PROCESS


- Clear plenty of table space, you will need it.
- Parts should remove easily from the board by pressing through and popping them out. It's a good idea to cut through the tiny joins first though, and some parts (particularly smaller, more detailed parts) may need more careful persuasion.
- Use file or sand paper to remove the small bur caused by the connection to the frame.
- It's a good idea to familiarise yourself with how the pieces fit together before gluing.
- Slot the parts together as shown by the pictures below, applying glue wherever there is a connection. (unless shown otherwise)
- Parts may be a very tight fit, slight trimming or sanding of parts may be needed for ease of assembly.

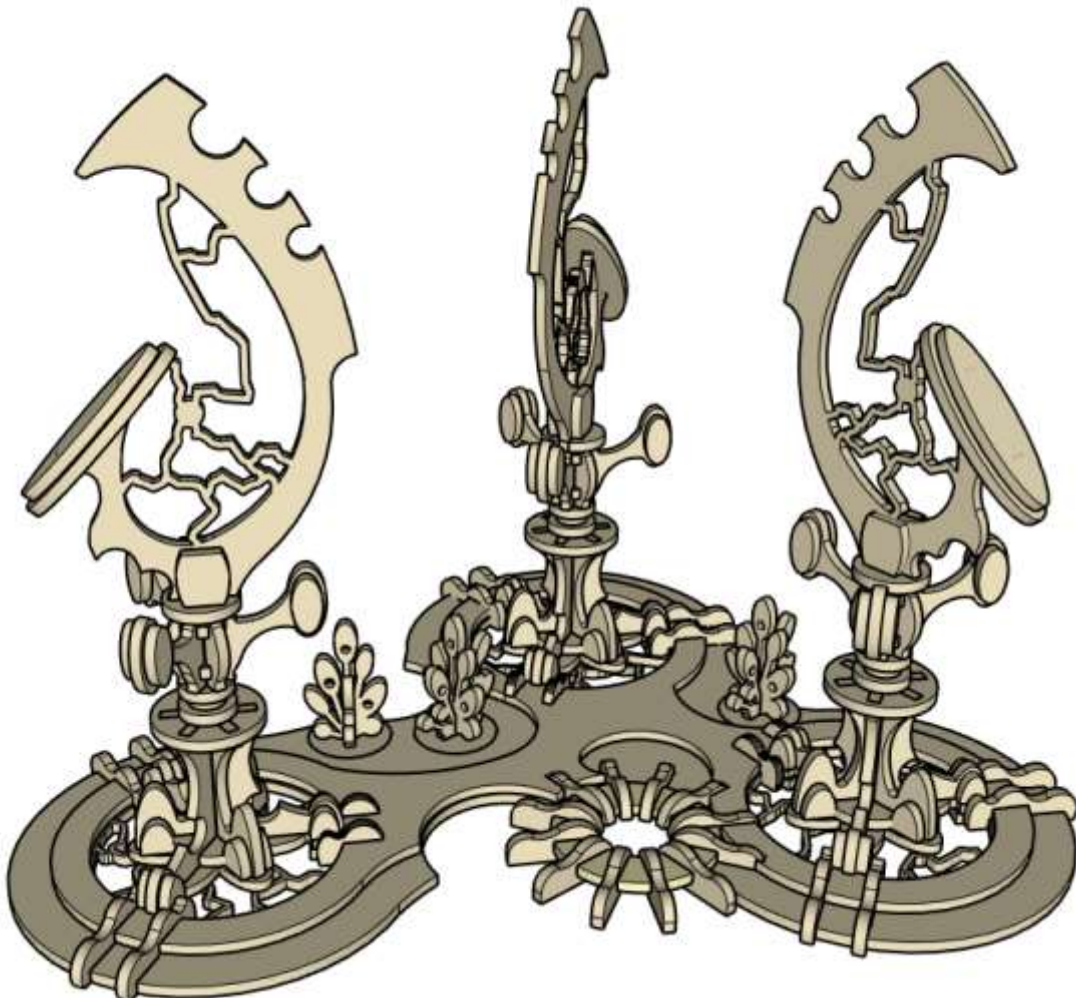

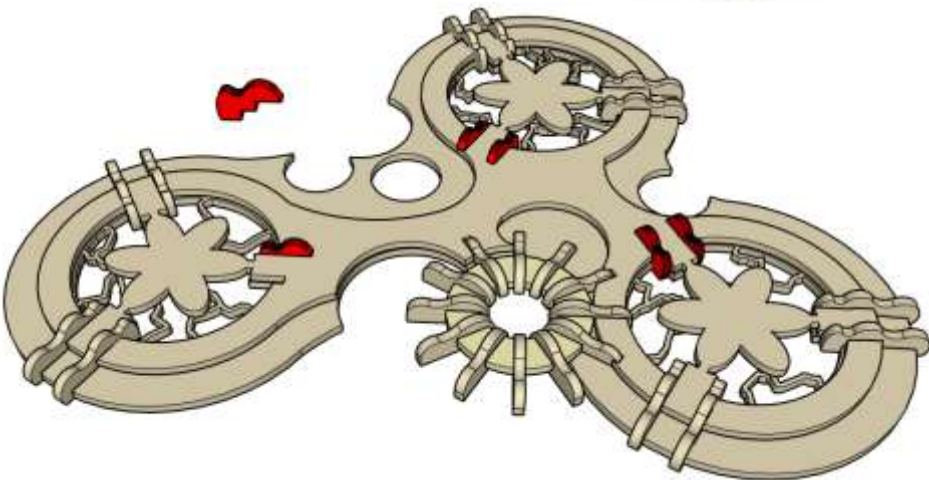
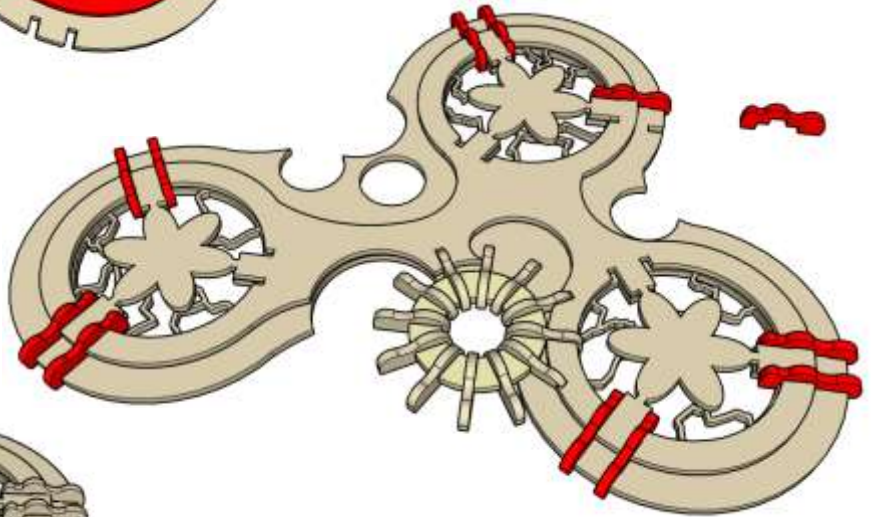
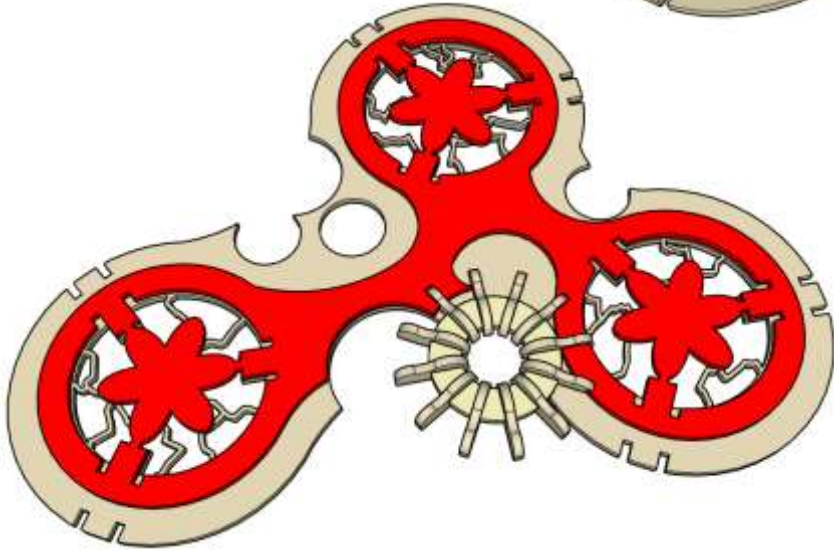
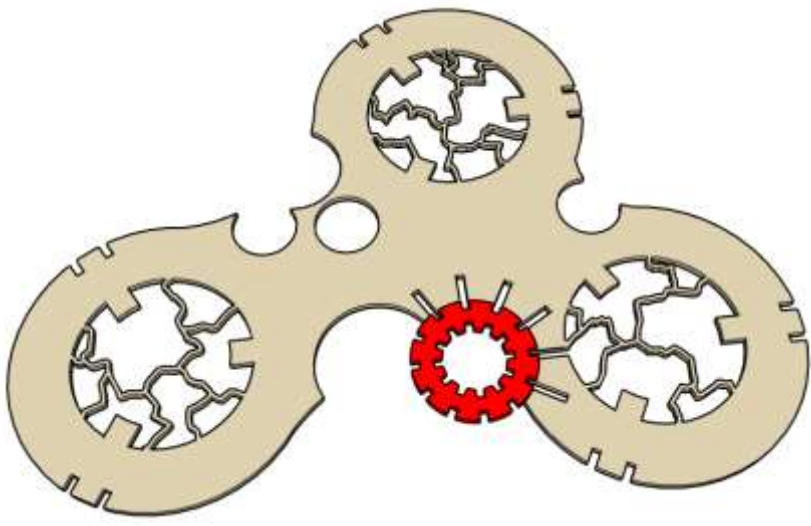


MDF plants can be swapped for plastic versions purchased from hardware stores, hobby shops or aquarium supply stores.

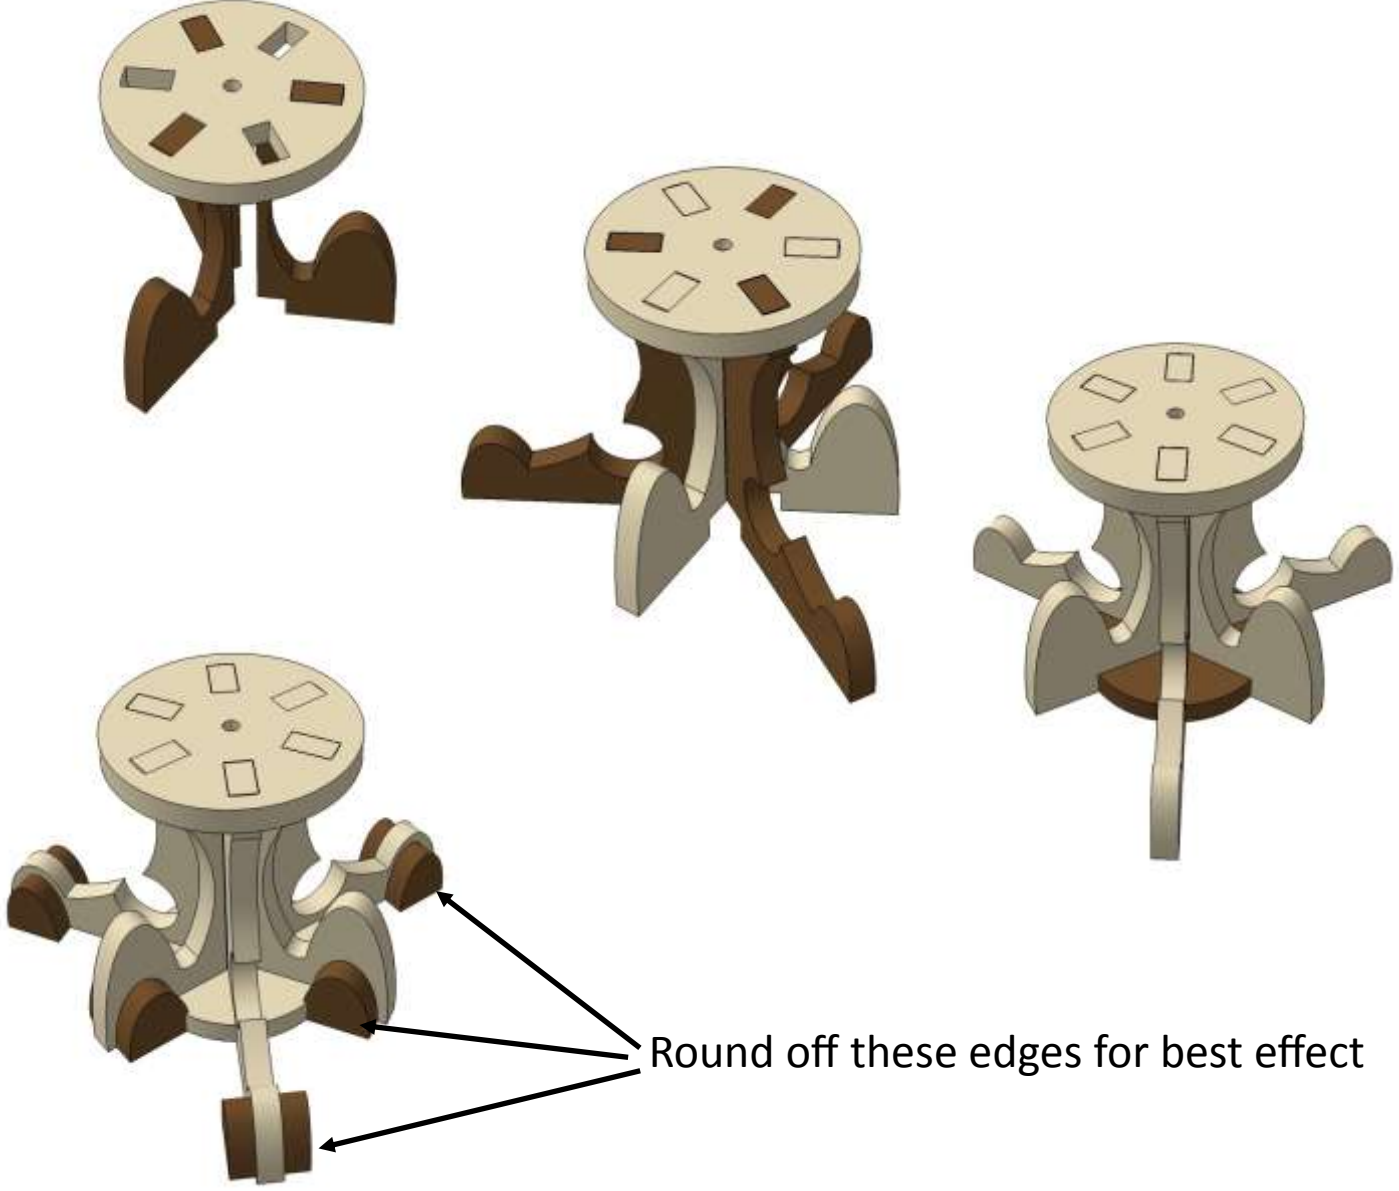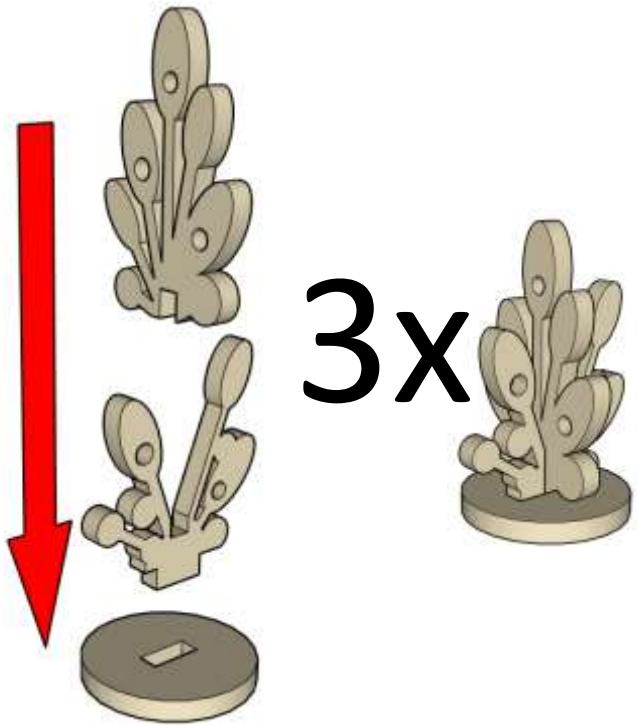

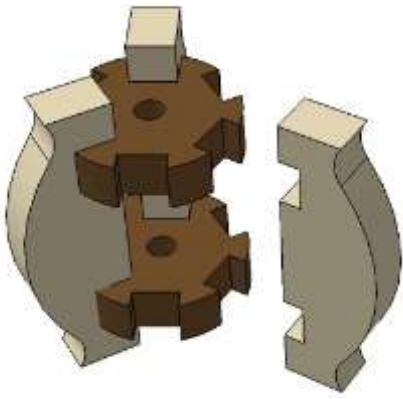


A toothpick can be used through the central holes to align everything

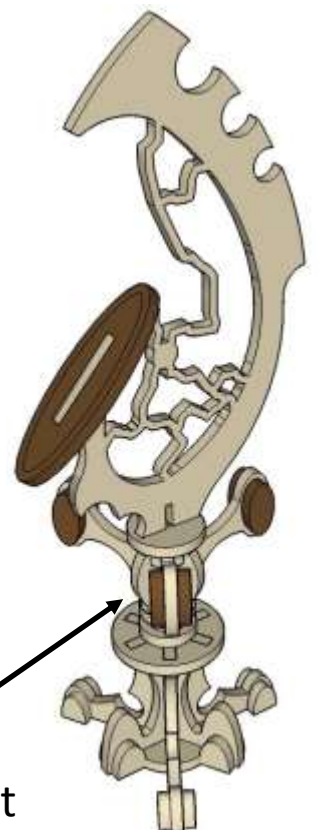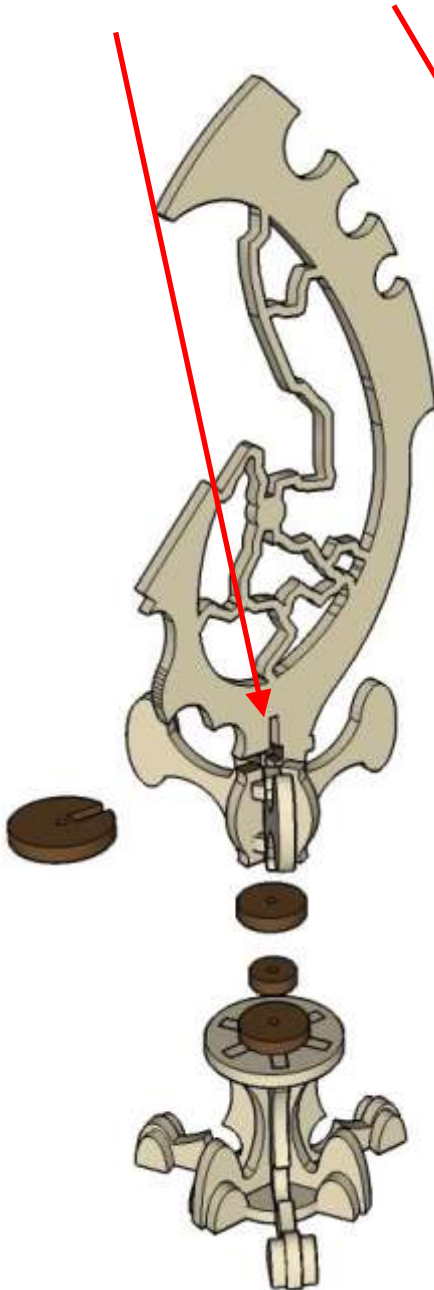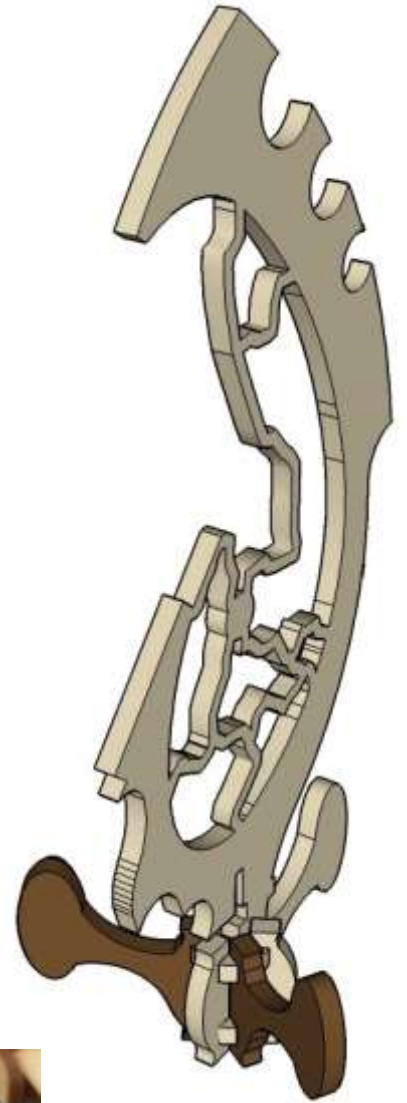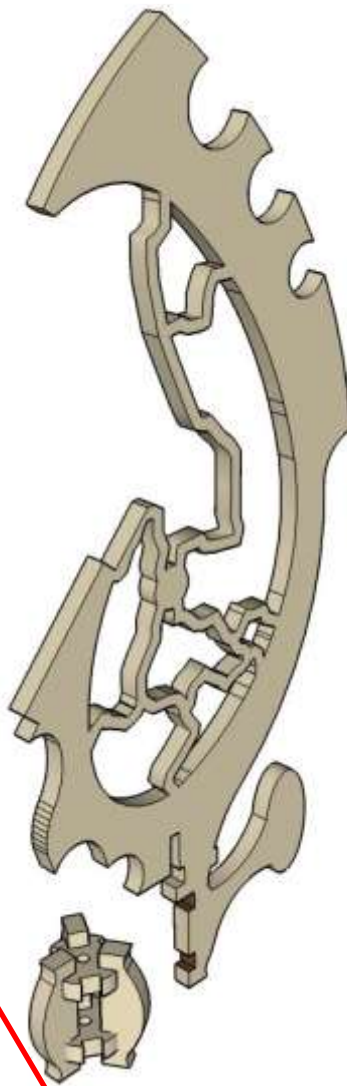

Round off these edges for best effect

Make 3x

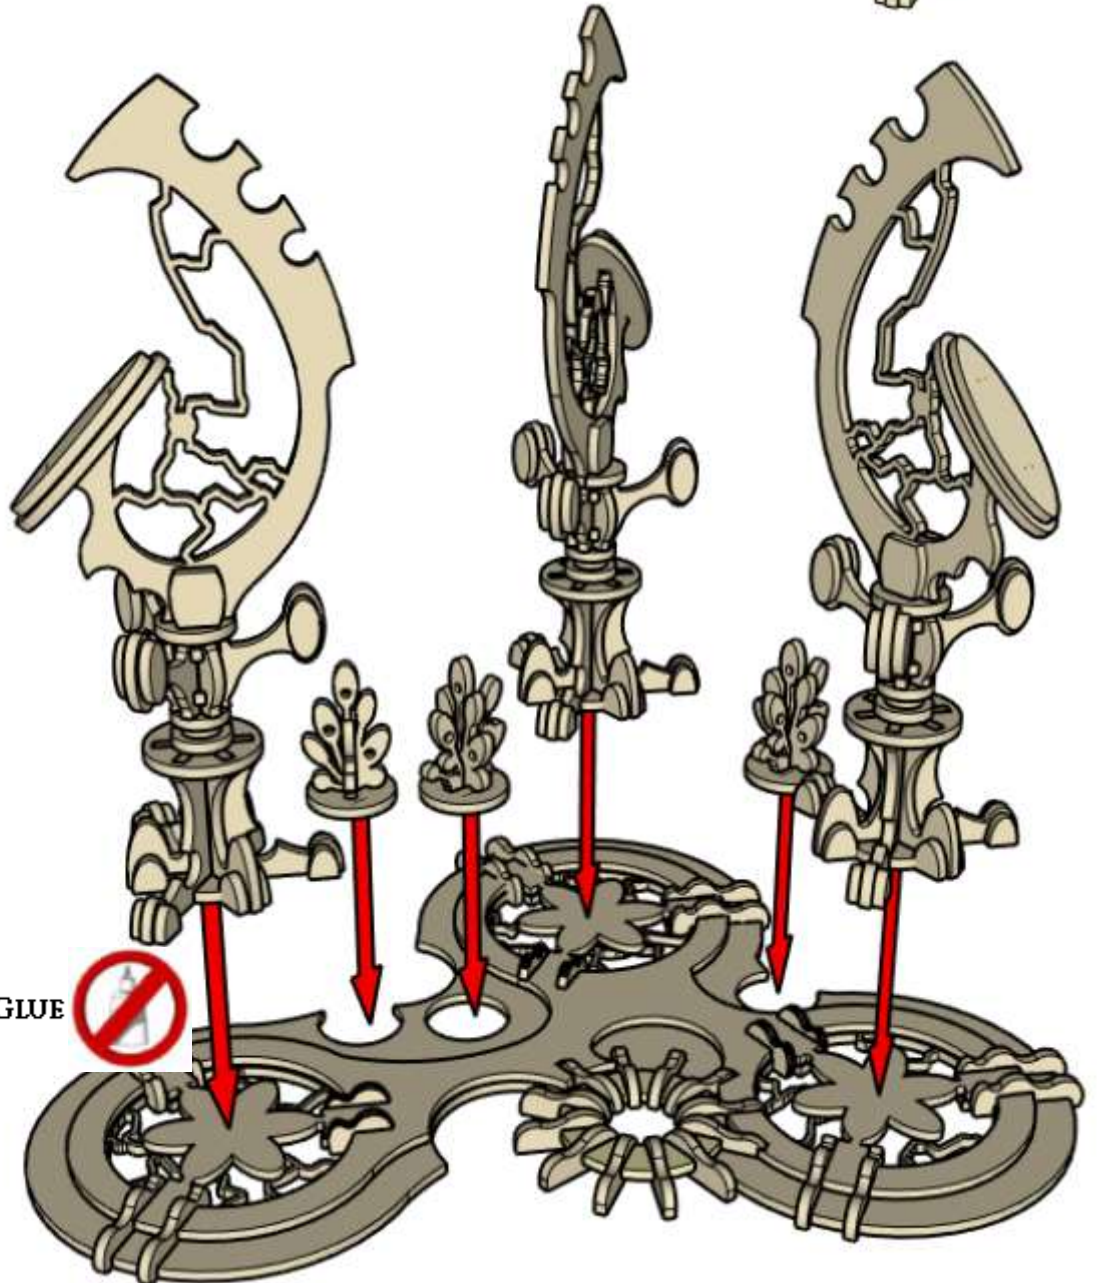

DO NOT GLUE

