

MINIATURE SCENERY

INSTRUCTIONS

ELVEN PATHWAY

PREPARATION


You will need:







- Cutting mat or something to protect your table.
- PVA/Wood glue or superglue if you prefer.
- Small file or sand paper.
- Small blade / hobby knife



GENERAL PROCESS






- Clear plenty of table space, you will need it.
- Parts should remove easily from the board by pressing through and popping them out. It's a good idea to cut through the tiny joins first though, and some parts (particularly smaller, more detailed parts) may need more careful persuasion.
- Use file or sand paper to remove the small bur caused by the connection to the frame.
- It's a good idea to familiarise yourself with how the pieces fit together before gluing.
- Slot the parts together as shown by the pictures below, applying glue wherever there is a connection. (unless shown otherwise)
- Parts may be a very tight fit, slight trimming or sanding of parts may be needed for ease of assembly.




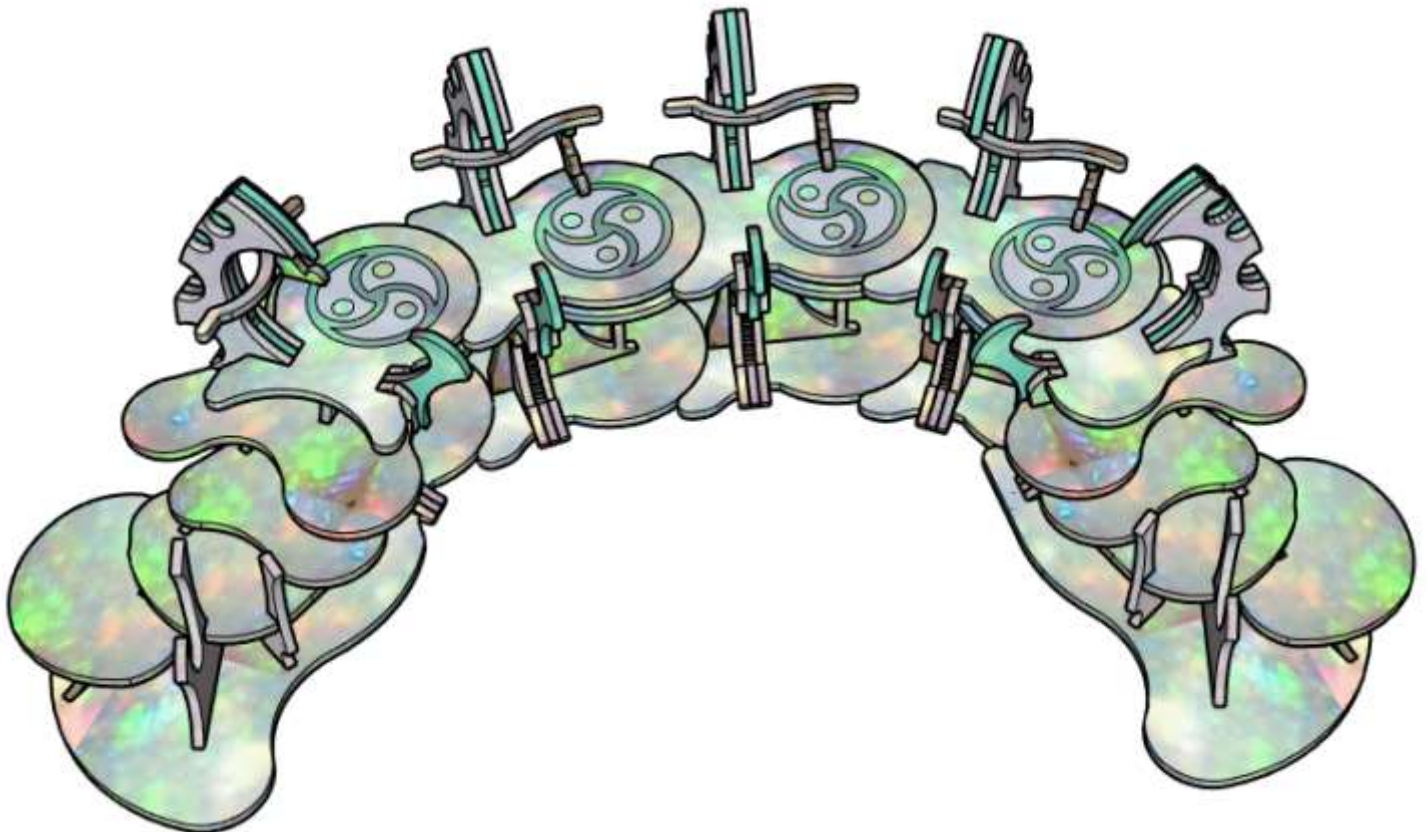



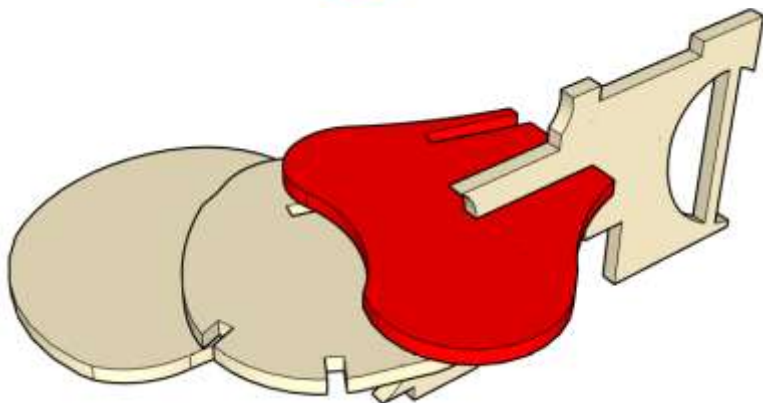
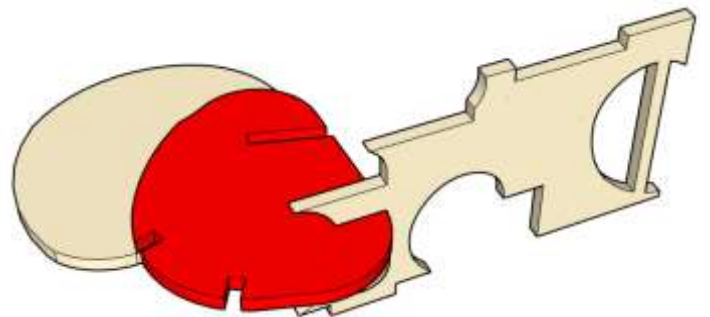
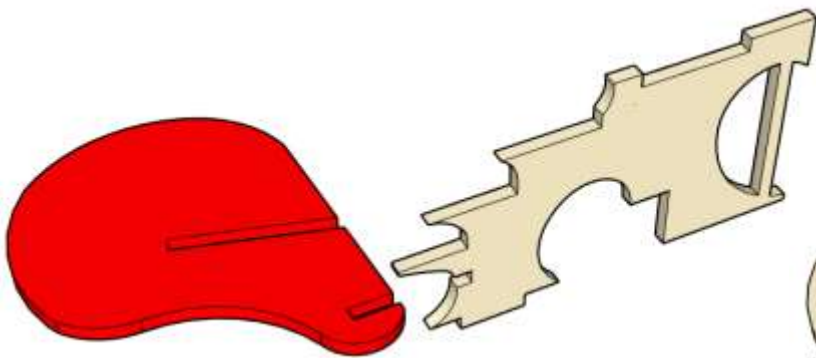
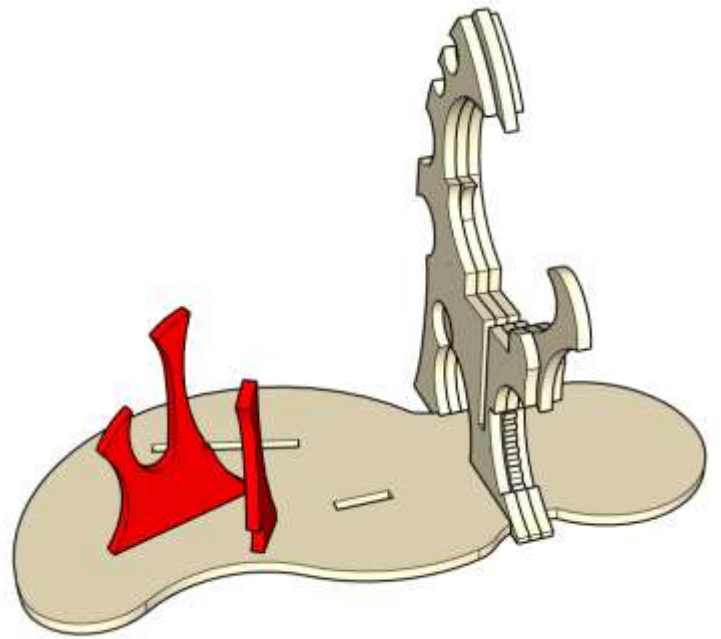
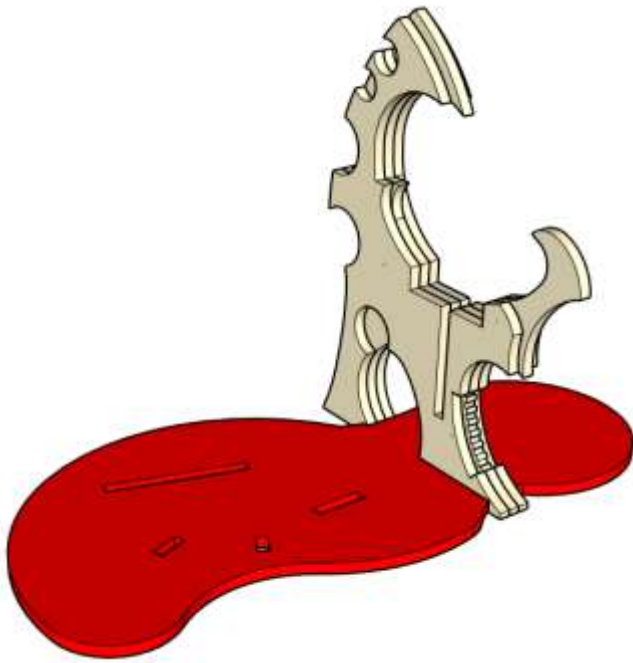
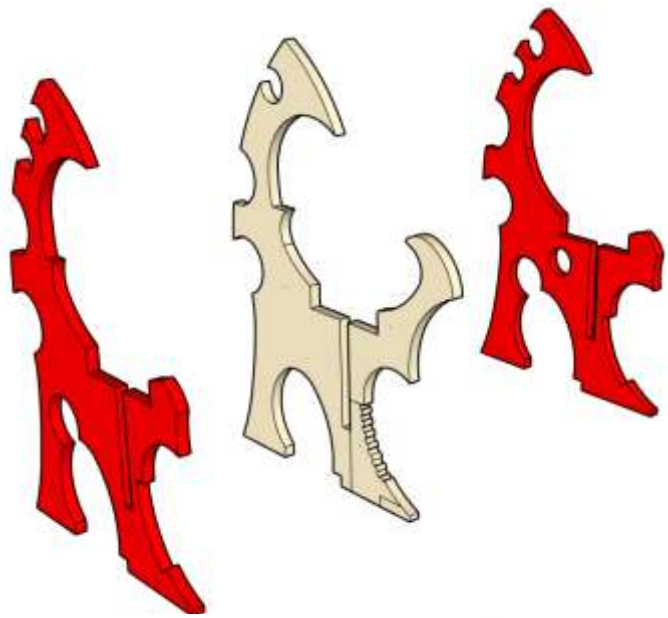


This part is a bit awkward.







We suggest turning the stairs upside down

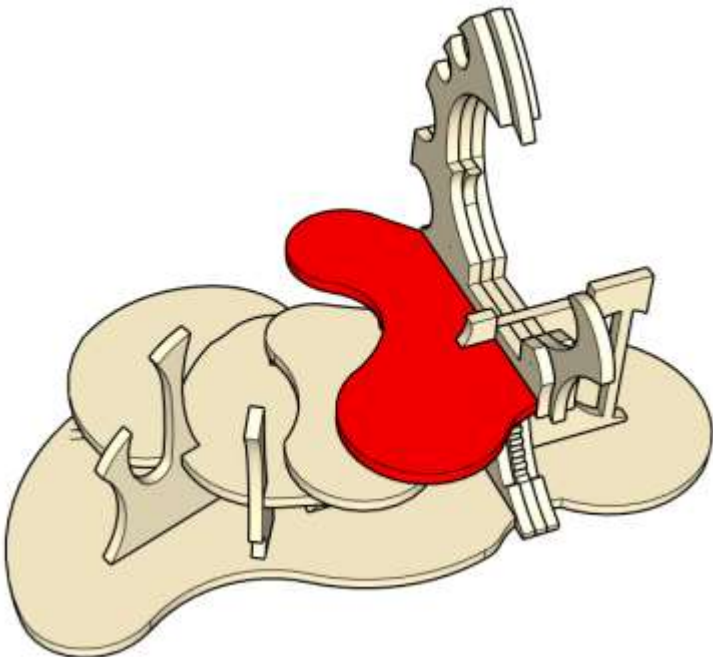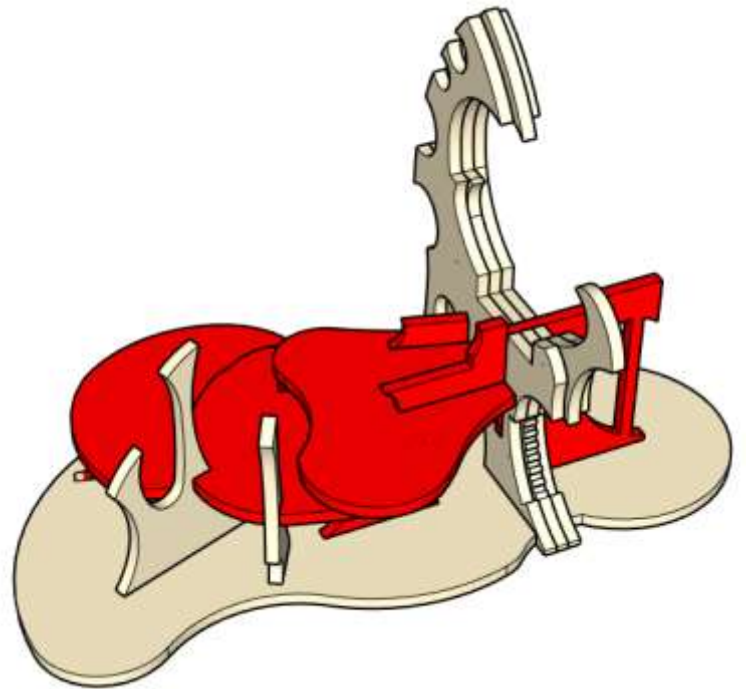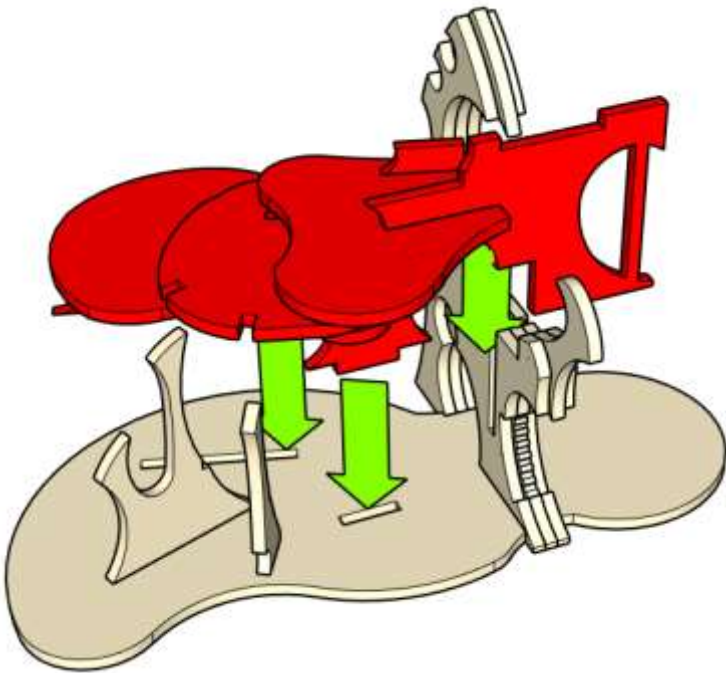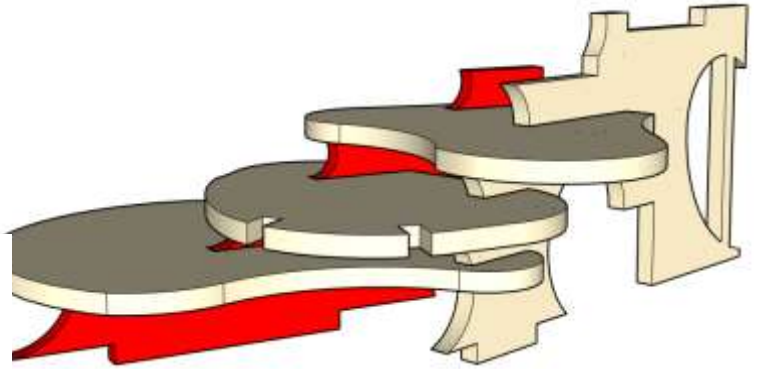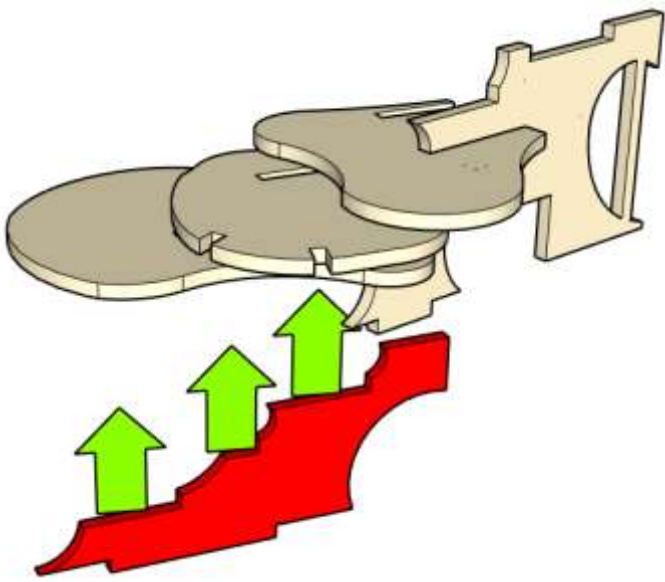

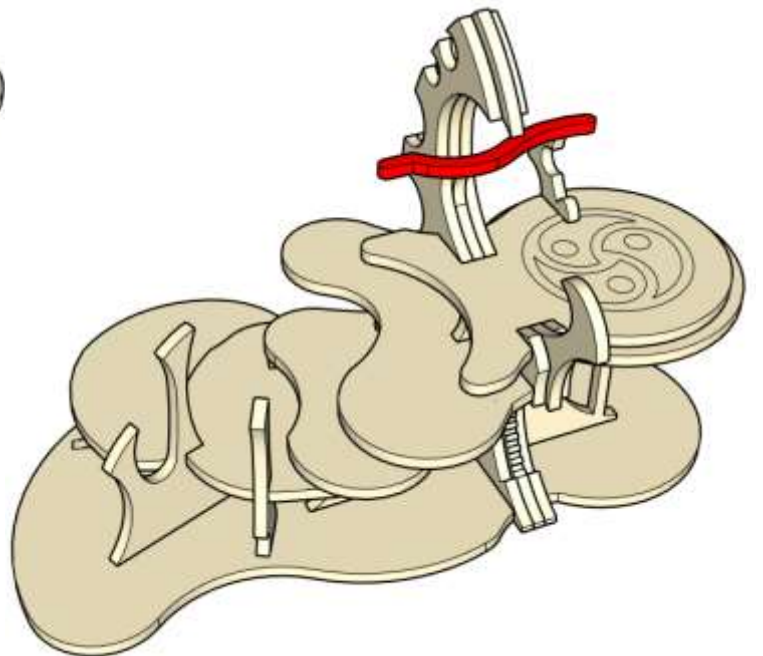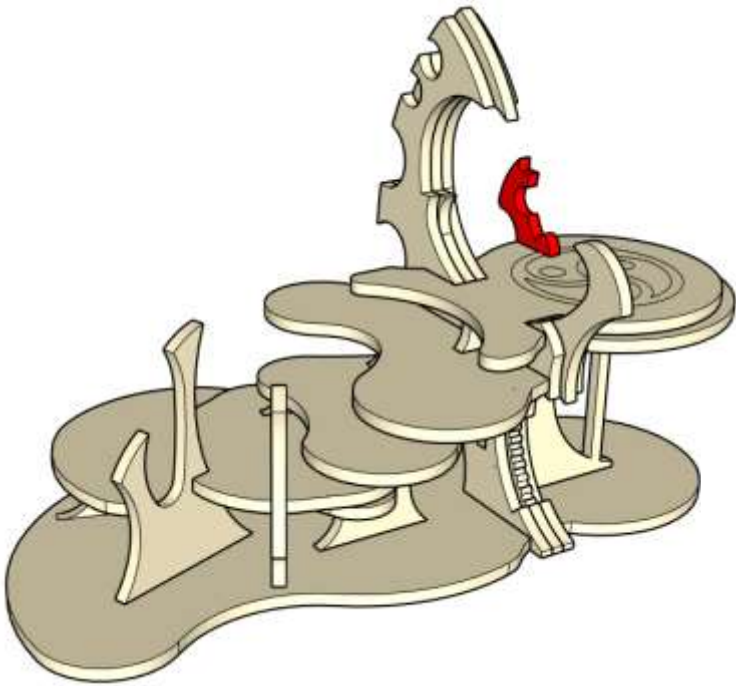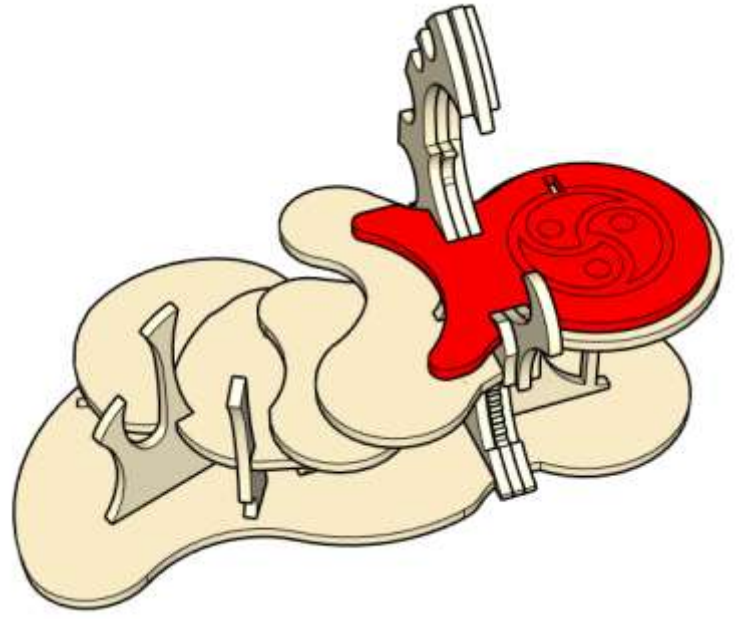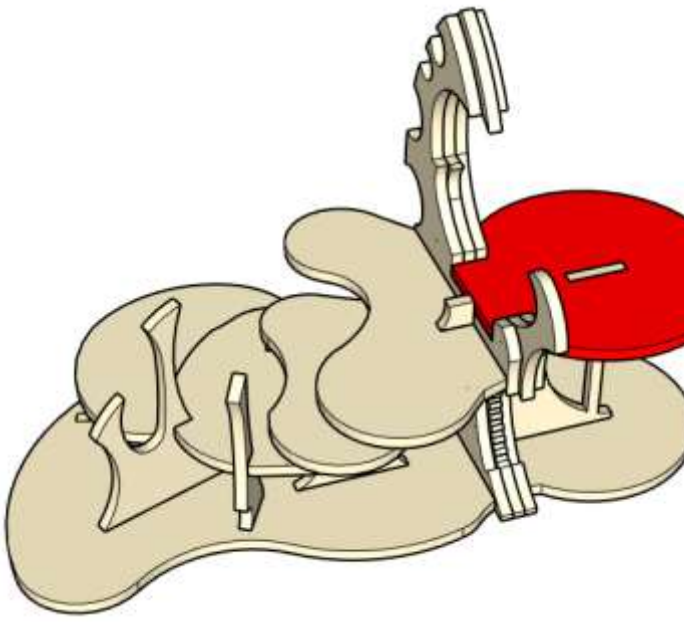

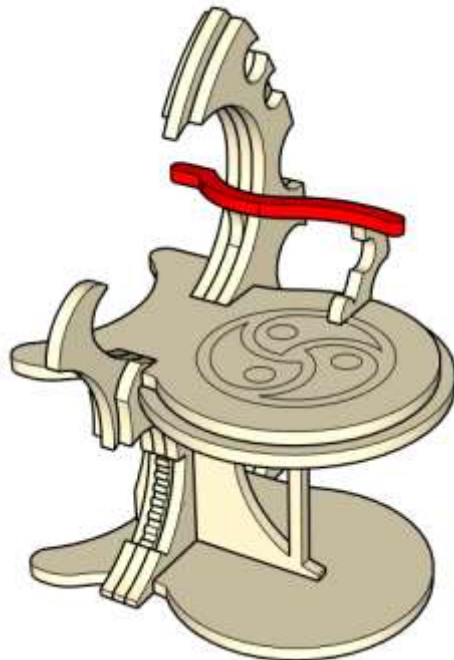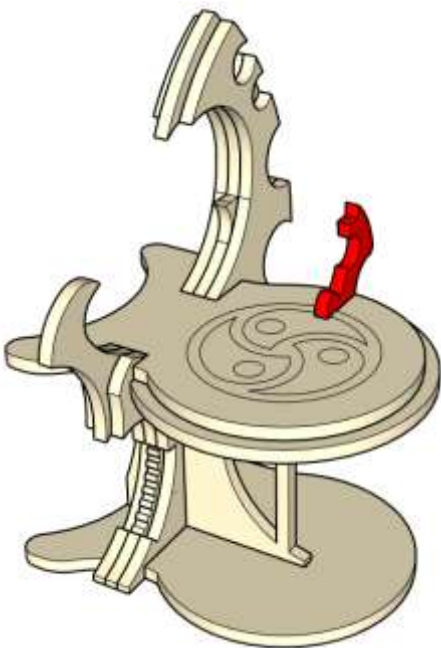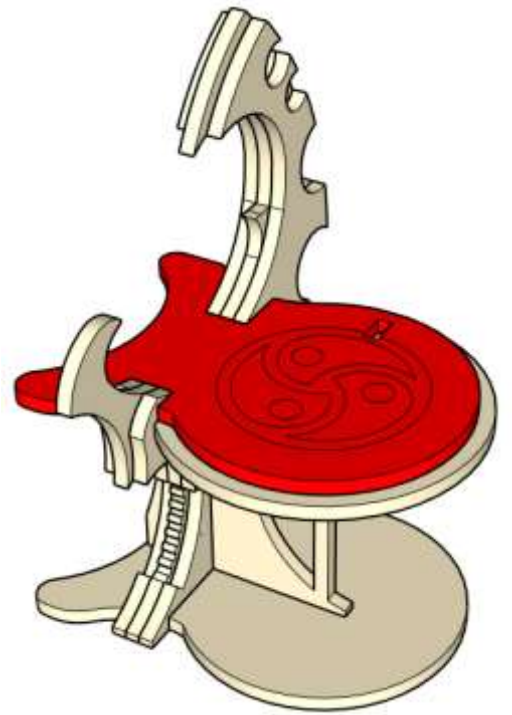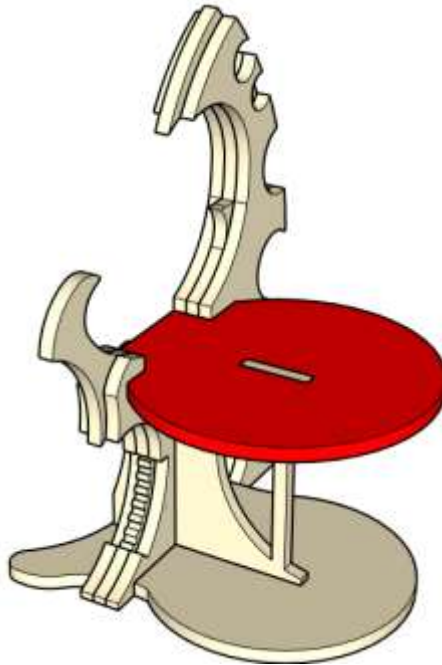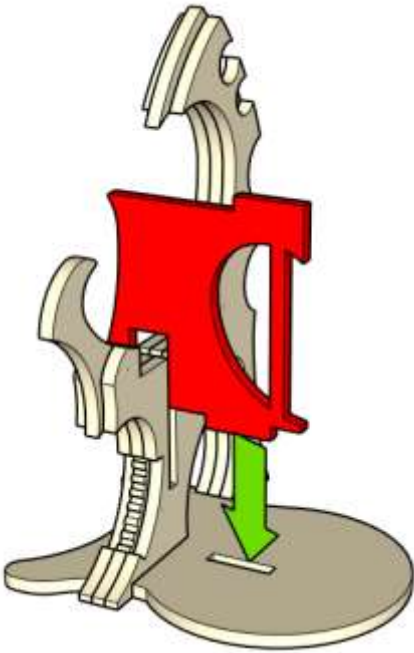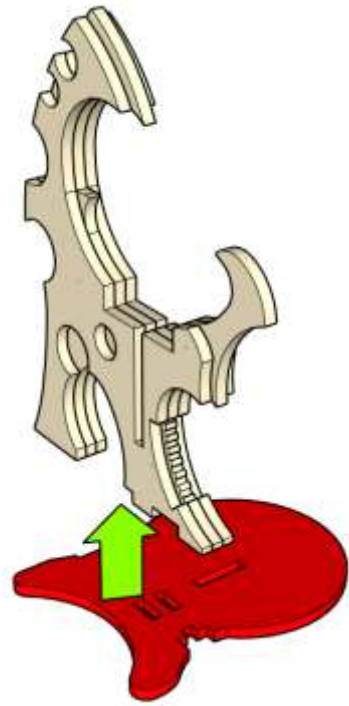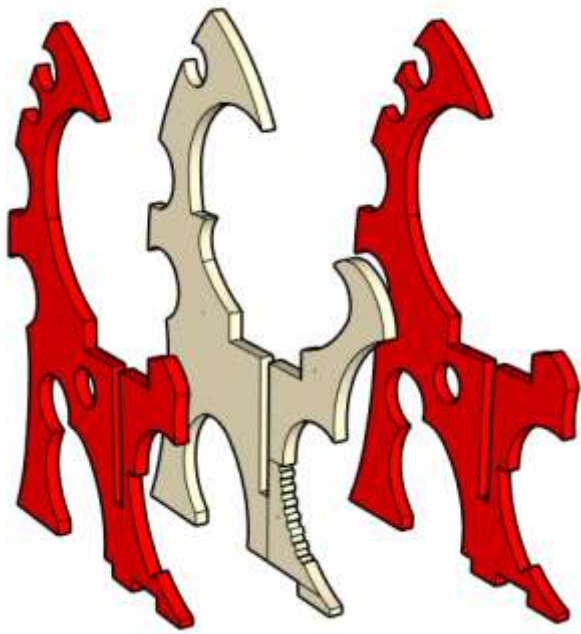






x3

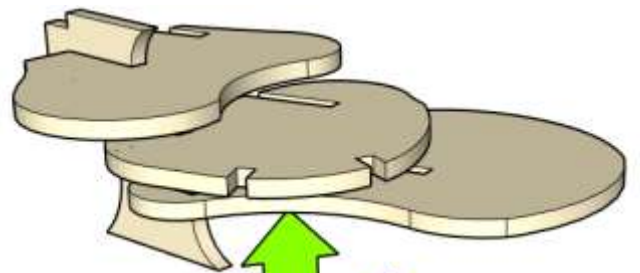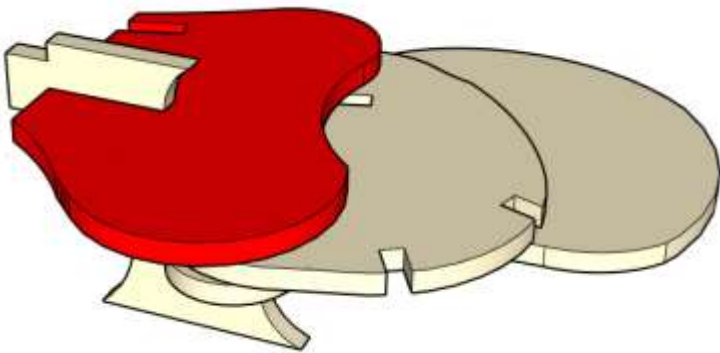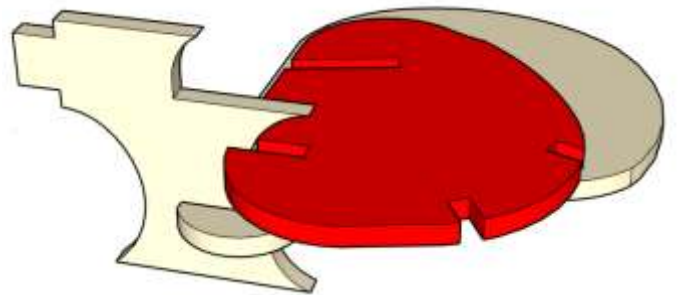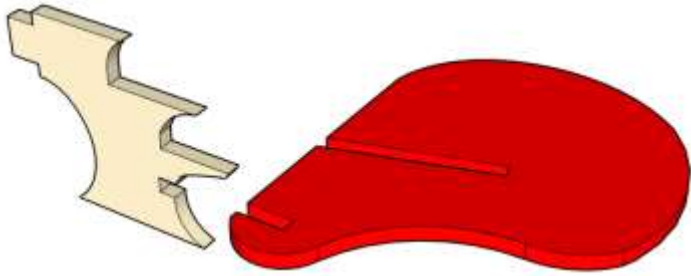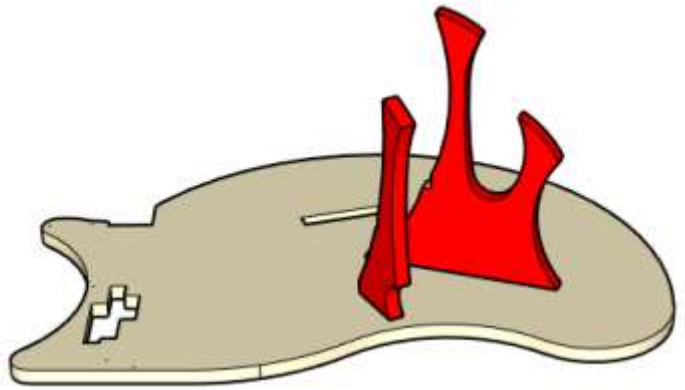
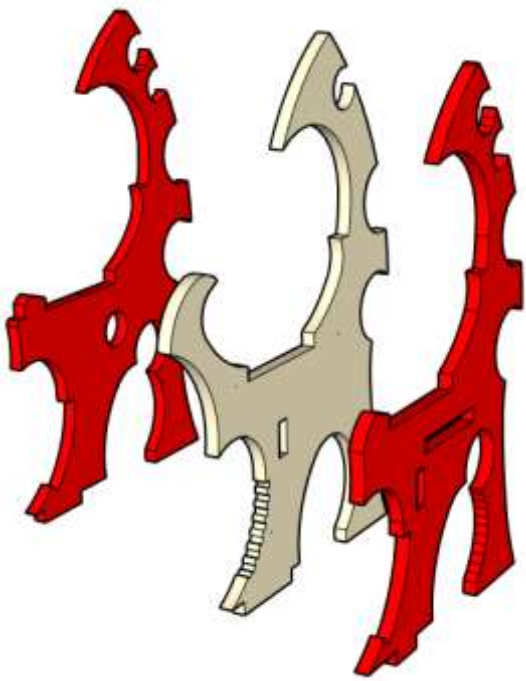


This part is a bit awkward.

We suggest turning the stairs
upside down

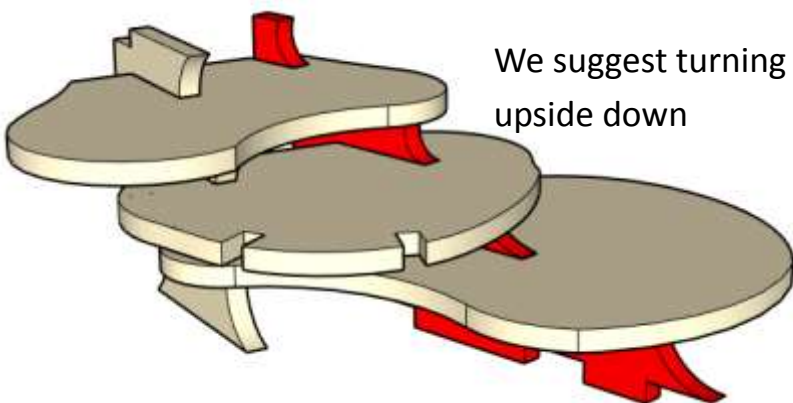

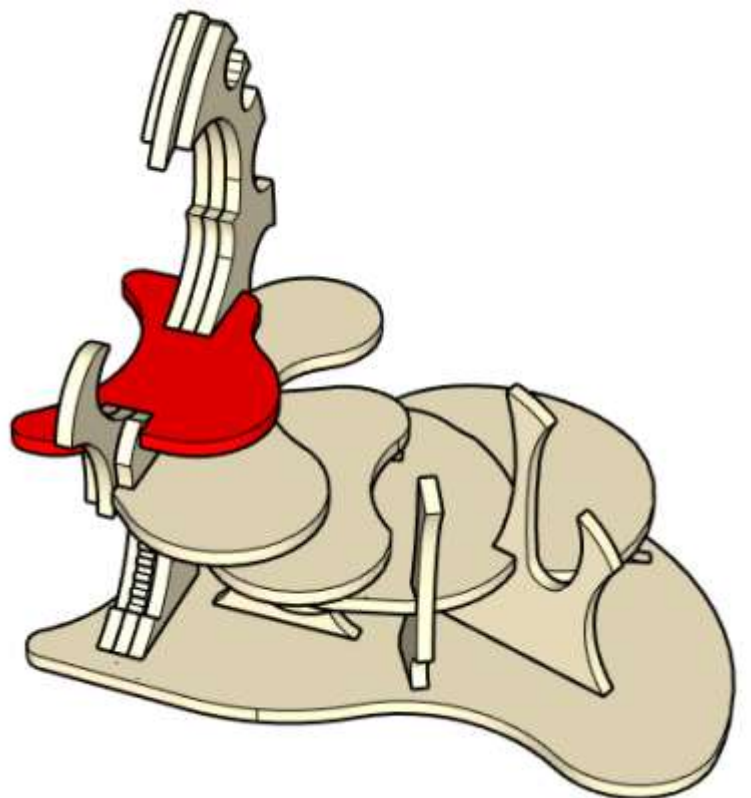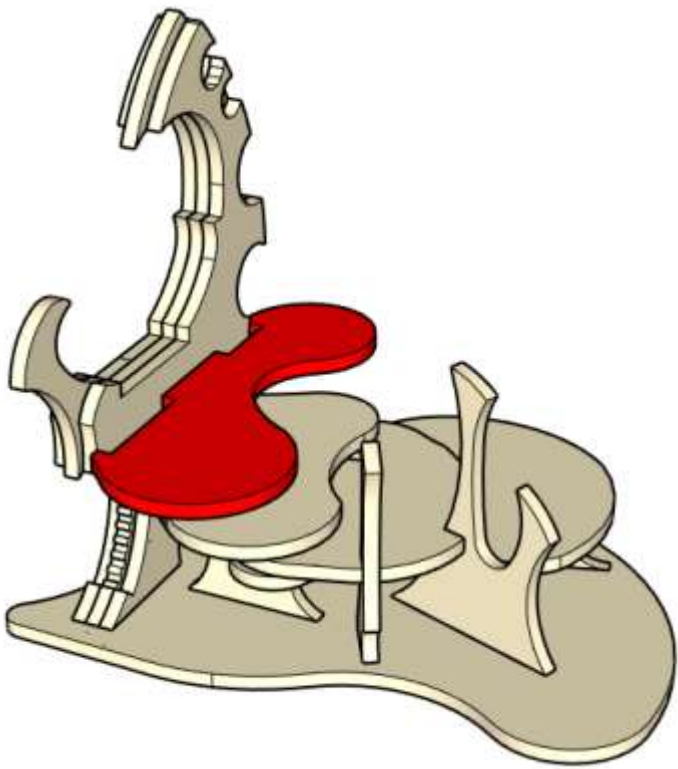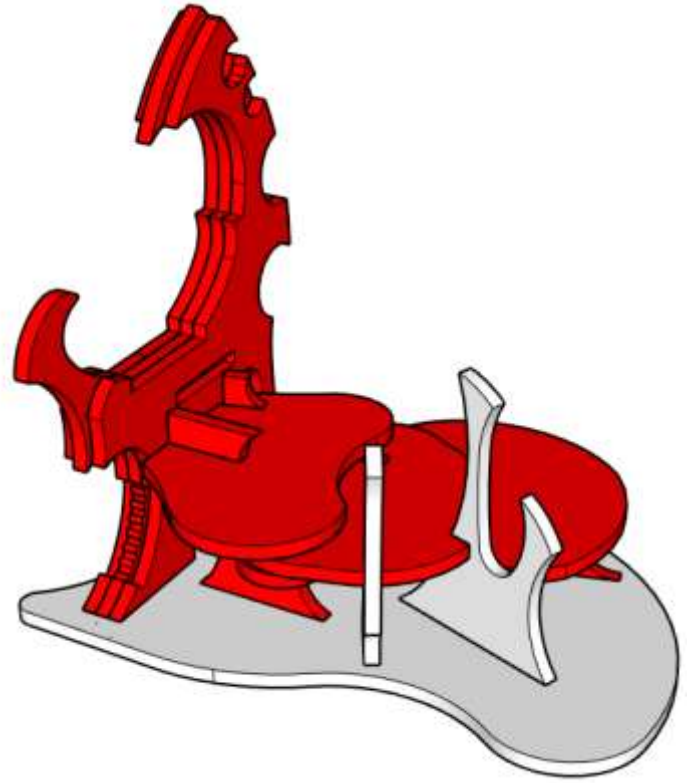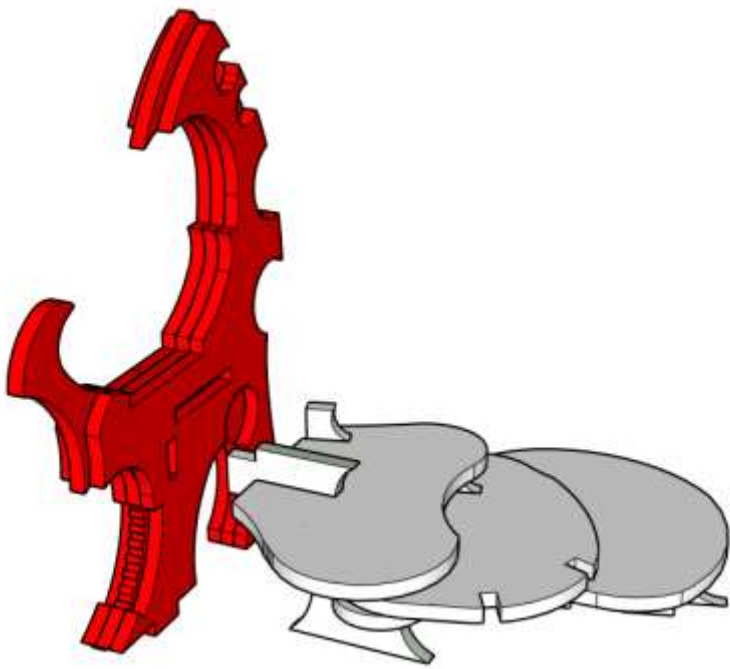

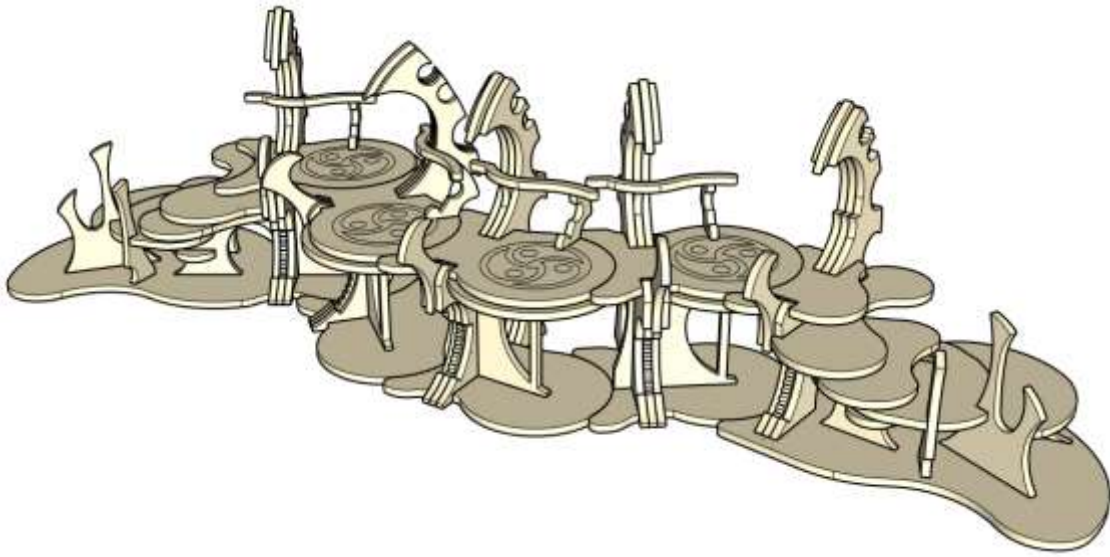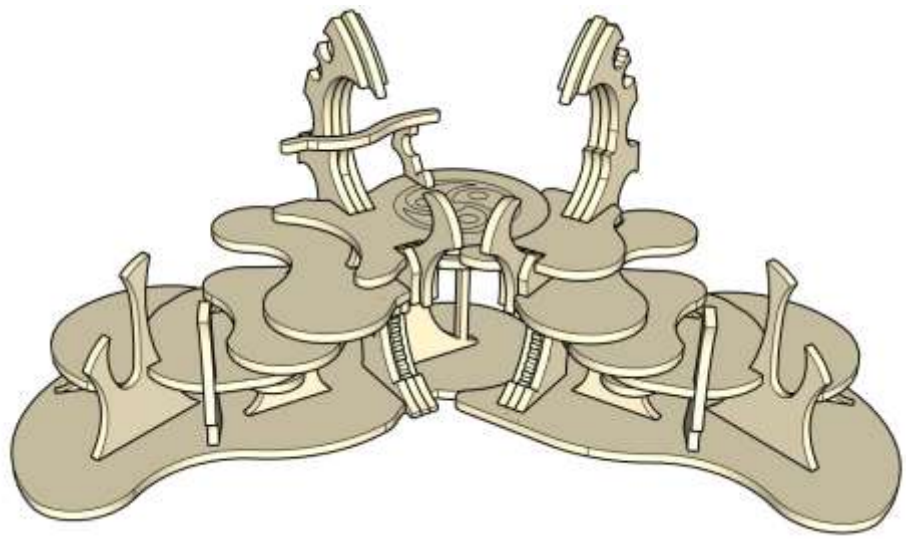

Setups made from two kits

