

# MINIATURE SCENERY

## INSTRUCTIONS FORSAKEN RUINS DOORWAY

### PREPARATION

You will need:






- Cutting mat or something to protect your table.
- PVA/Wood glue or superglue if you prefer.
- Small file or sand paper.
- Small blade / hobby knife











### GENERAL PROCESS





- Clear plenty of table space, you will need it.
- Parts should remove easily from the board by pressing through and popping them out. It's a good idea to cut through the tiny joins first though, and some parts (particularly smaller, more detailed parts) may need more careful persuasion.
- Use file or sand paper to remove the small bur caused by the connection to the frame.
- It's a good idea to familiarise yourself with how the pieces fit together before gluing.
- Slot the parts together as shown by the pictures below, applying glue wherever there is a connection. (unless shown otherwise)
- Parts may be a very tight fit, slight trimming or sanding of parts may be needed for ease of assembly.



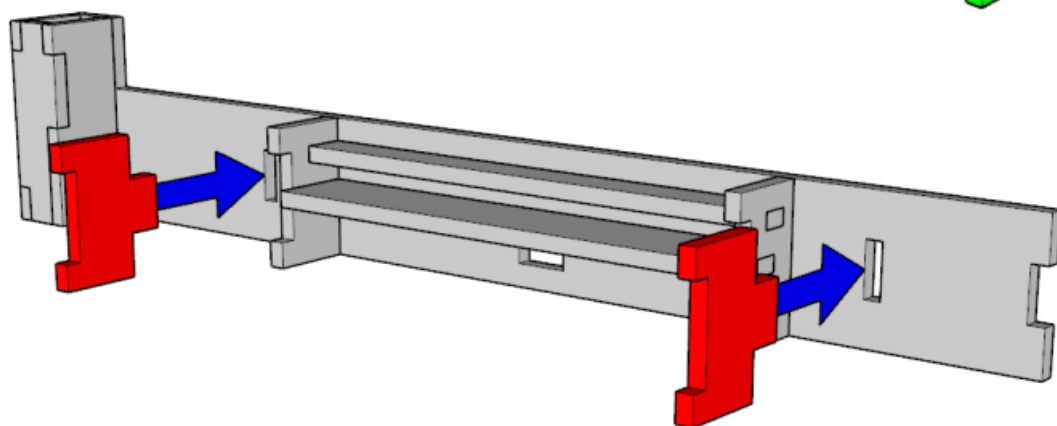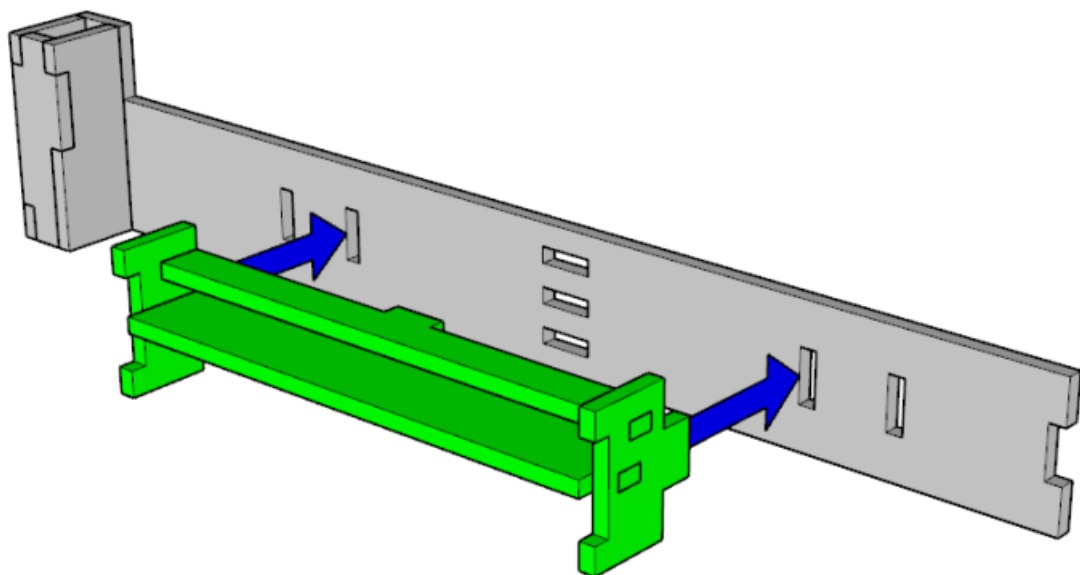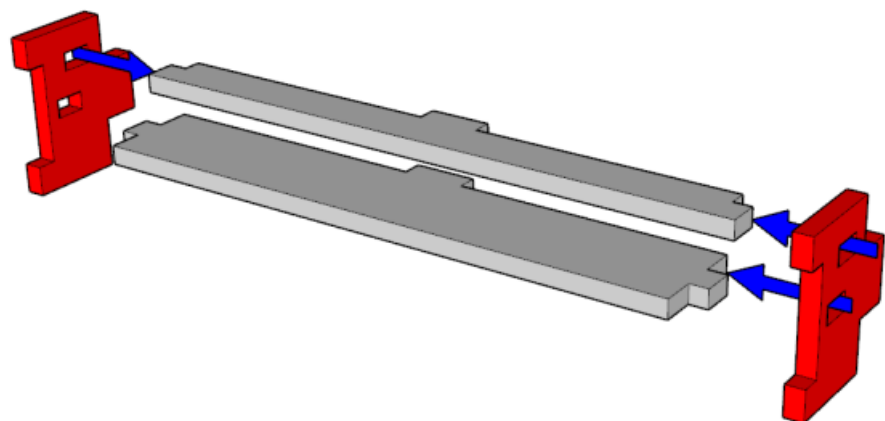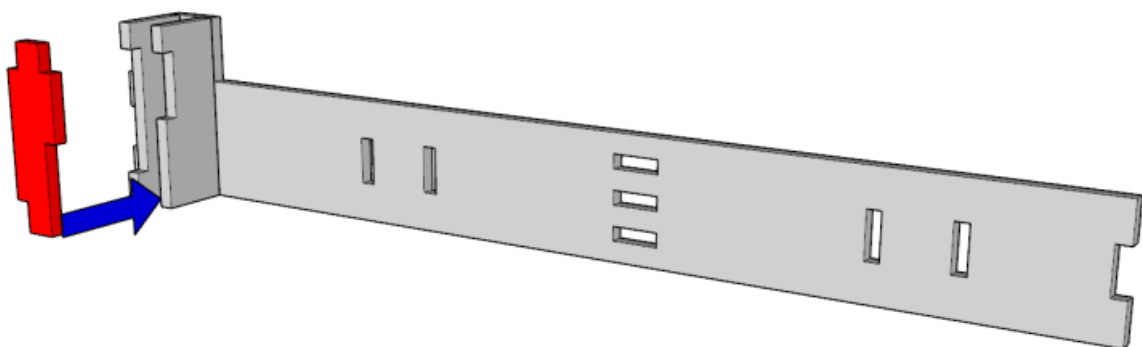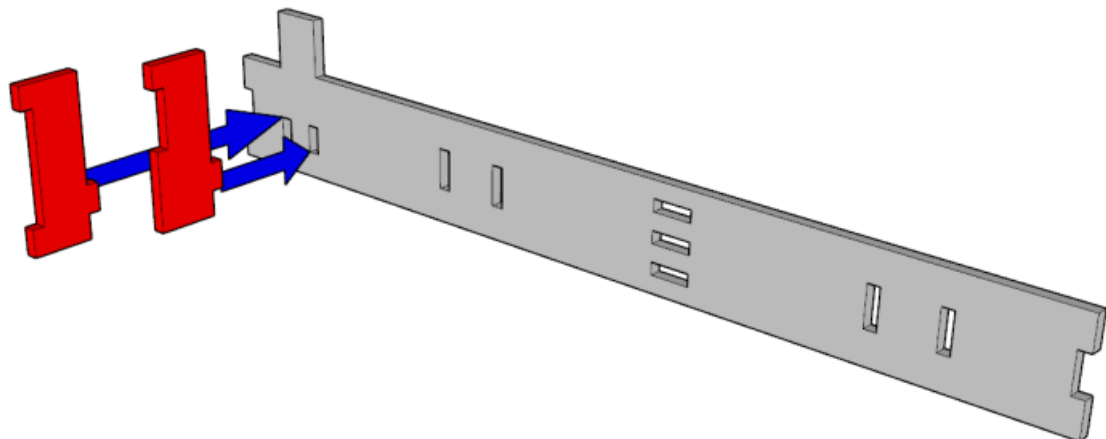




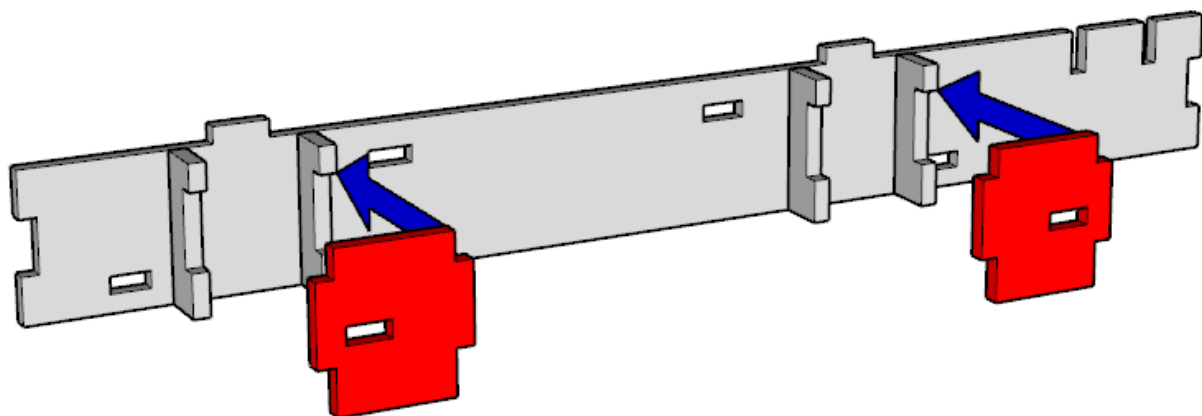
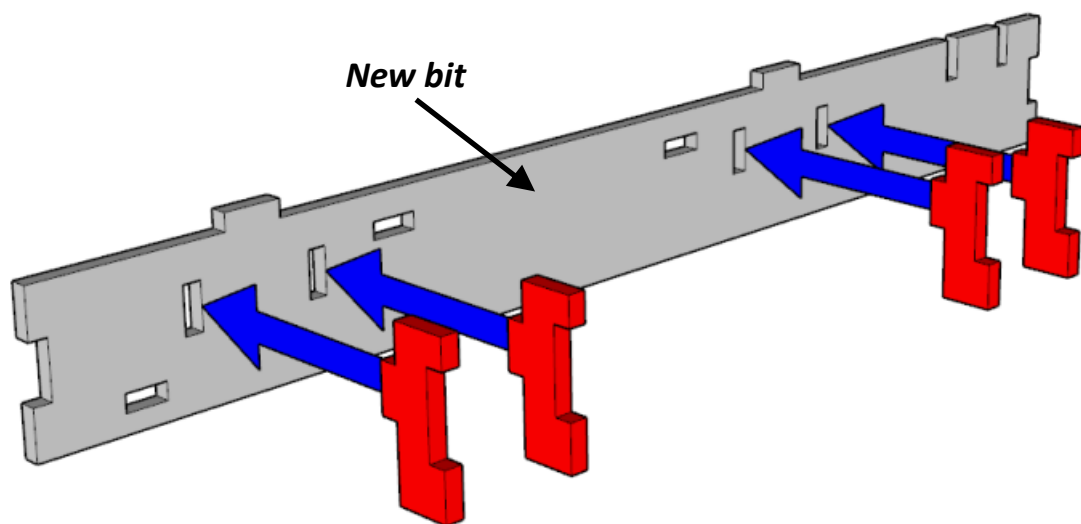
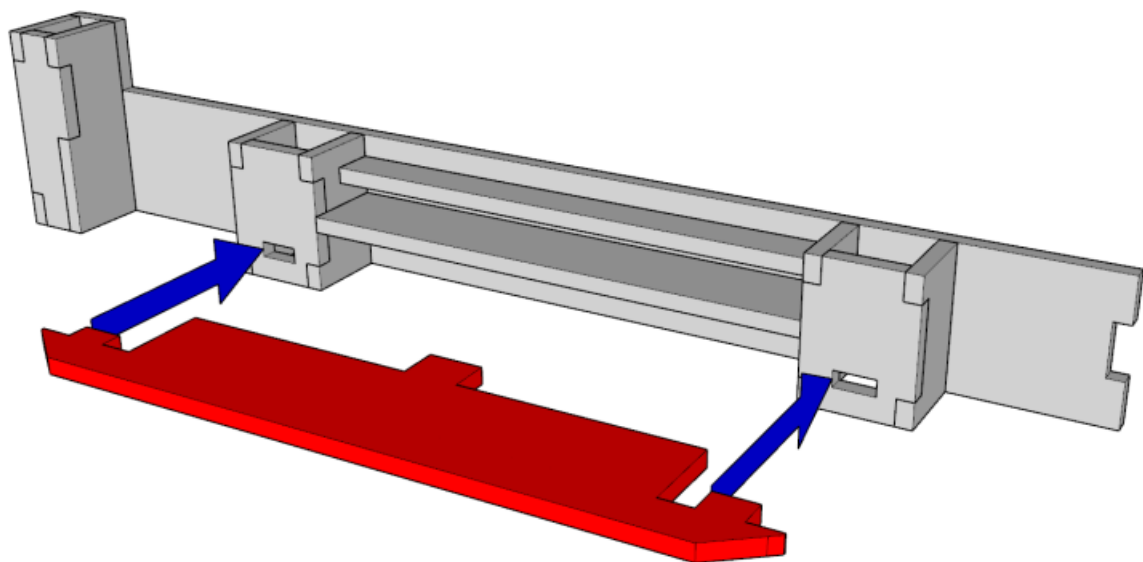
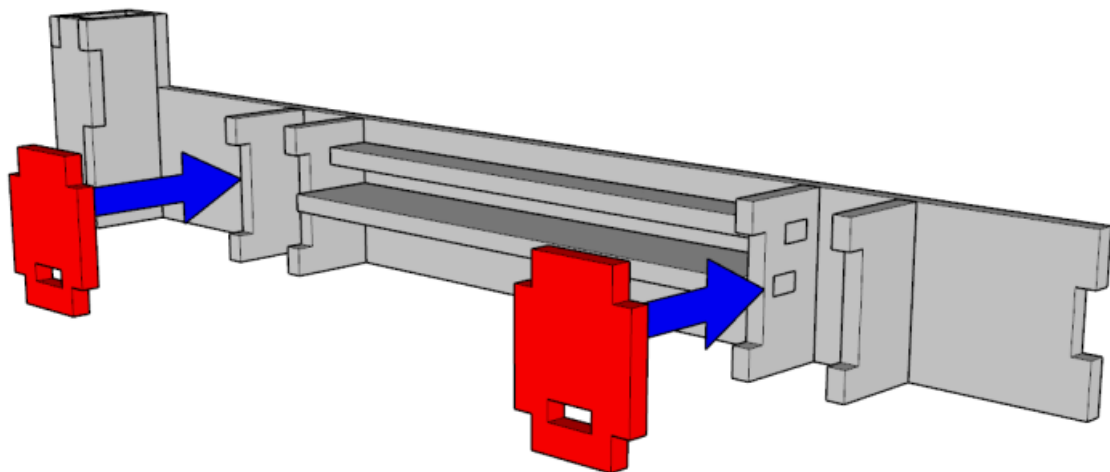



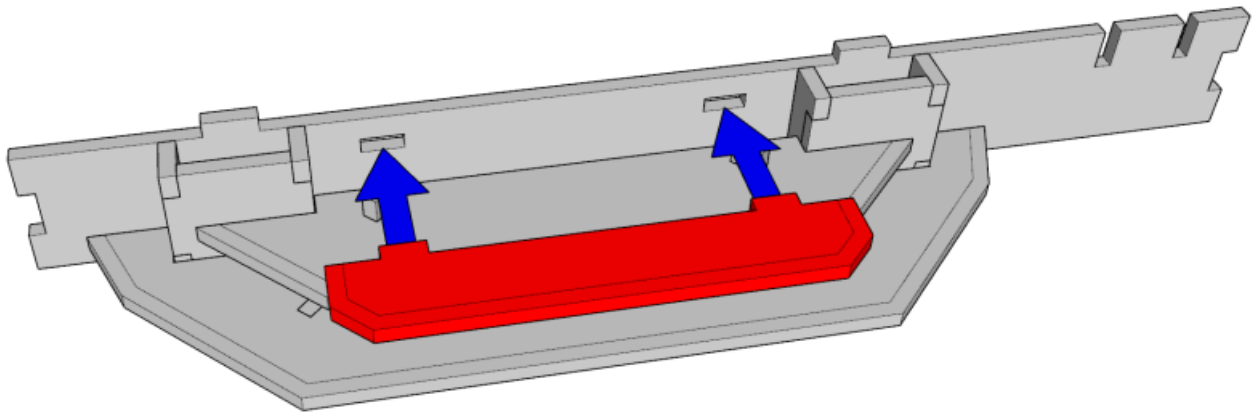
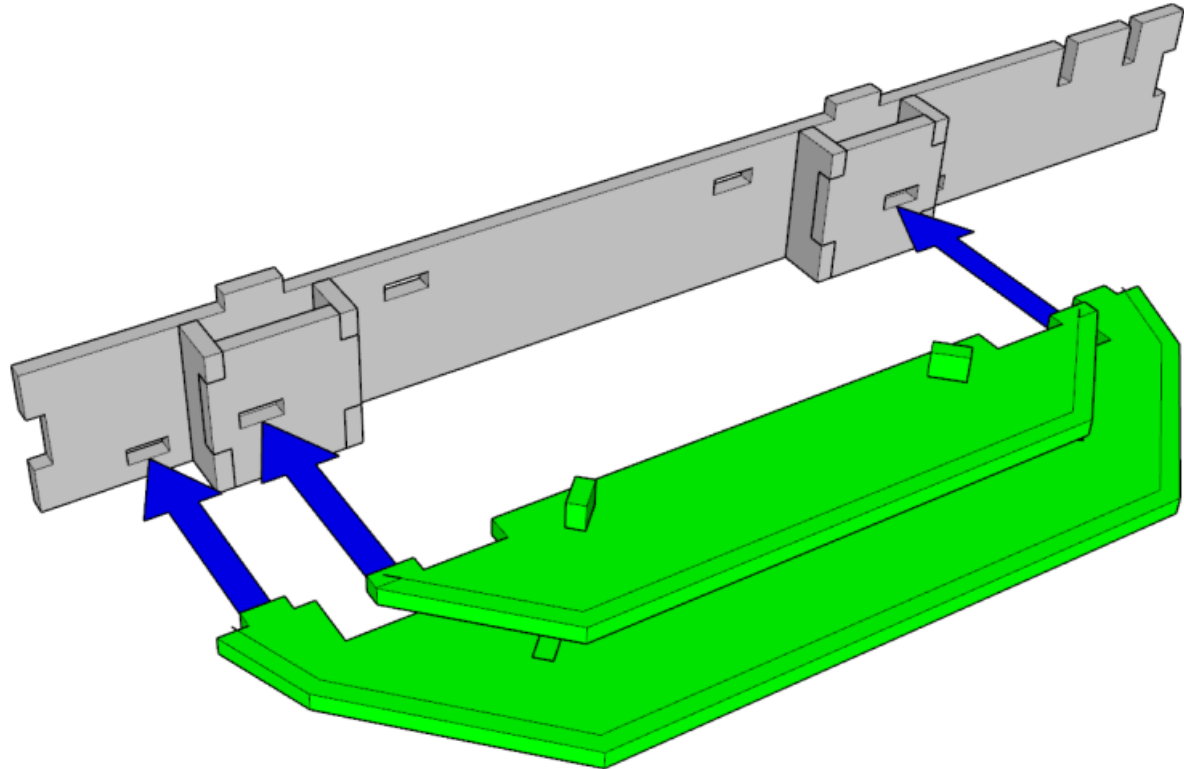
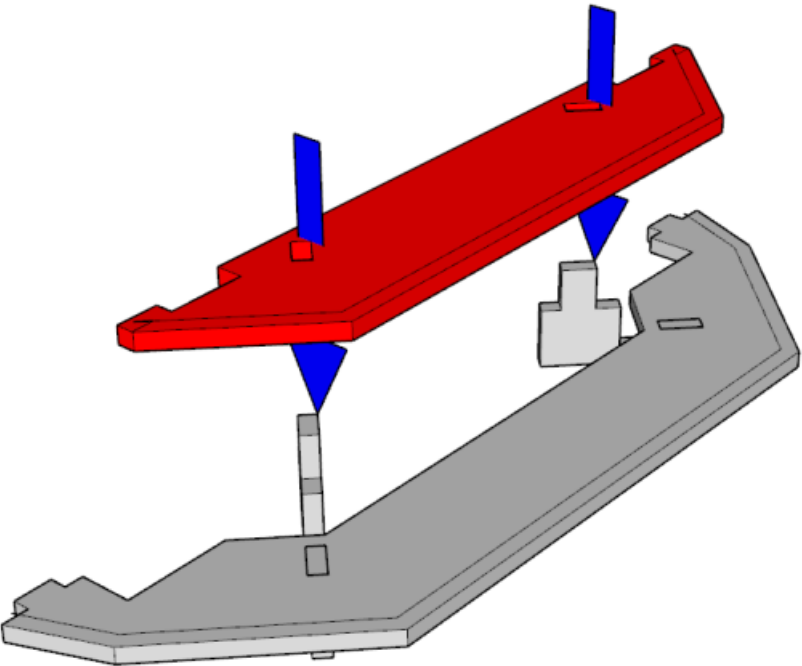
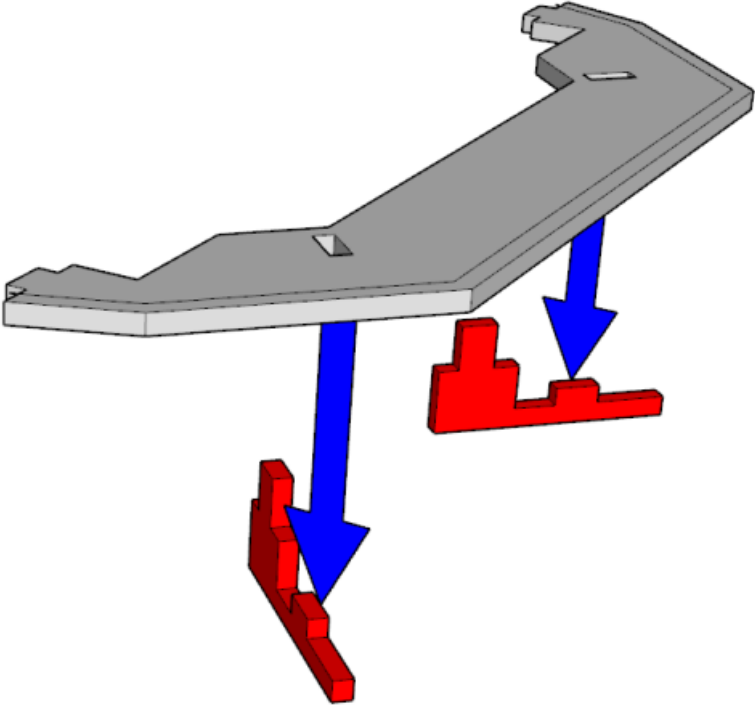




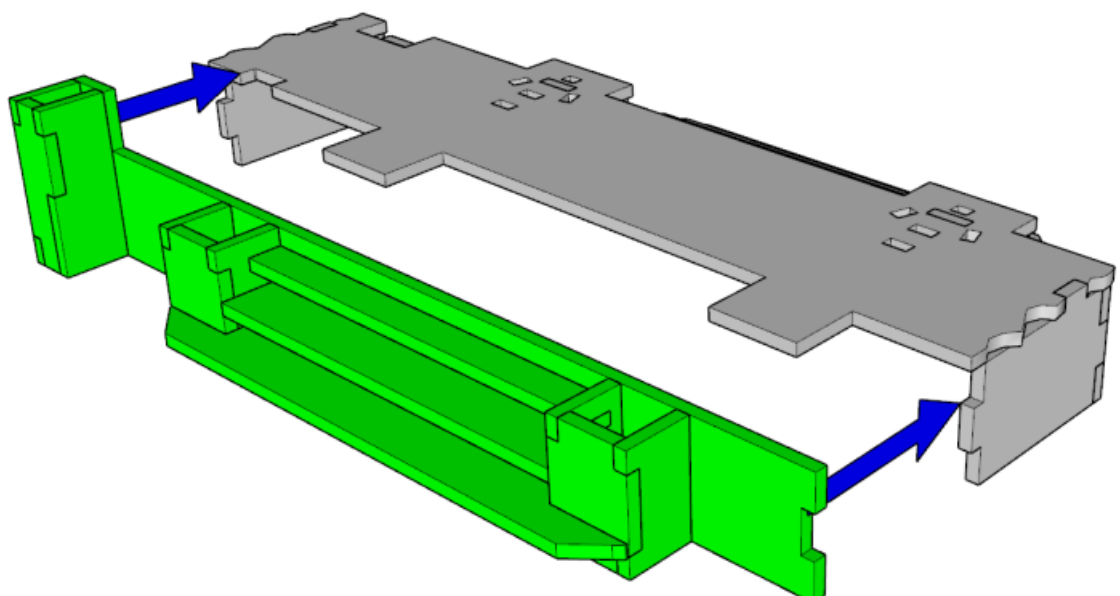
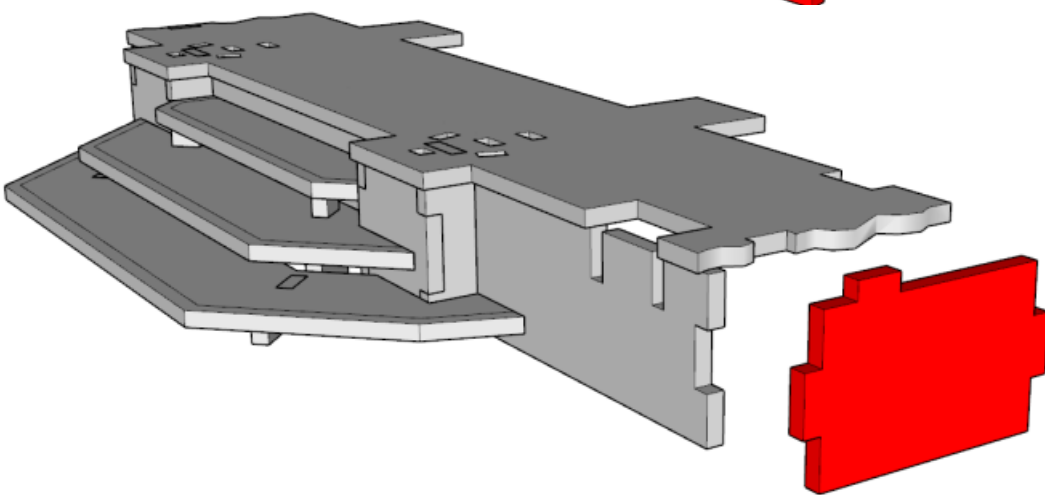
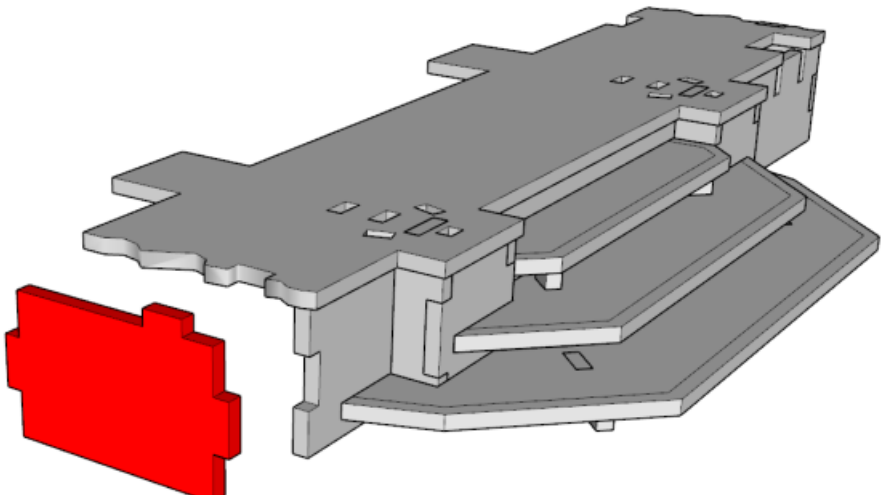
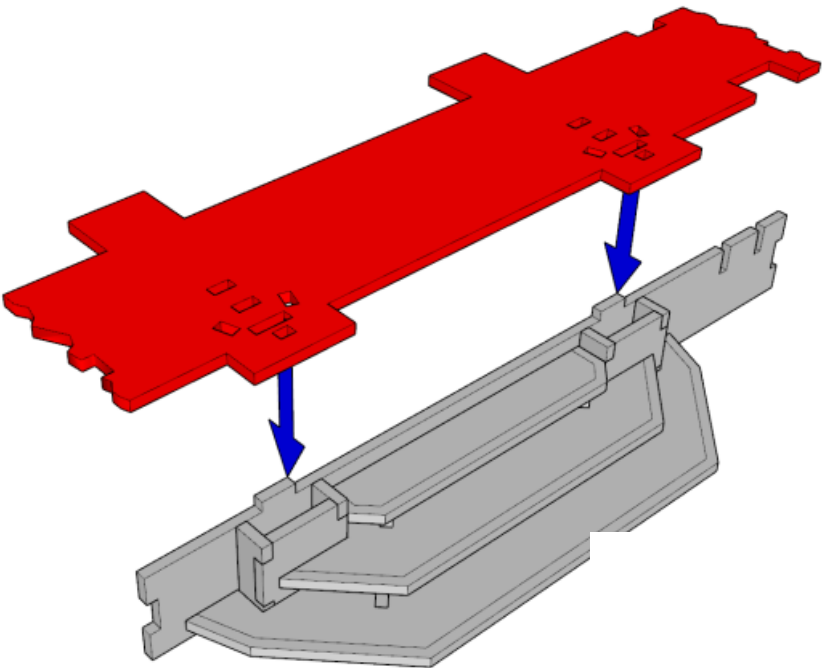




*Engraving on reverse side*

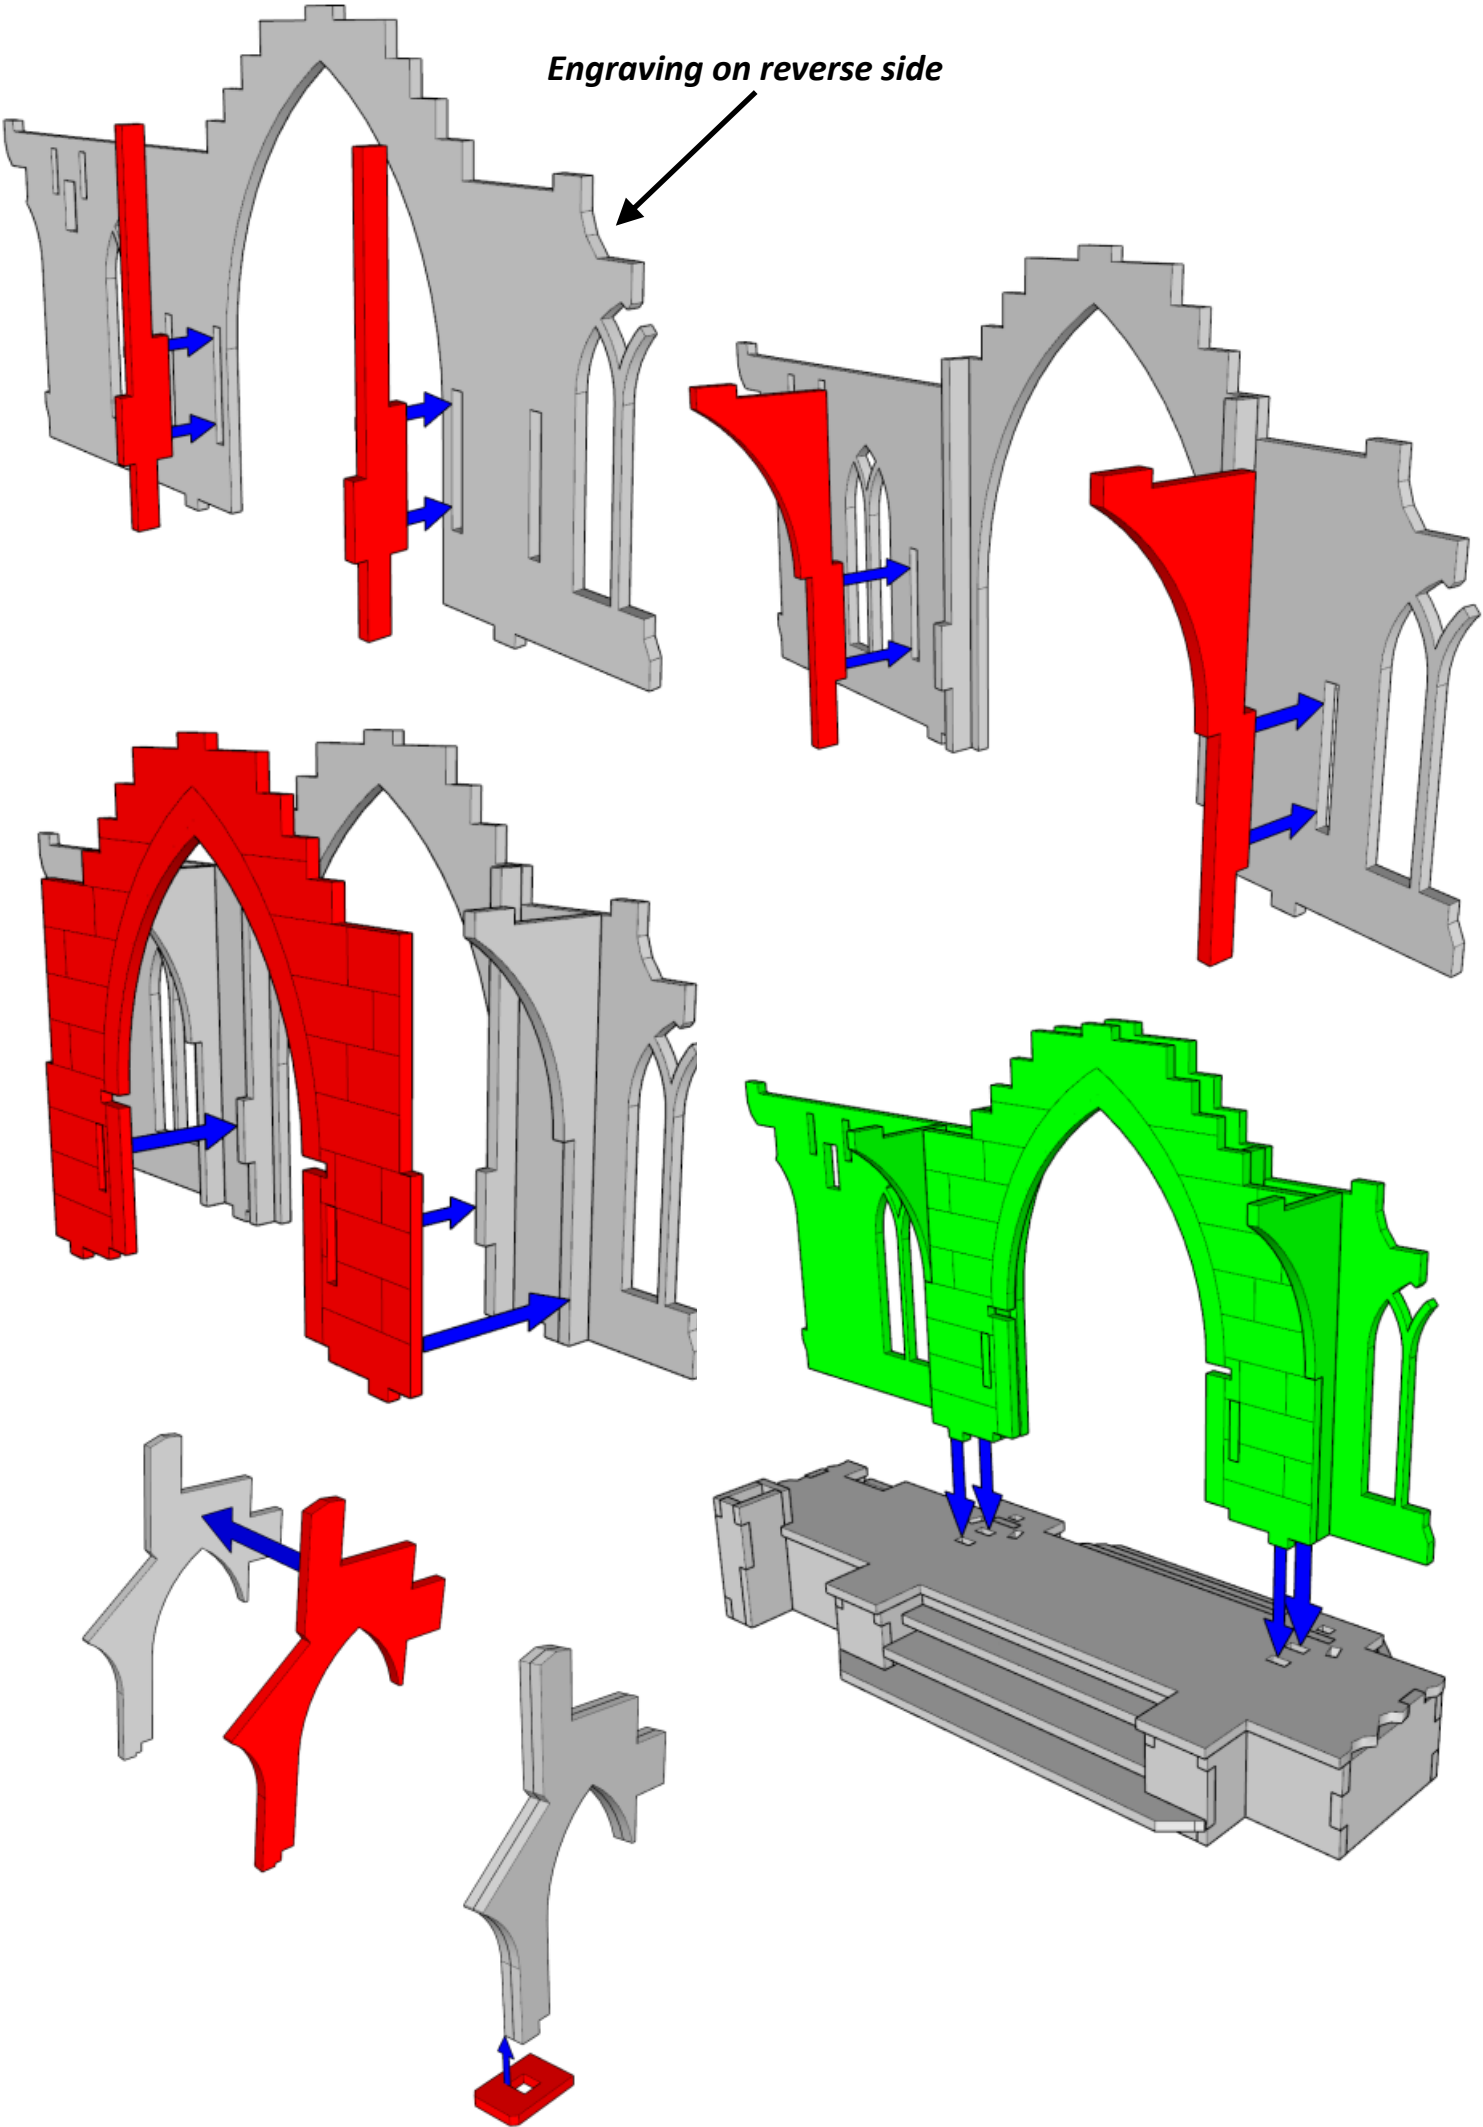

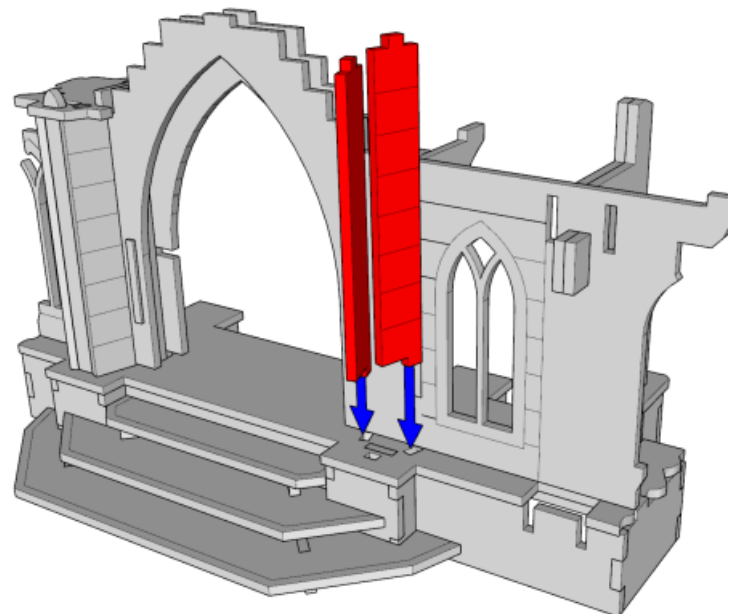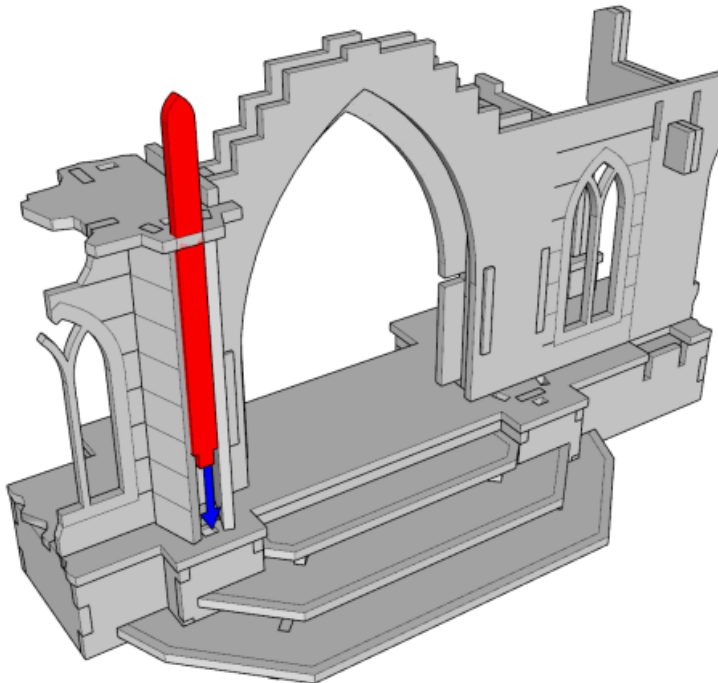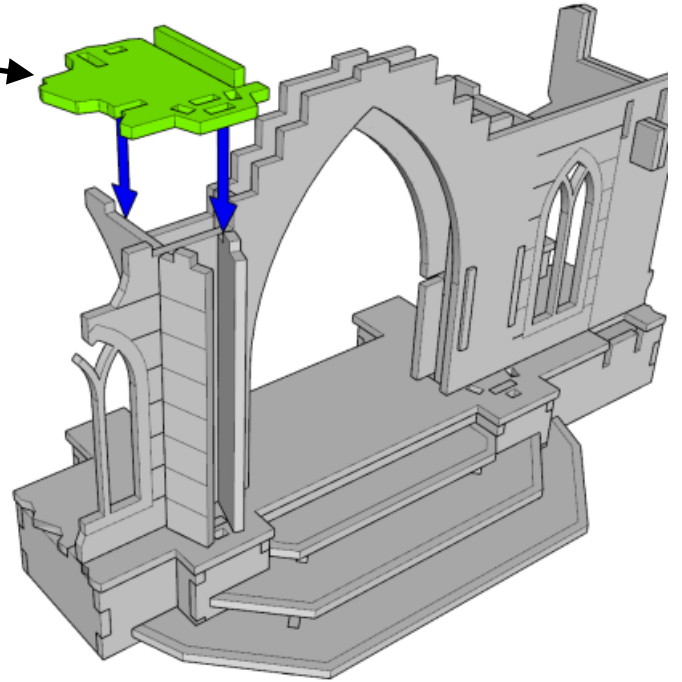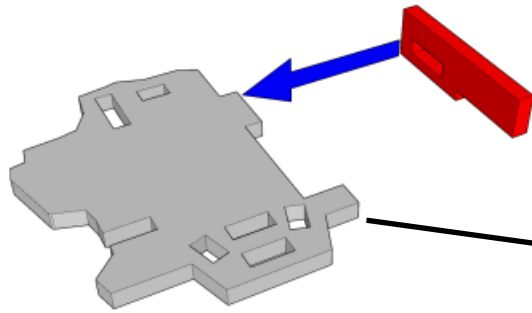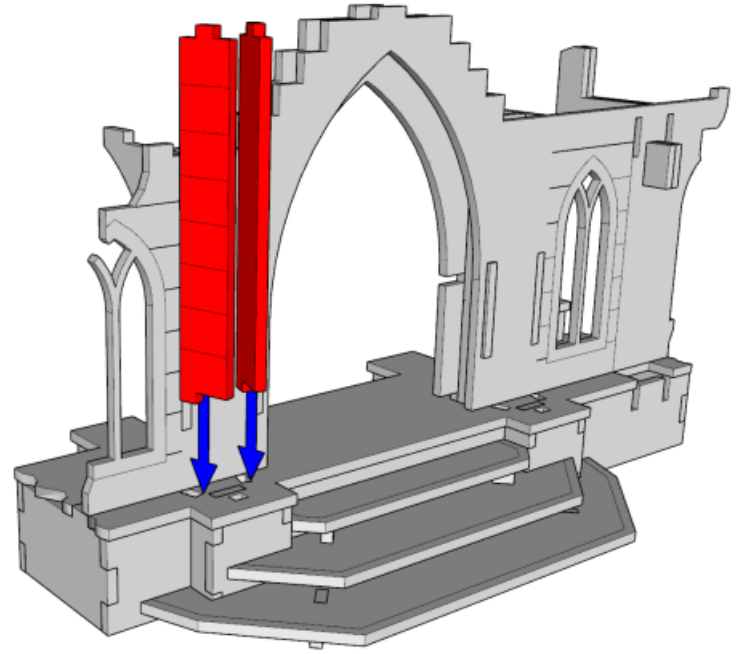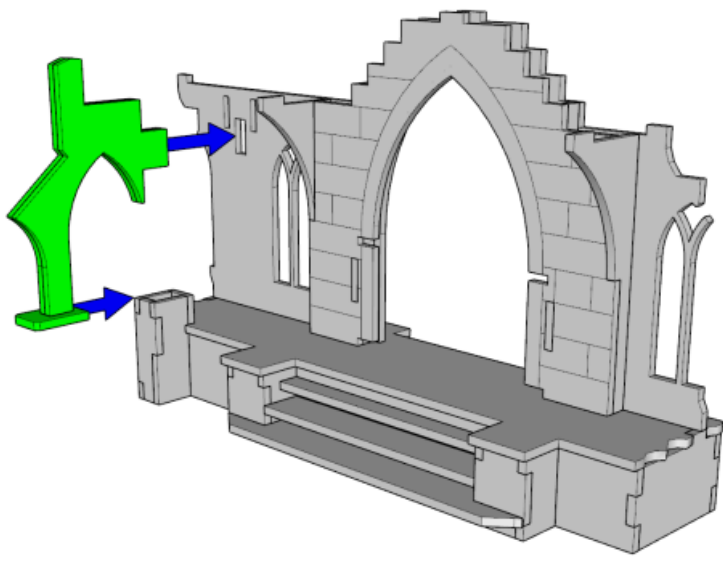


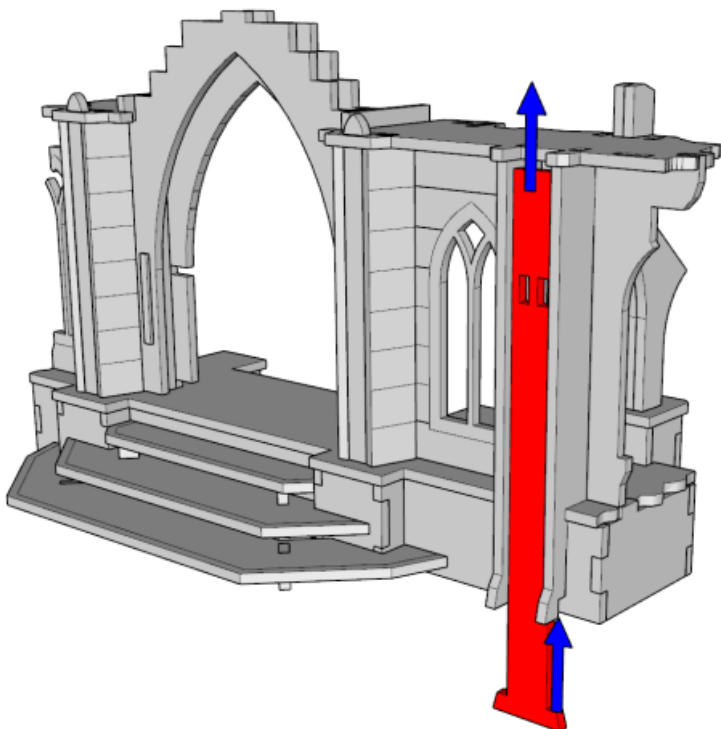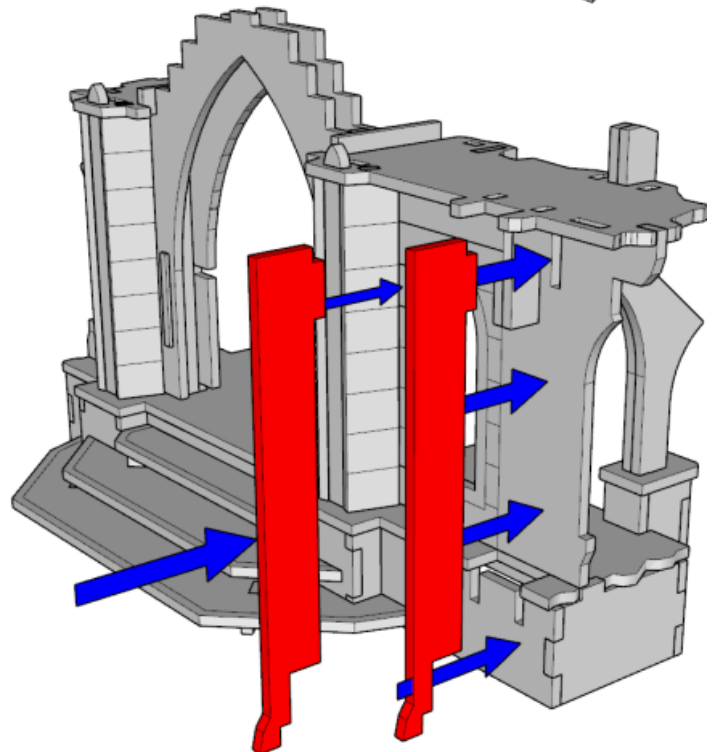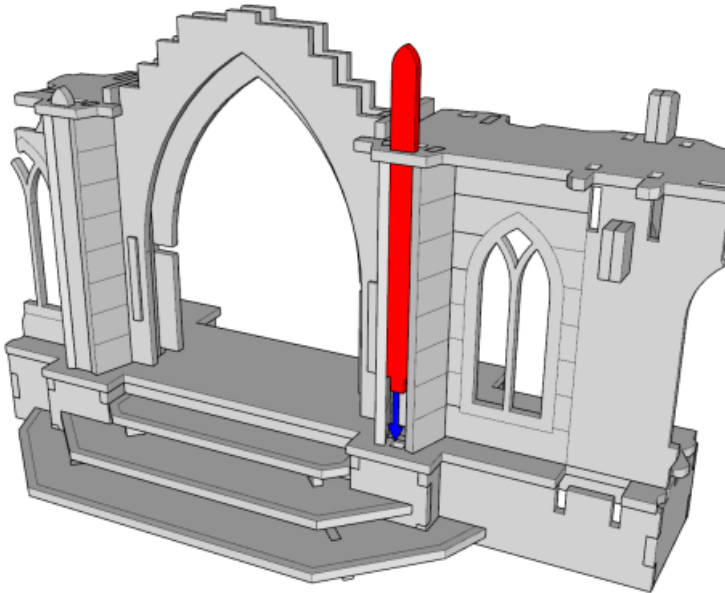
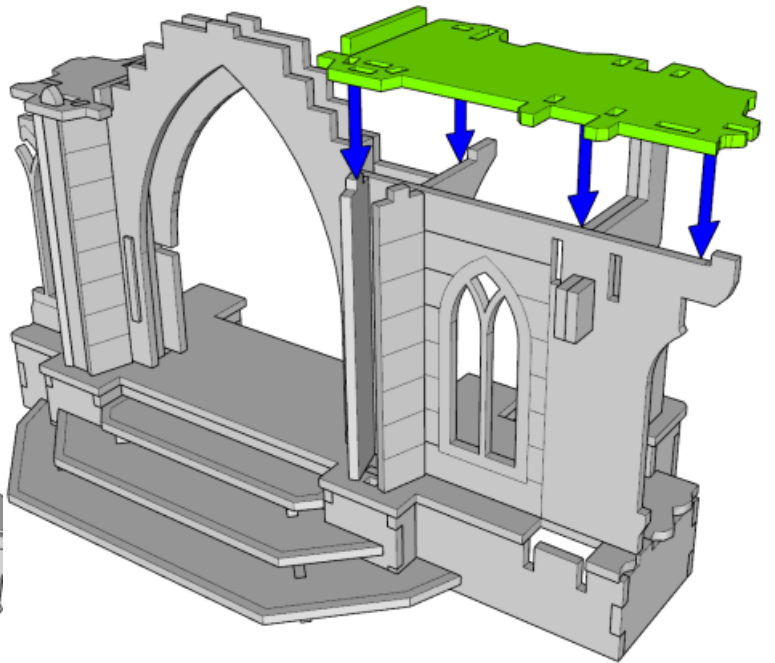
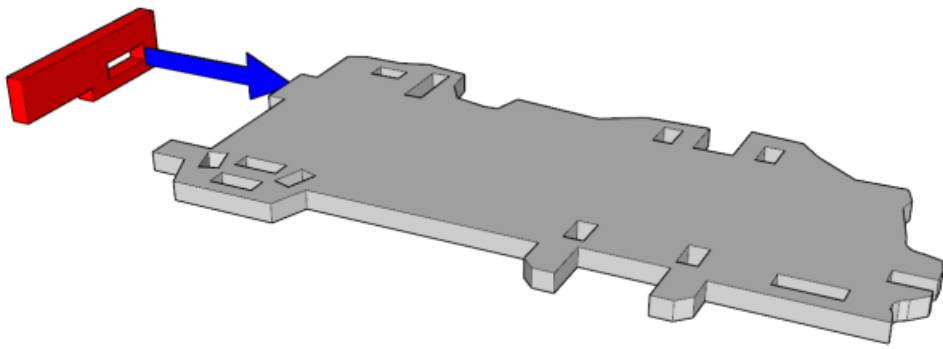


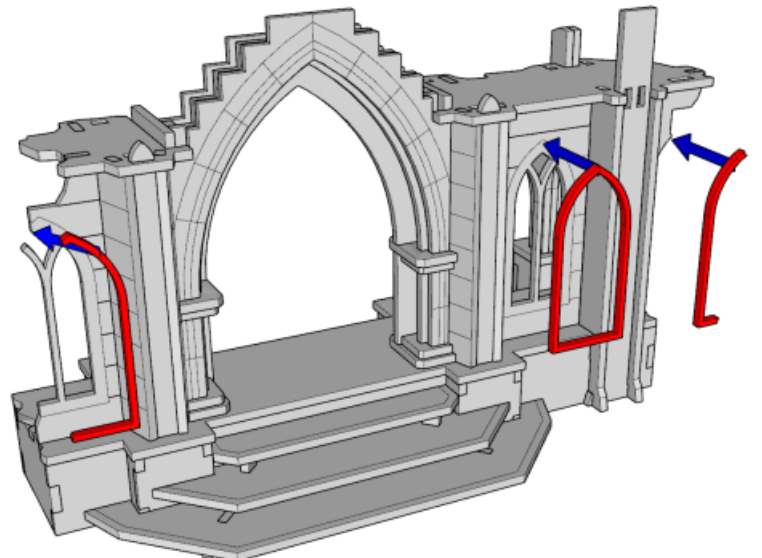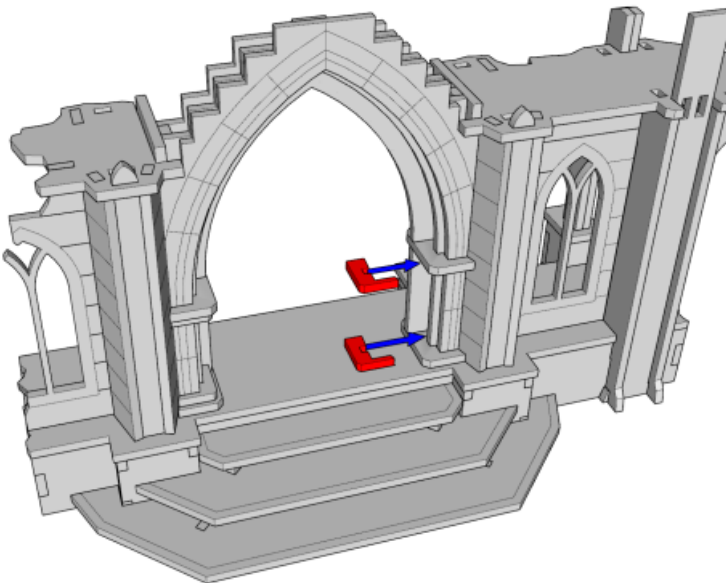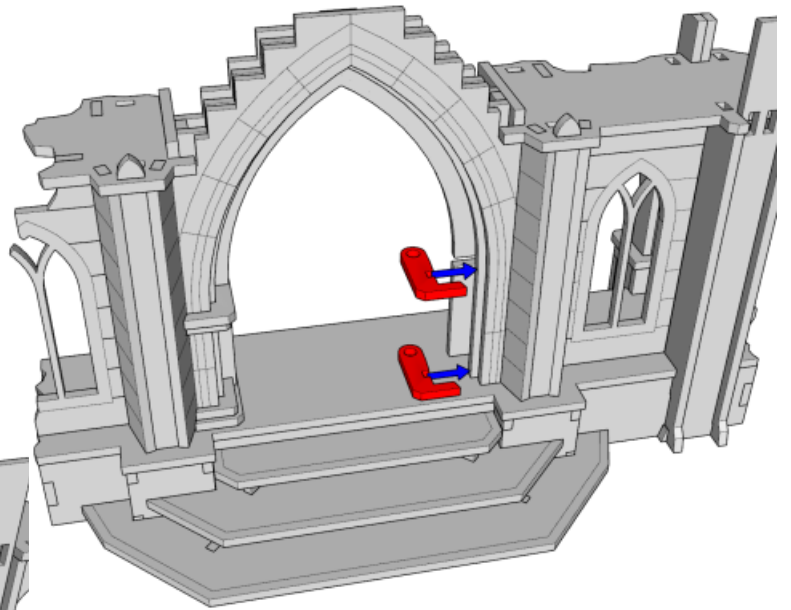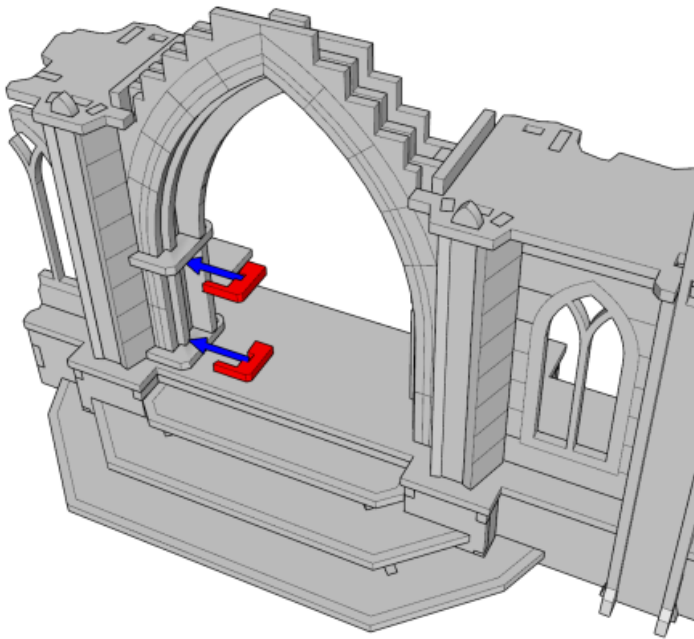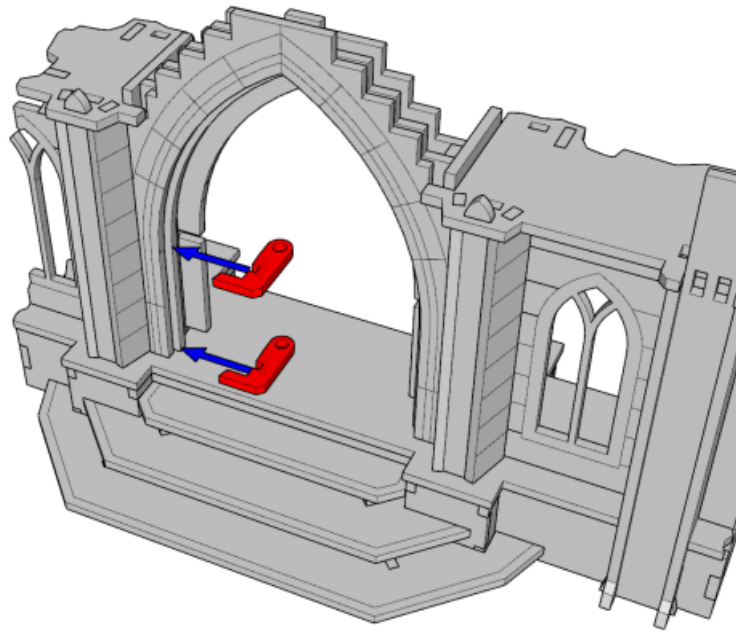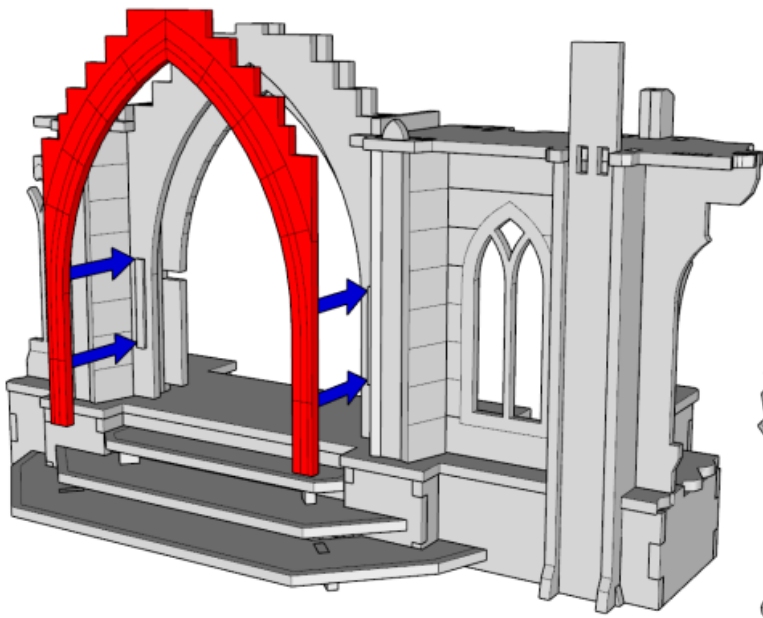

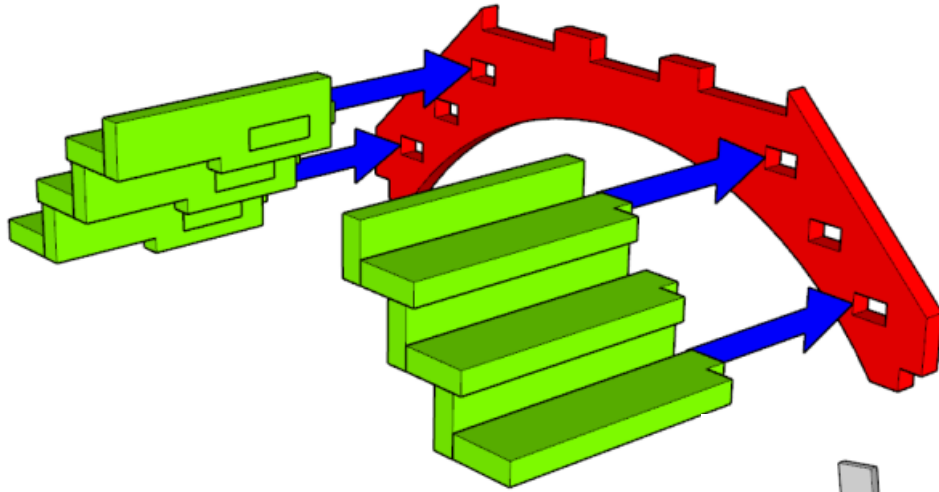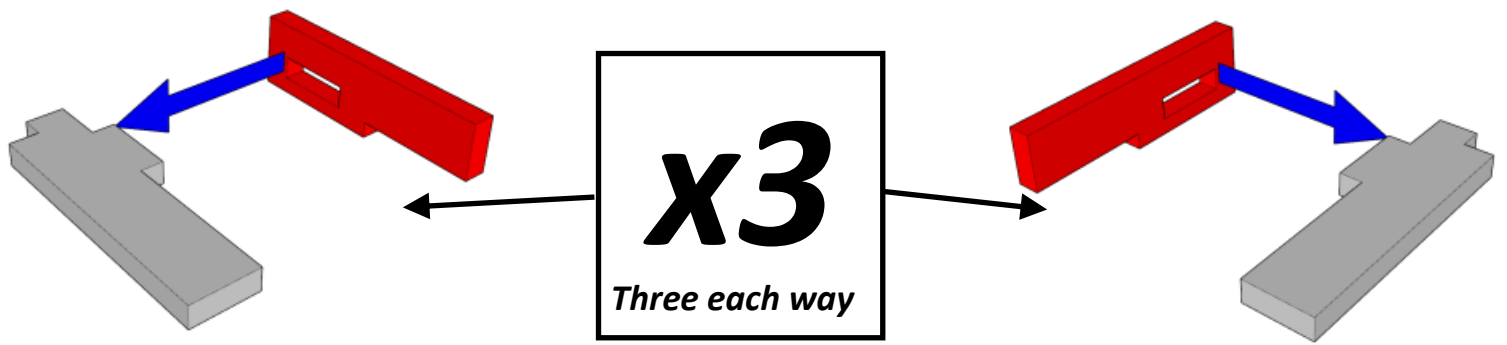


*Make sure stairs sit flat*

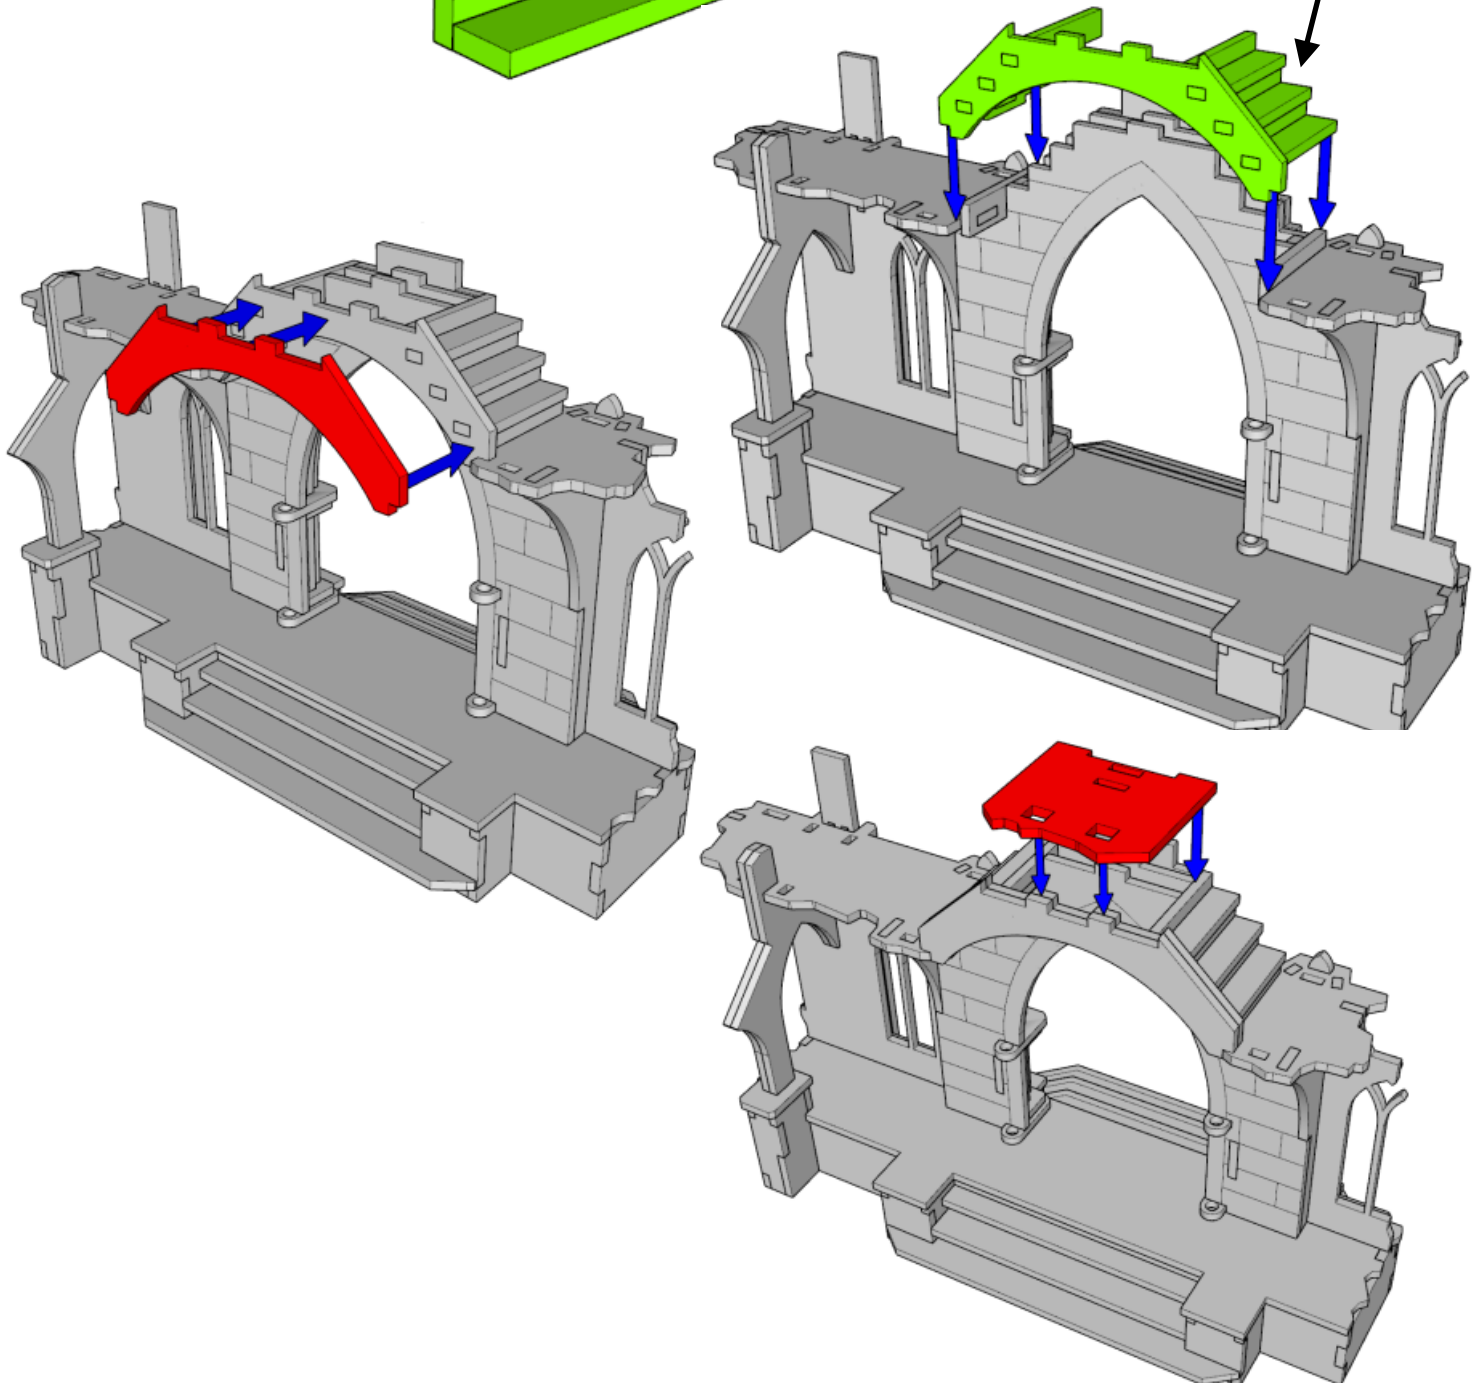

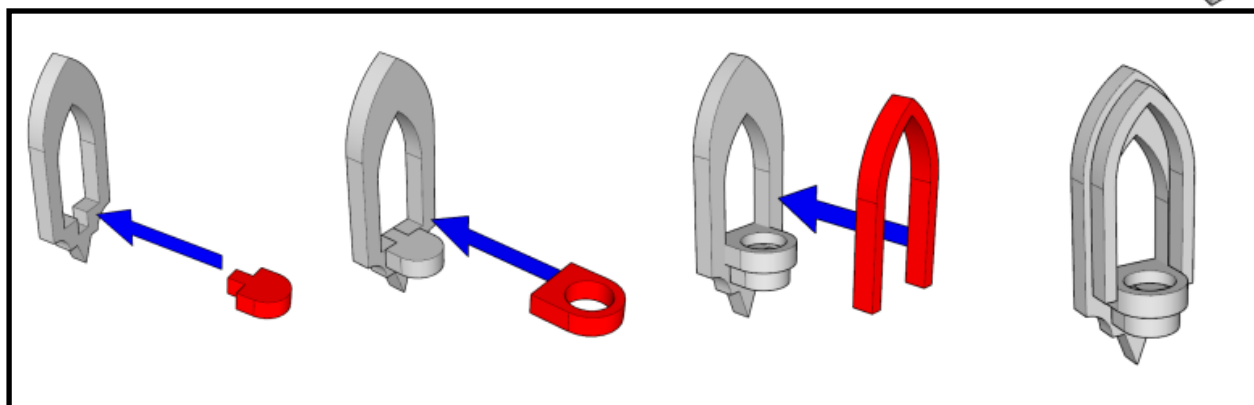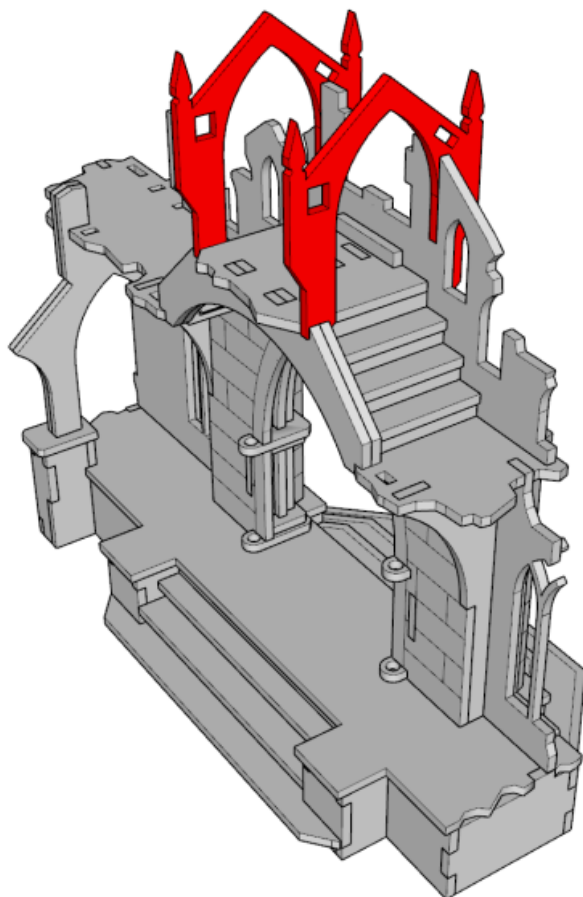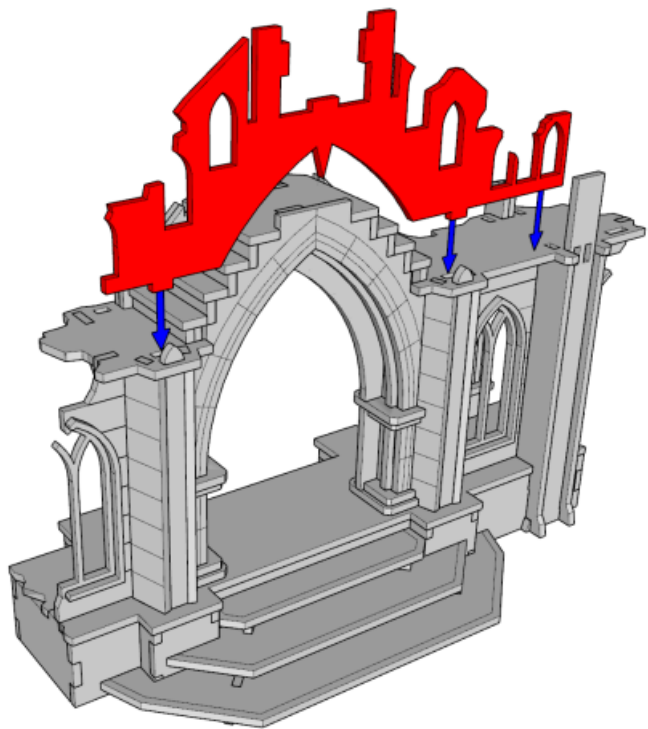

**x2**

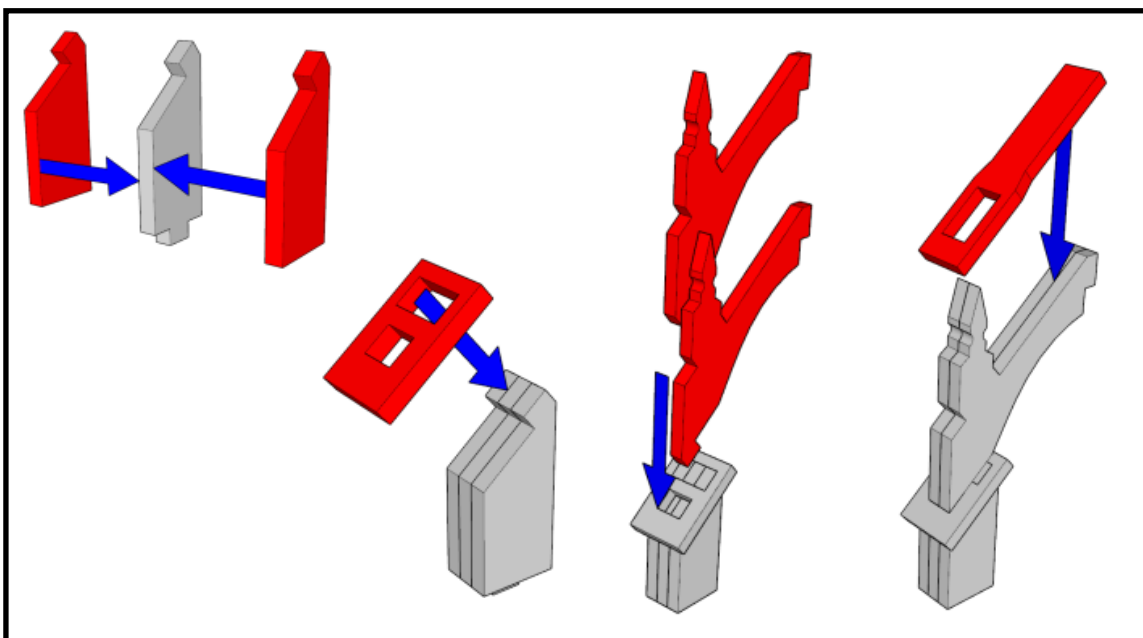

**x2**

