

MINIATURE SCENERY YZK PEREGRINE



ONE SMALL SPACESHIP FOR MAN,
ONE GIANT SPACESHIP FOR TINY SPACEMANS!



FOR DETAILED, EASY TO FOLLOW INSTRUCTIONS VISIT
WWW.MINIATURESCENERY.COM



2724479701104

Contents may contain small parts. Not suitable for children under 6 years old. The exclusive copyright on the model designs and components within this case is the property of Miniature Scenery, 2018. All rights reserved.



THIS DELUXE SPACESHIP KIT FEATURES
A FULL INTERIOR WITH ALL THE BELLS
AND WHISTLES.



MINIATURE SCENERY

INSTRUCTIONS

PEREGRINE Y2K Light Freighter DELUXE

Preparation

Once you clear some table space you will need a hobby knife and glue (PVA, wood glue, hobby glue) and a file or small piece of sandpaper to be used for cleaning up any tiny imperfections.

It's a good idea to familiarise yourself with how the pieces fit together before gluing.

Getting Started

I. Parts should remove easily from the board by pressing through and popping them out. It's a good idea to cut through the tiny joins first though, and some parts (particularly smaller, more detailed parts) may need more careful persuasion.

II. Use a file or sand paper last to completely remove the tabs that might remain.

III. Parts may be a very tight fit, slight trimming or sanding of parts may be needed for ease of assembly.

Construction

Slot the parts together as shown by the pictures below, applying glue wherever there is a connection.

Allow the model to completely dry before painting it. This may be a complex kit with many small parts. Allowing each section to dry thoroughly before heading to the next is strongly recommended.

Some parts of this kit
are very fine, or have engraving very close
to edges. Make sure you cut through any
tabs carefully with a hobby knife first to avoid
damage.

Read Ahead a few pages at a time to famil-
iarise yourself with upcoming assemblies.



Parts of the Model marked with a green
star : Refer to extra instructions for add-
ing detail and/or alternative parts.

Detail instructions begin on page 40











DO NOT GLUE.





Apply glue where indicated


The instructions will occasionally call for the use of 2mm di-
ameter rod. For this you can use plastic rod, brass or alumin-
ium tubing or even round toothpicks.

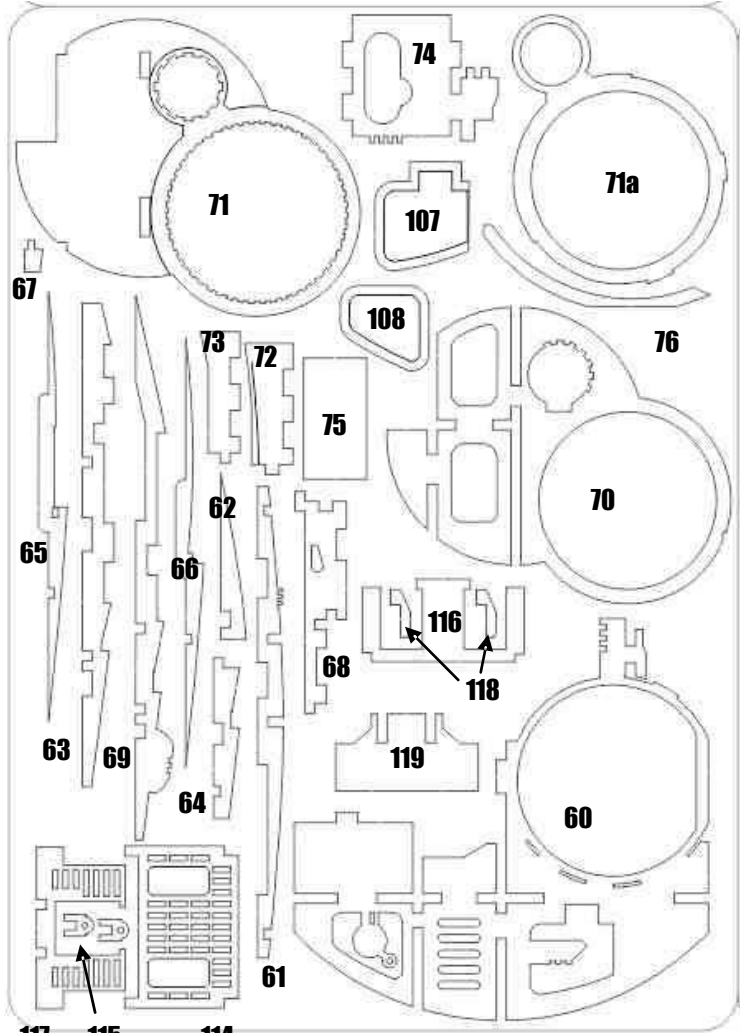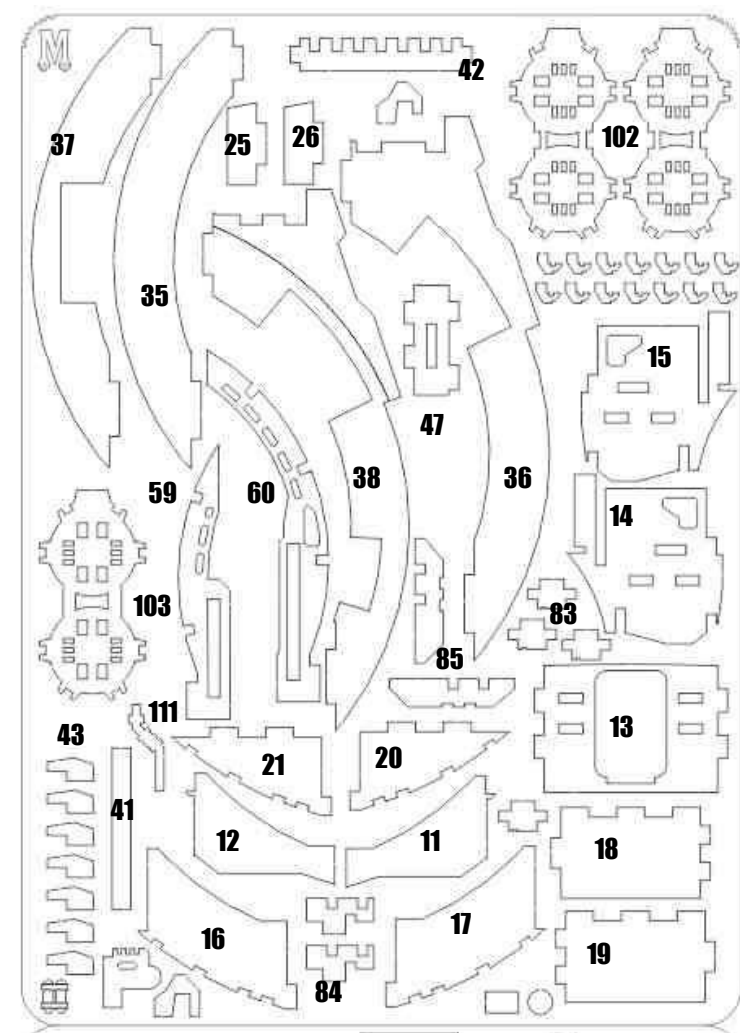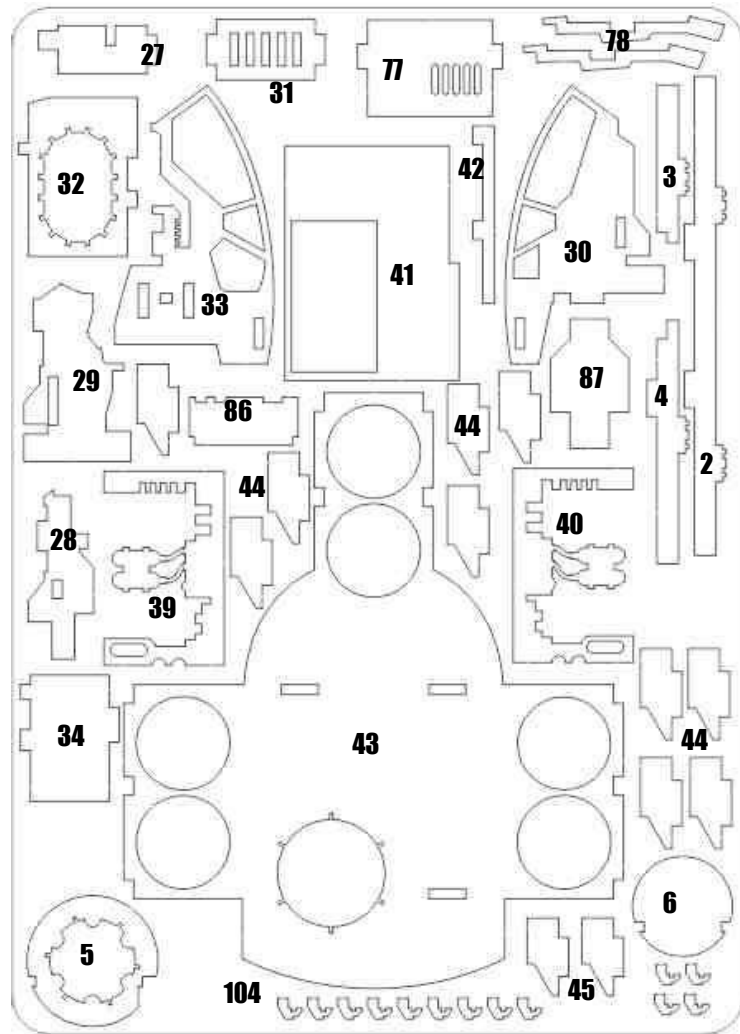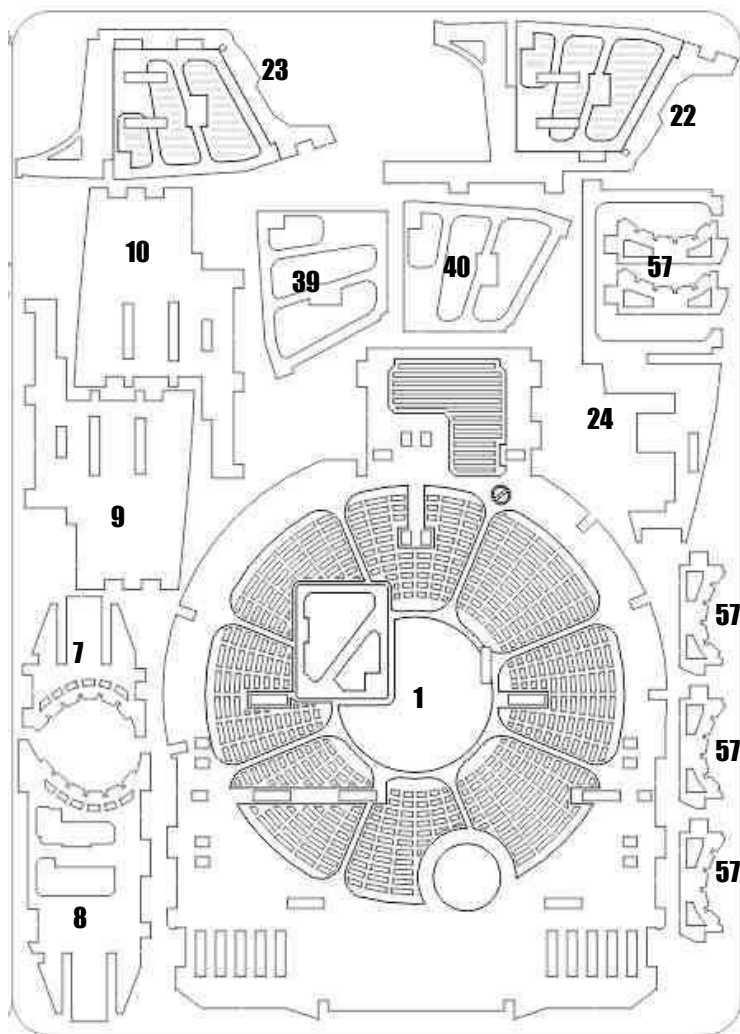

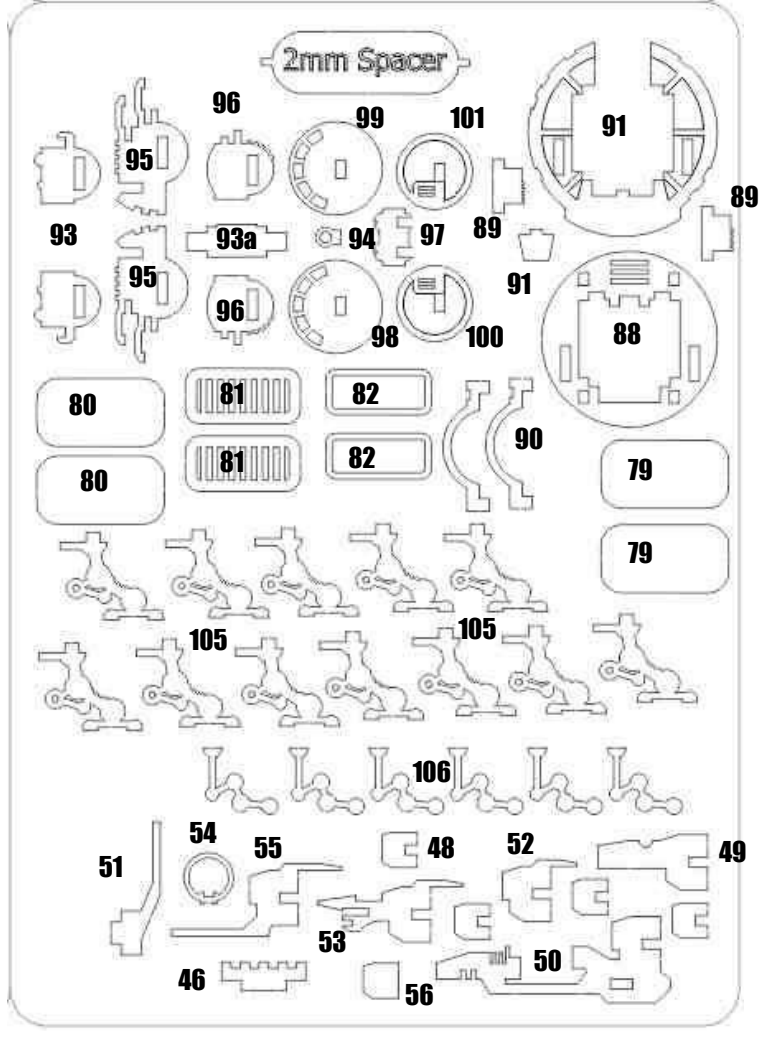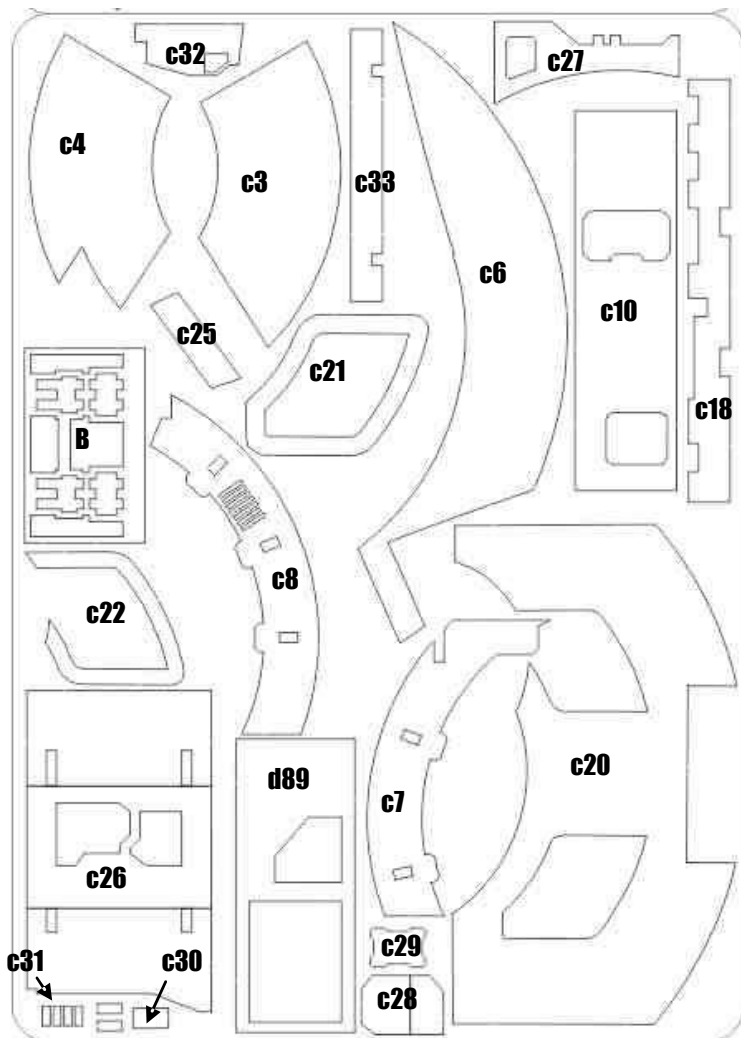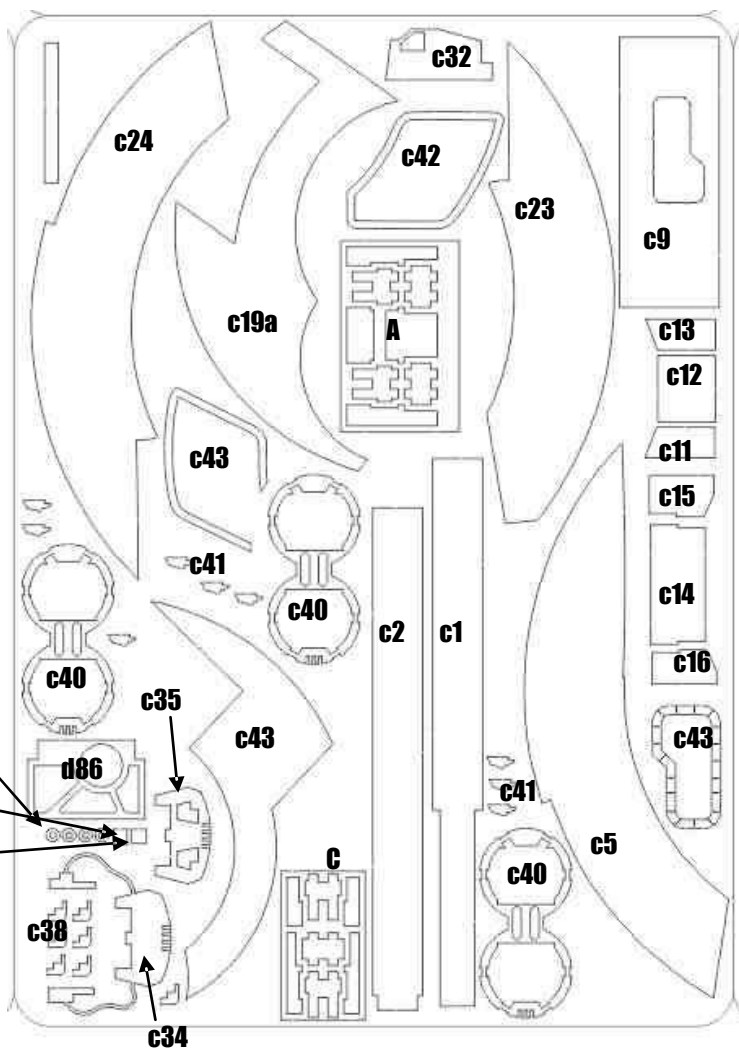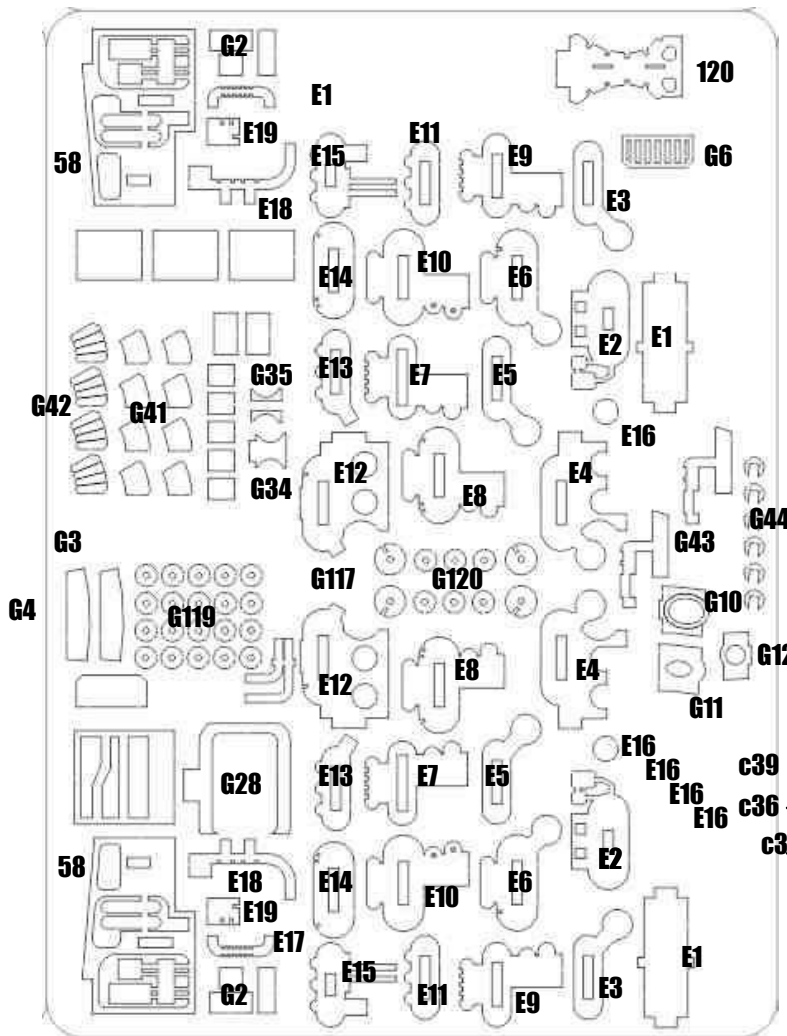


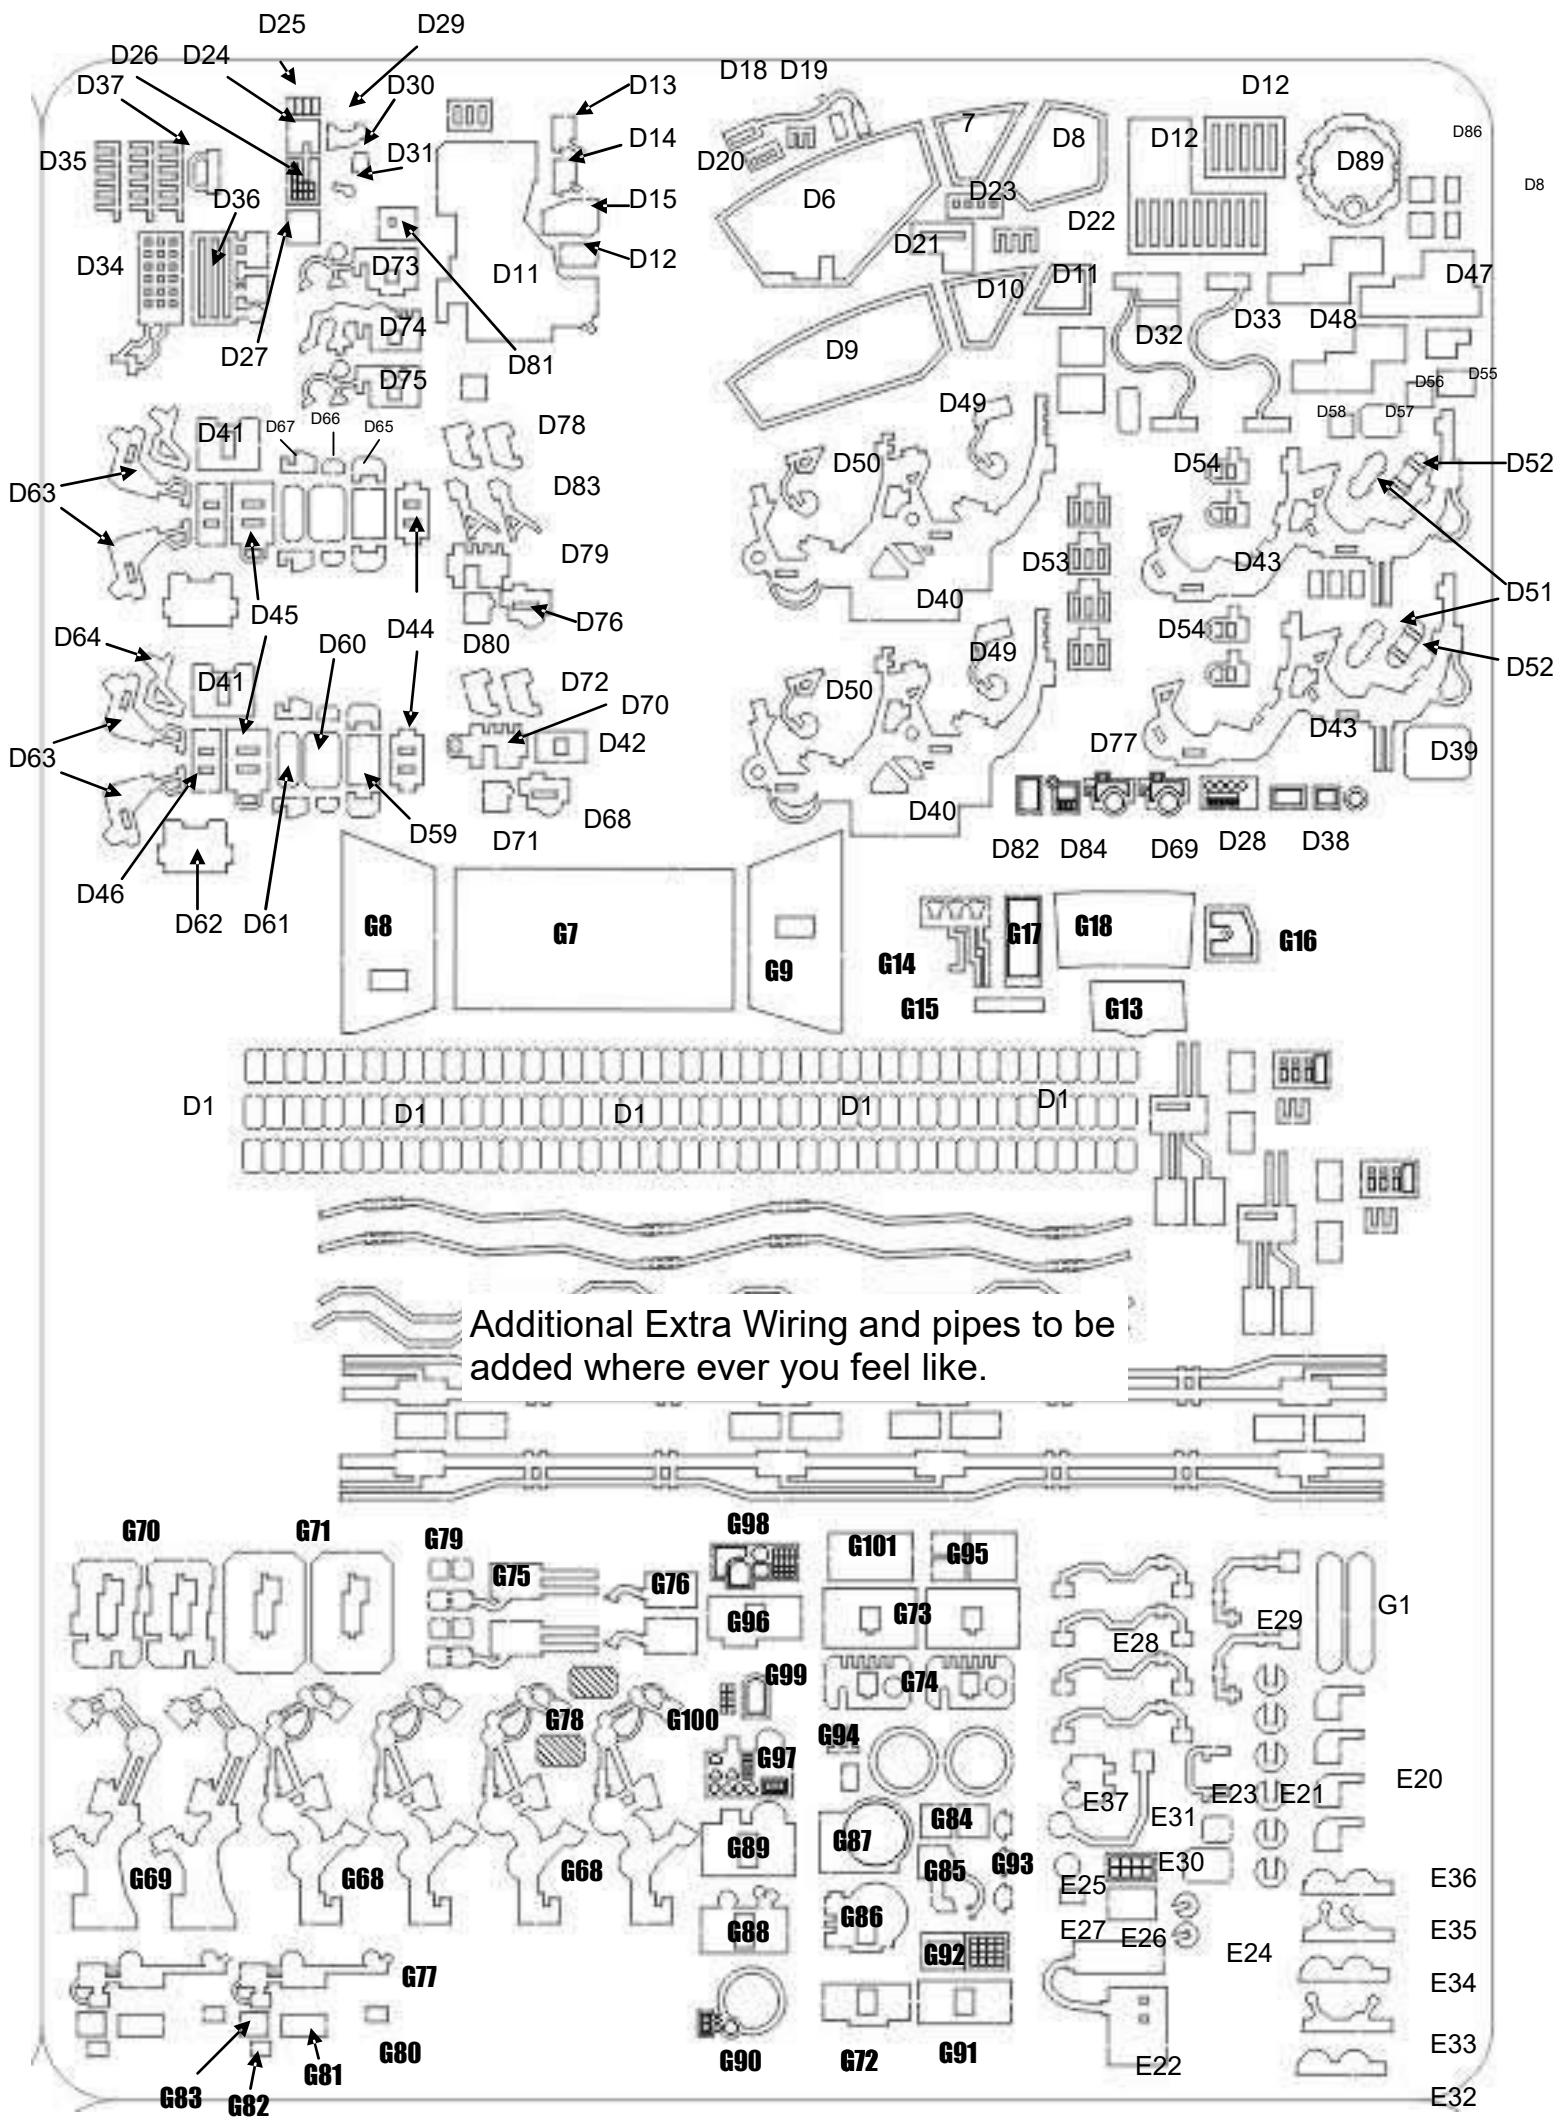


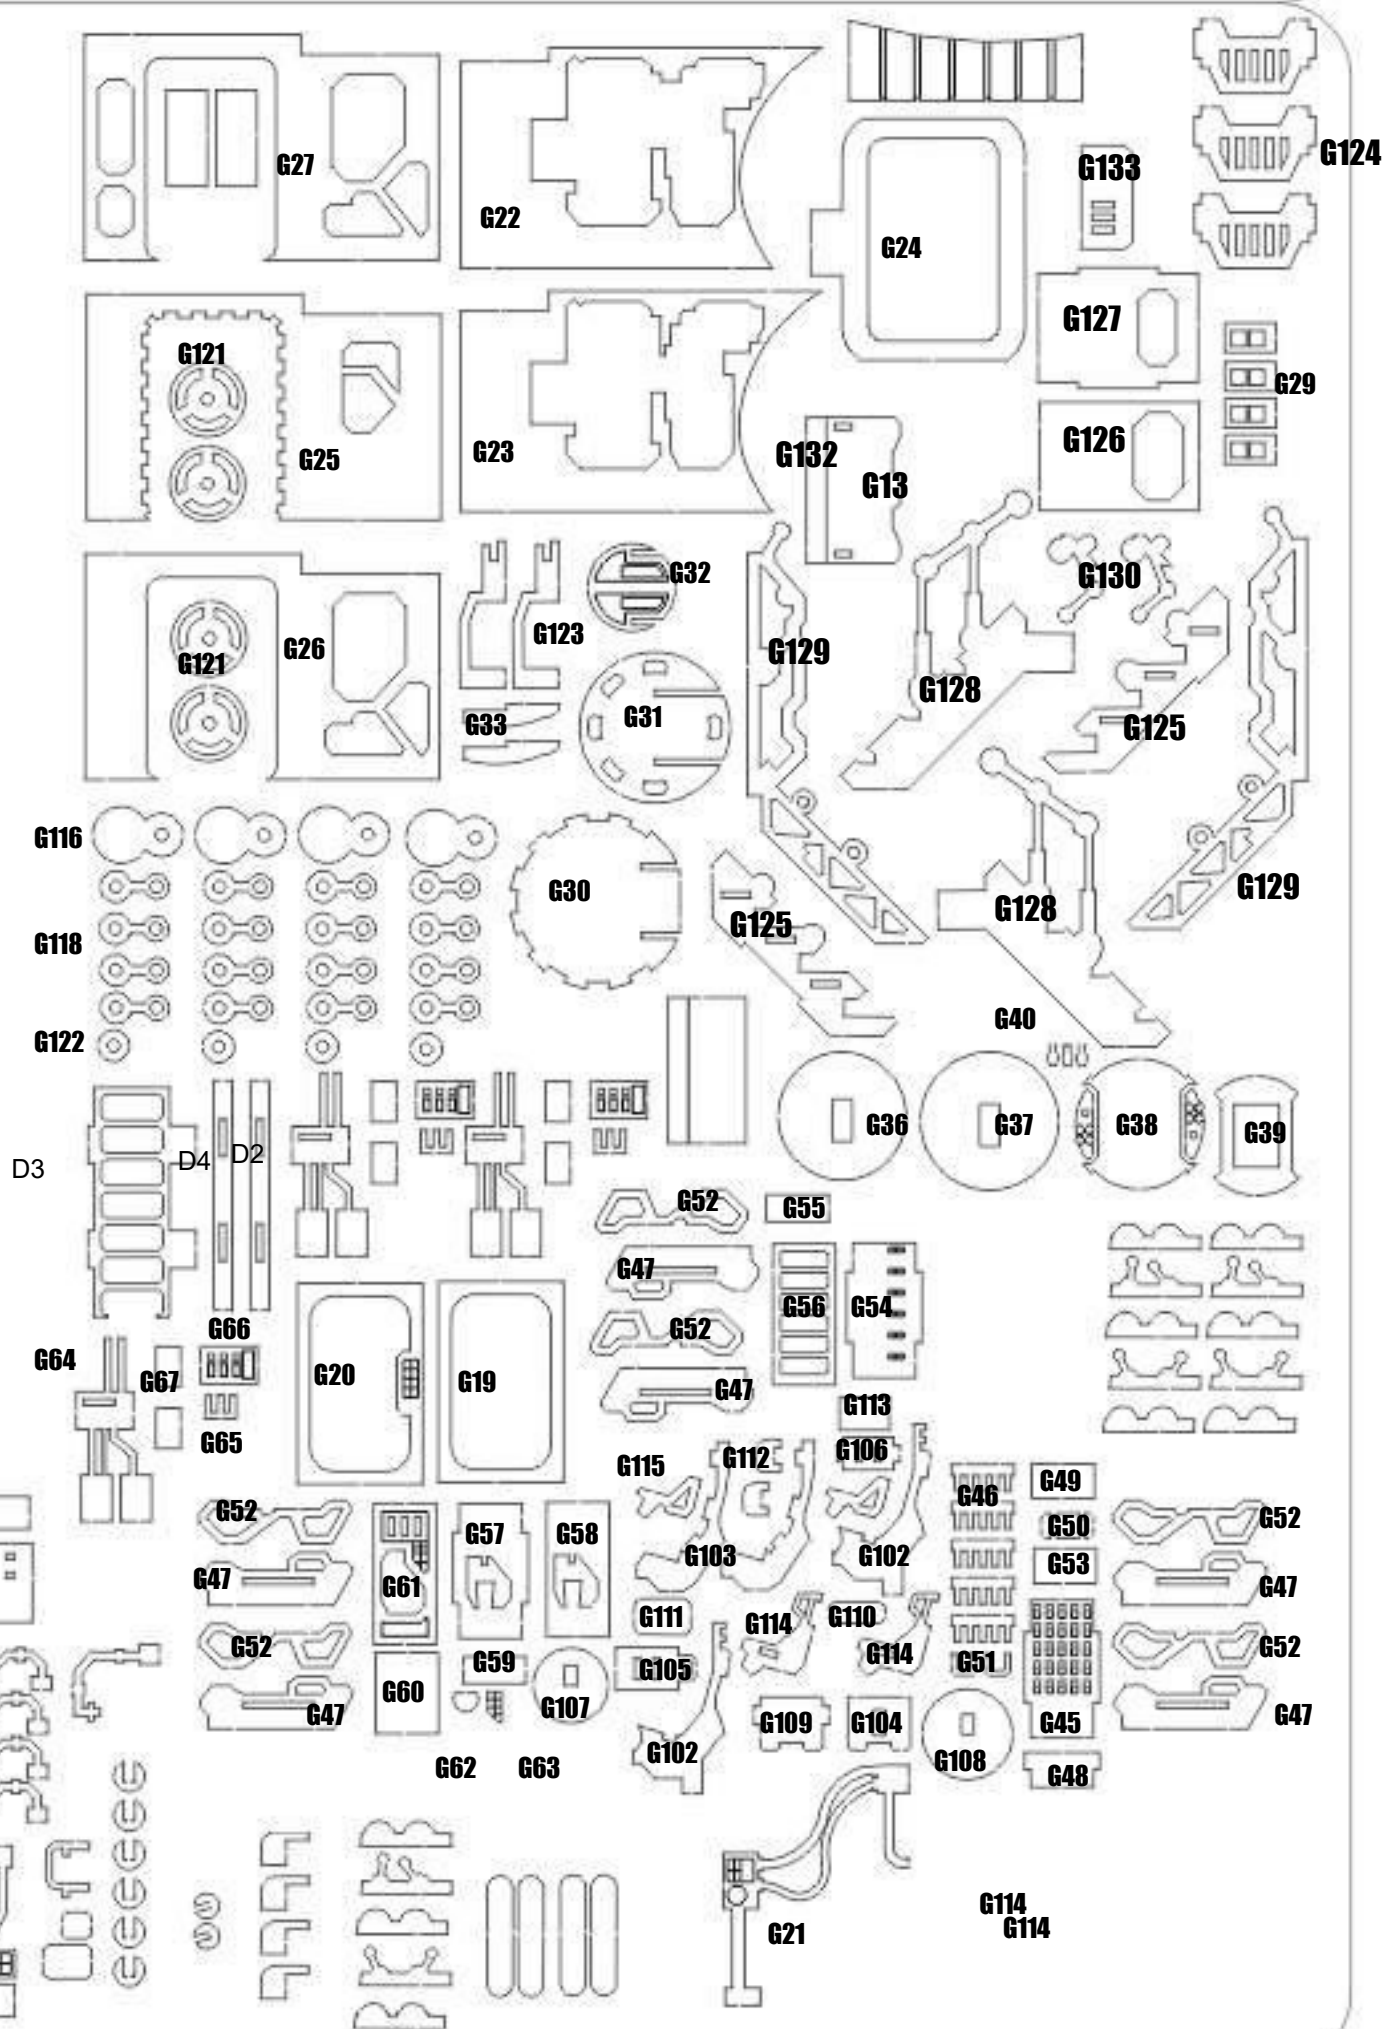

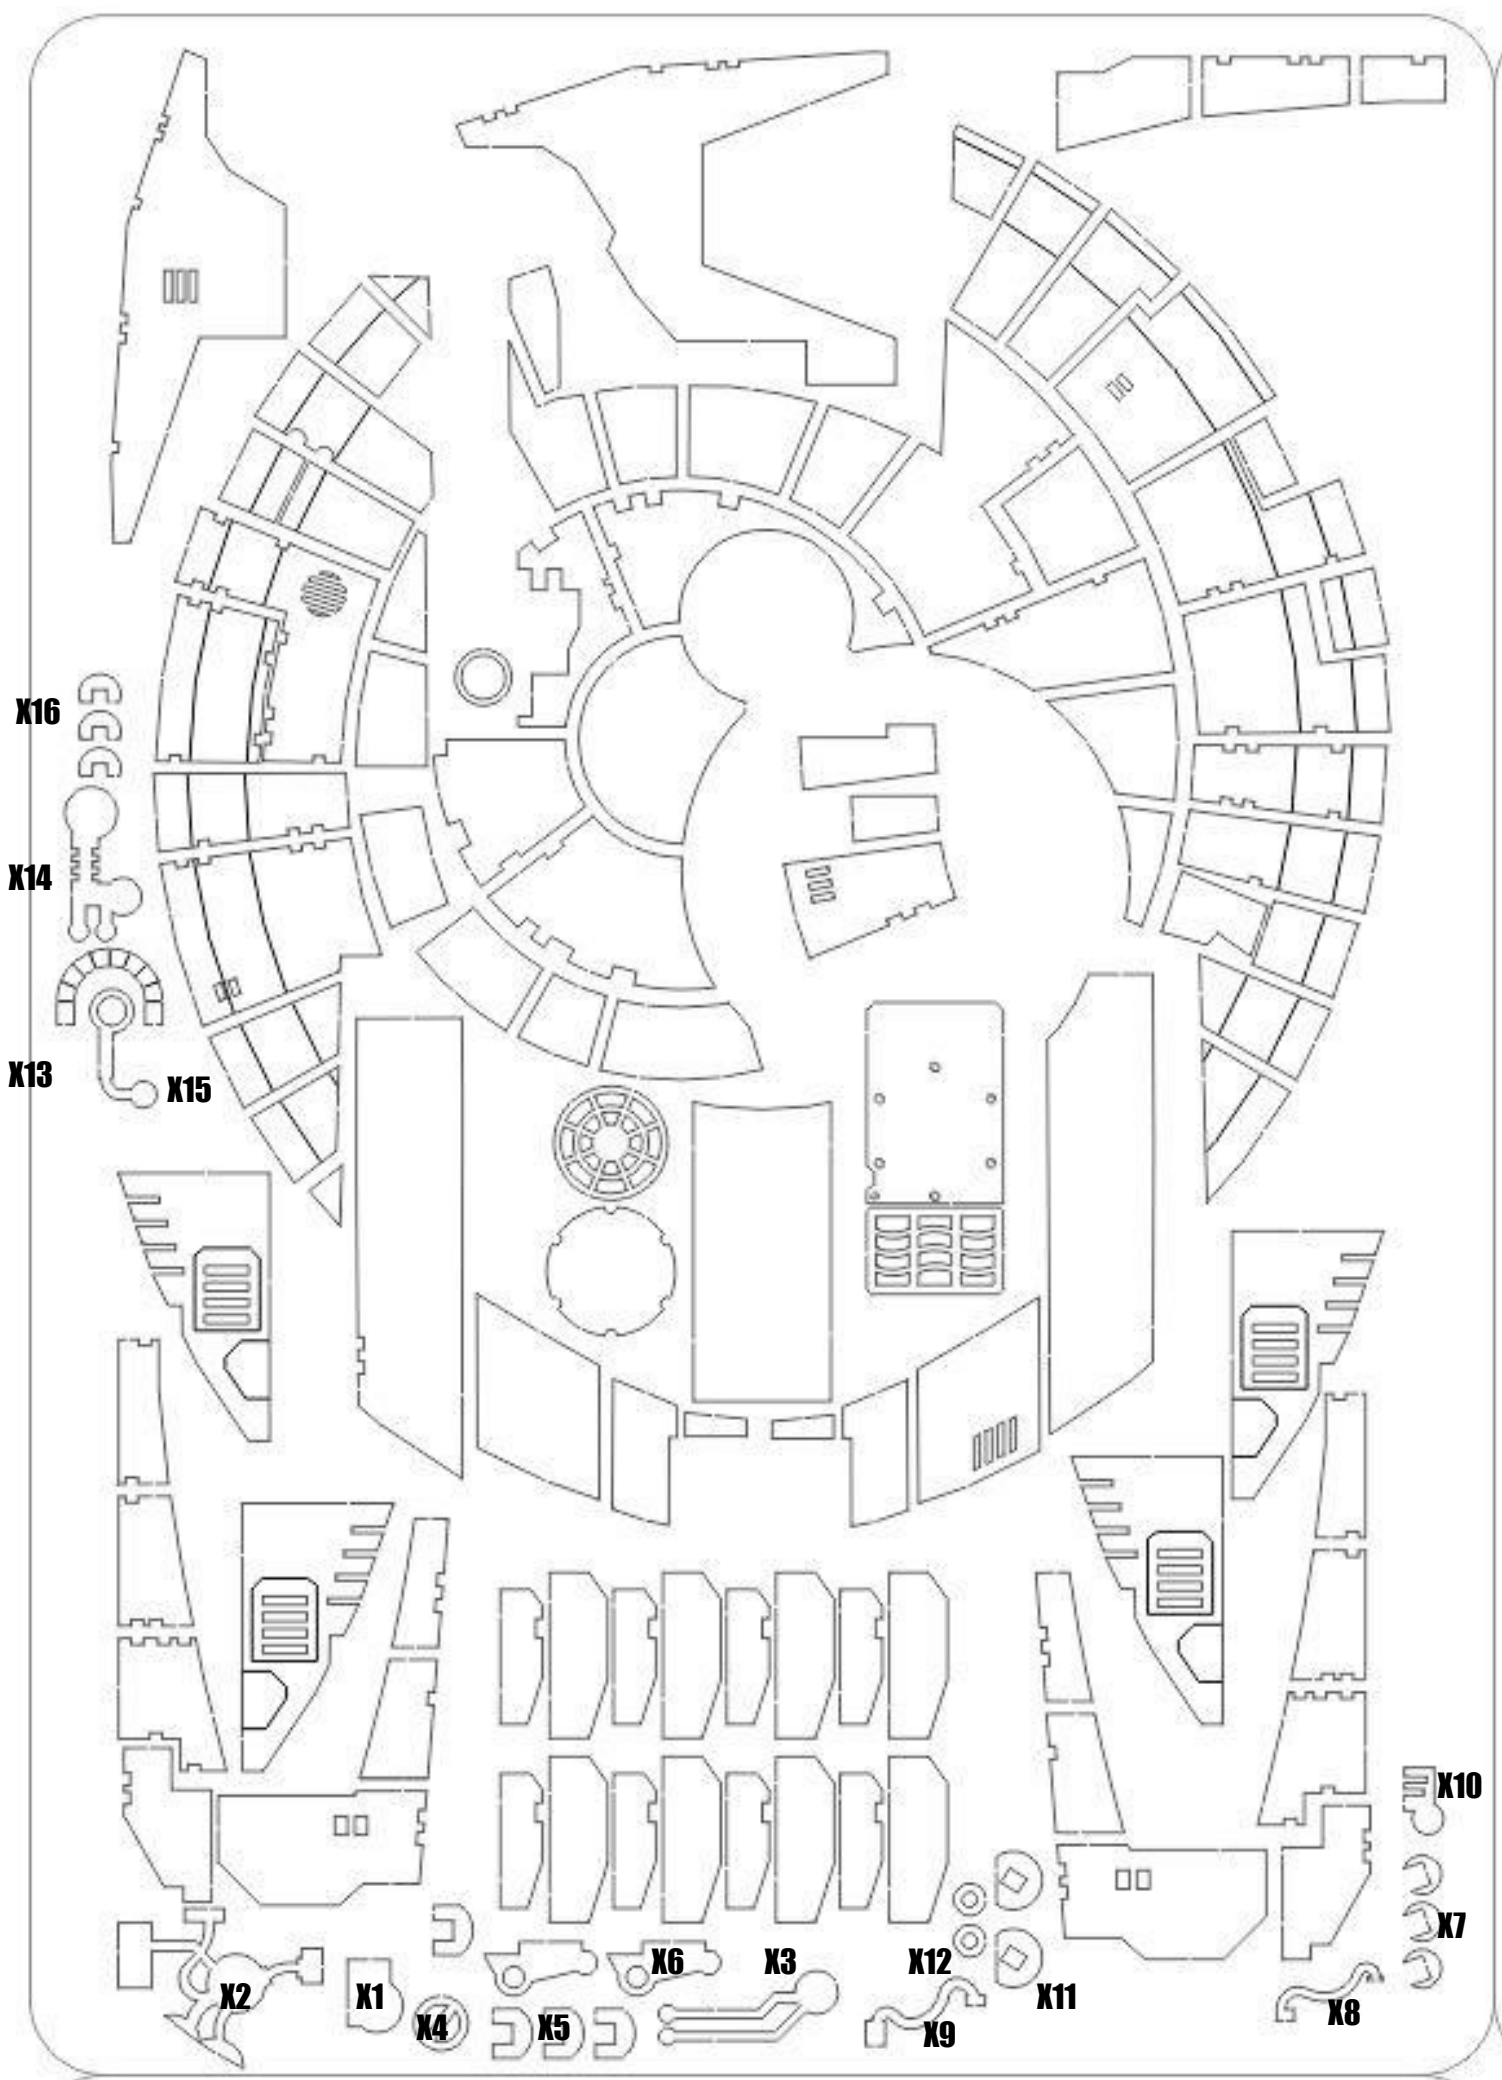


D90

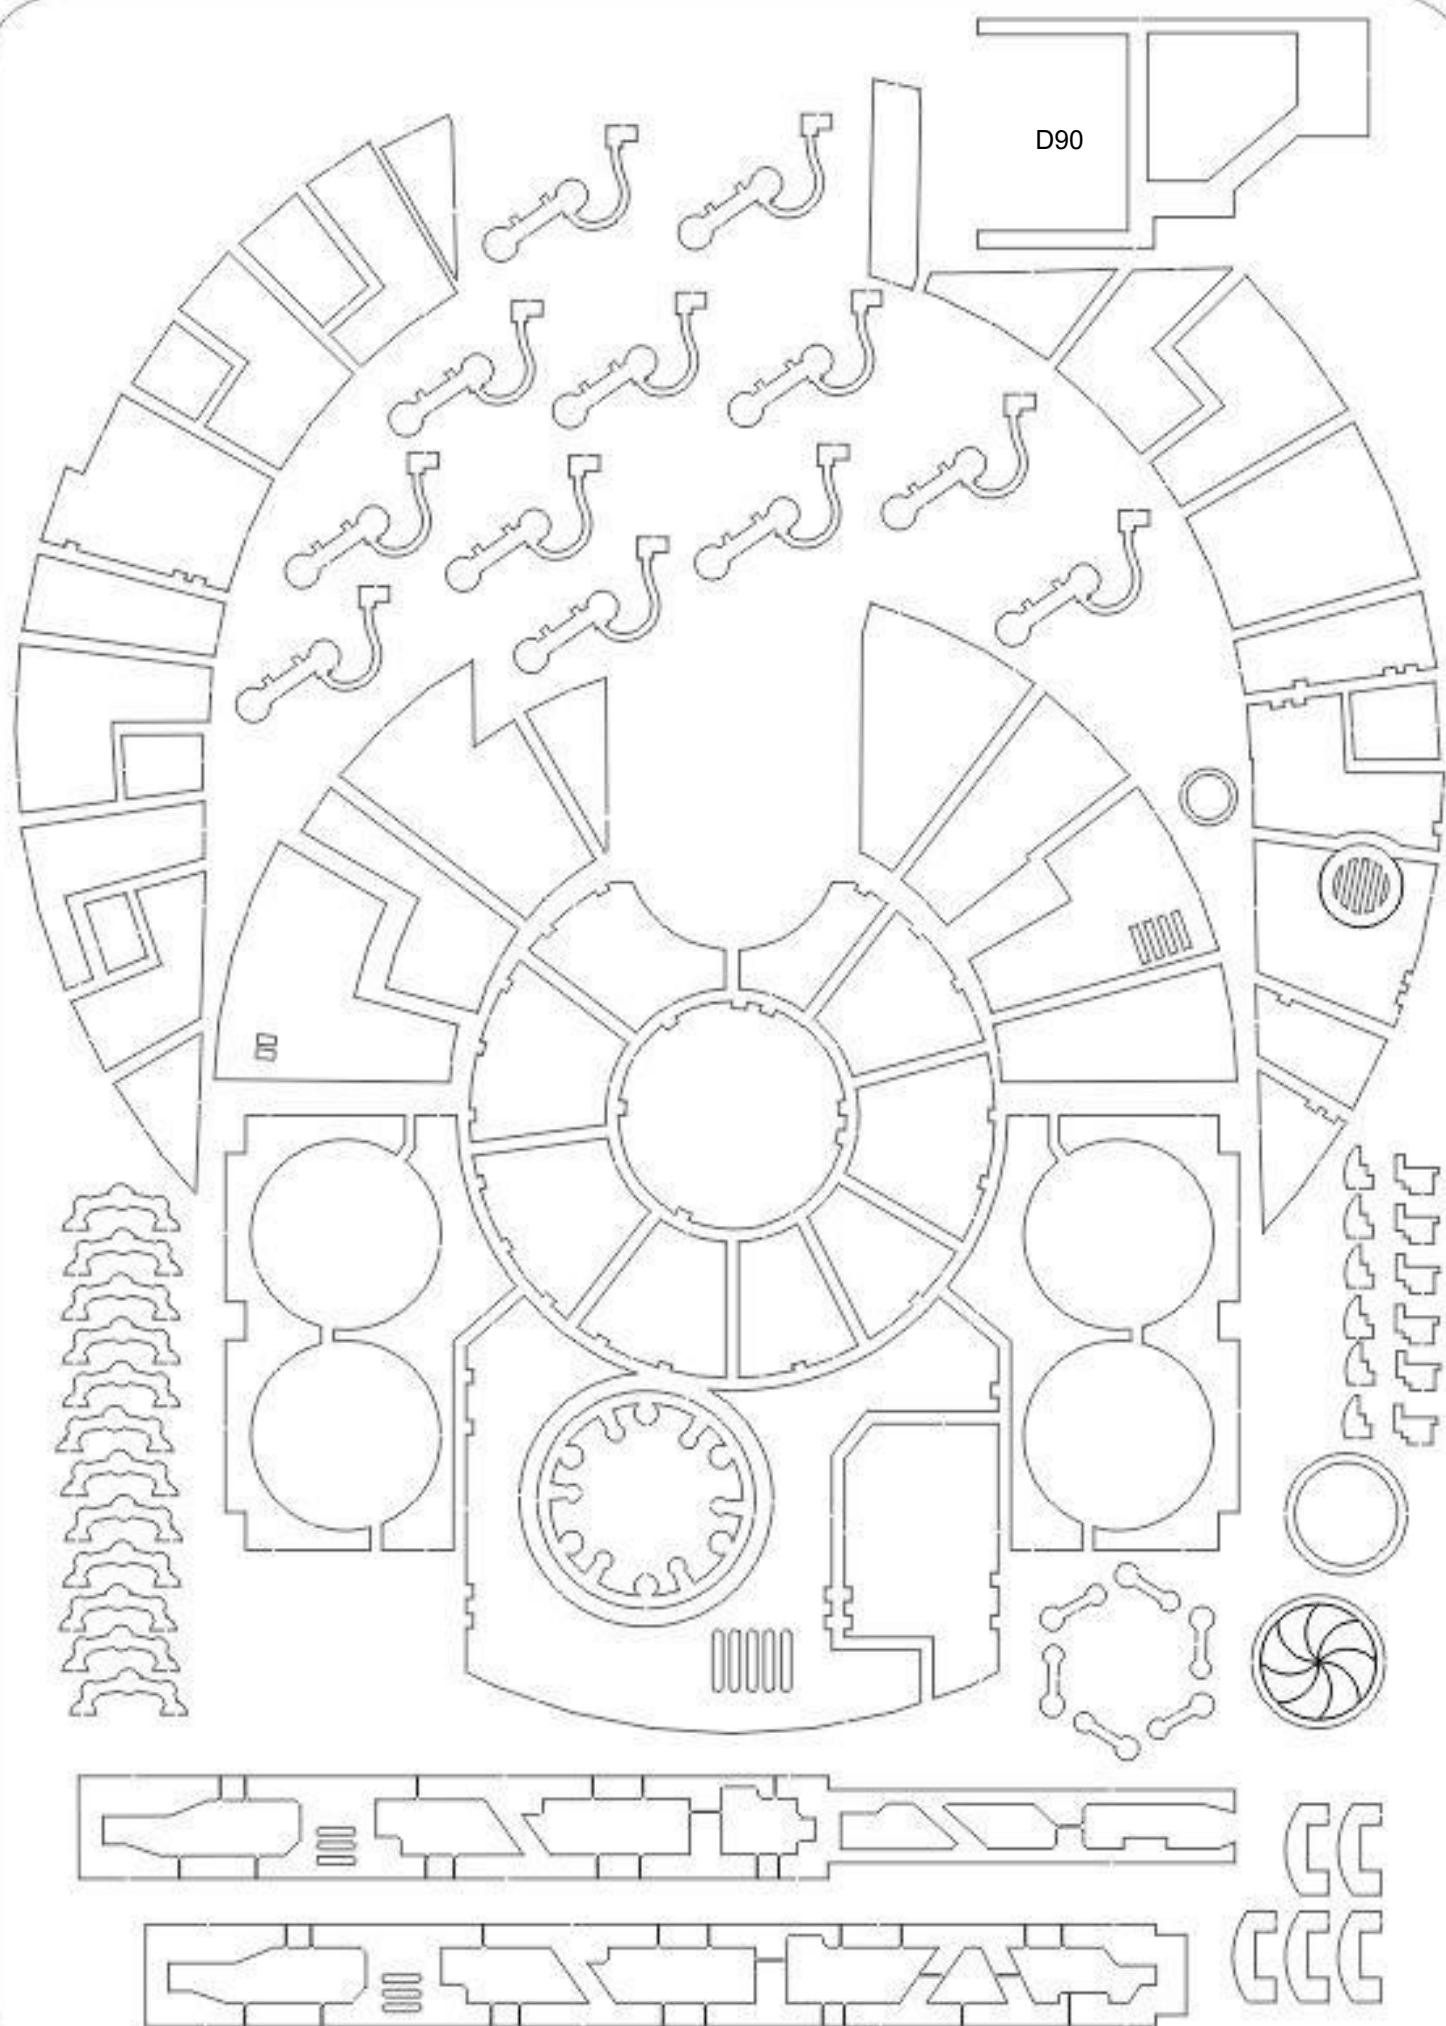



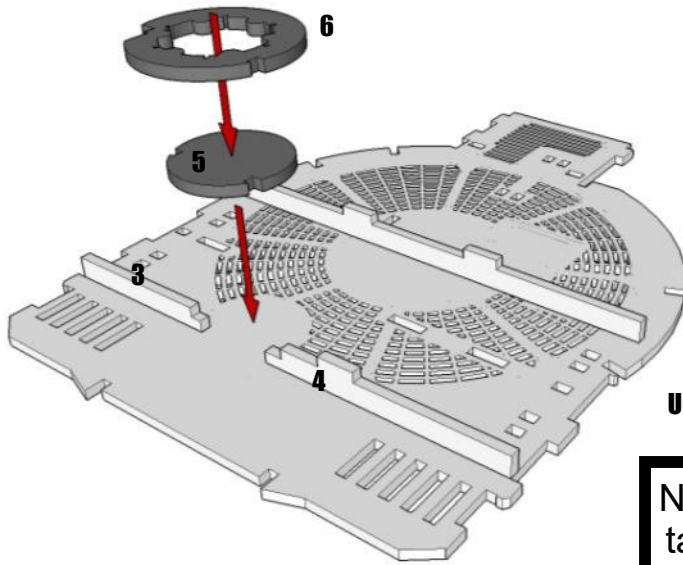





Underside of floor.




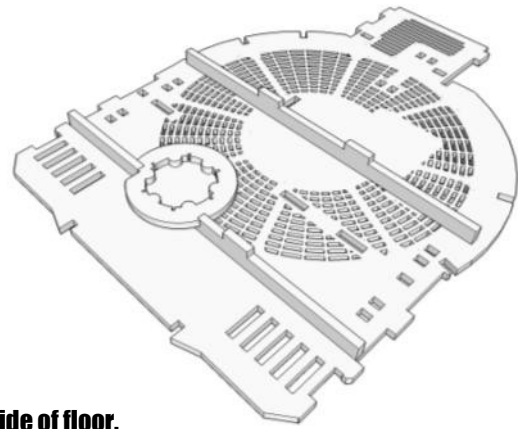



Note that the instructions show the detailed floor for the deluxe version. The easy-build version does not have the grating holes.

Top-side of Floor.

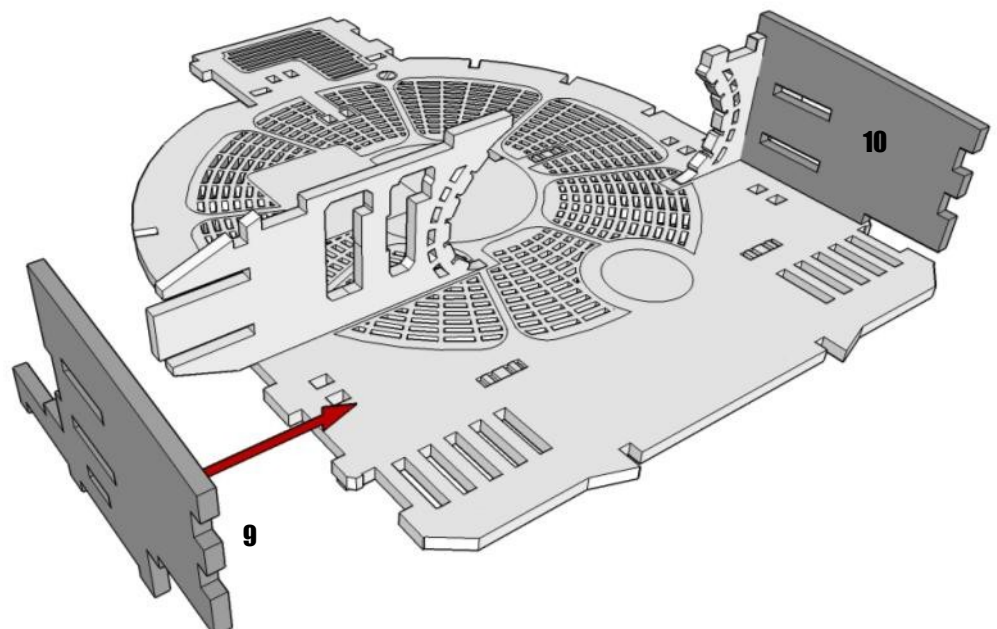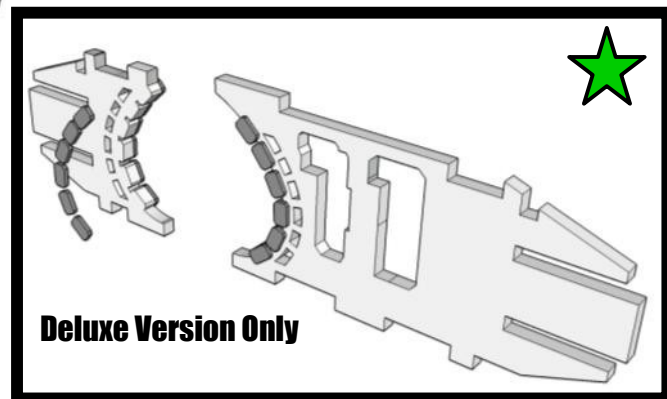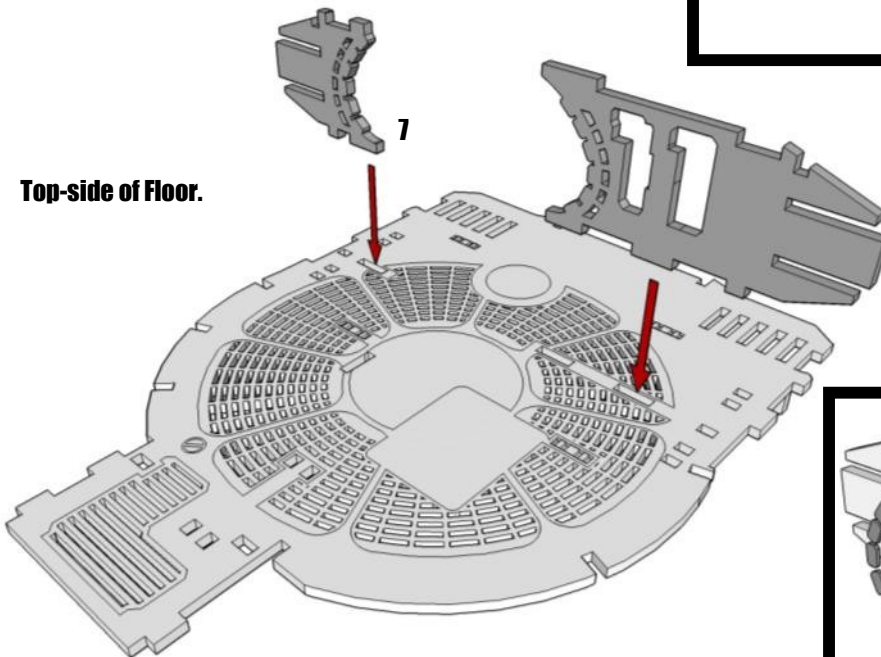


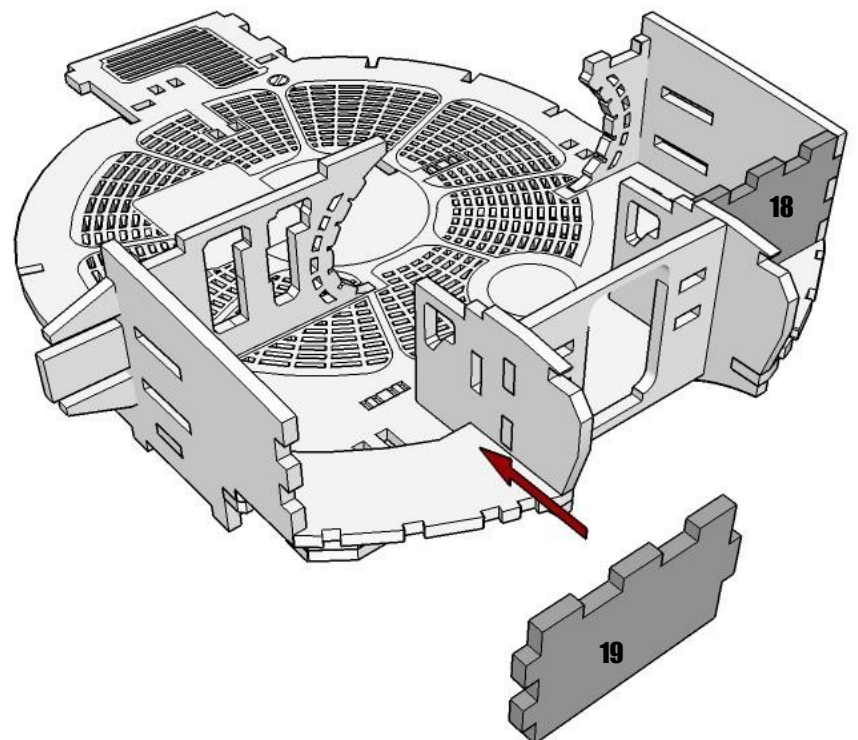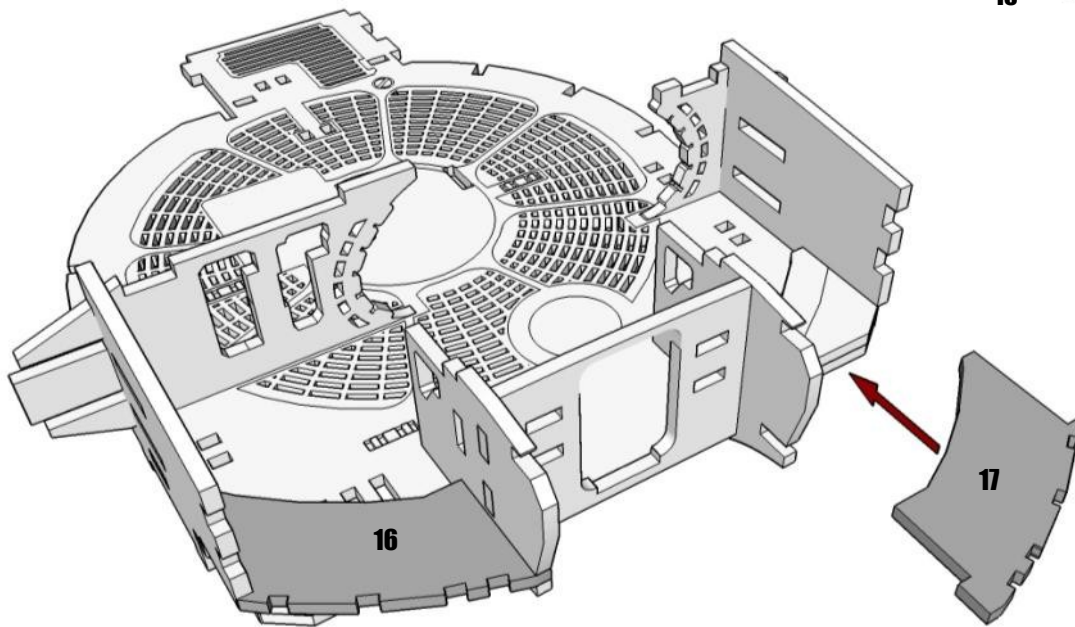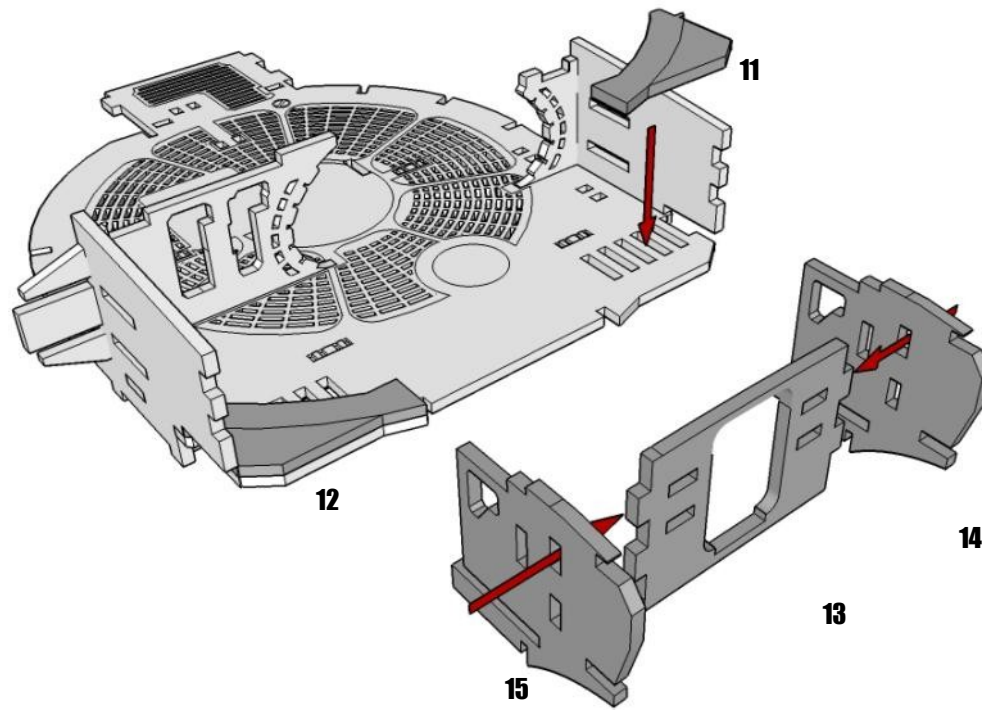

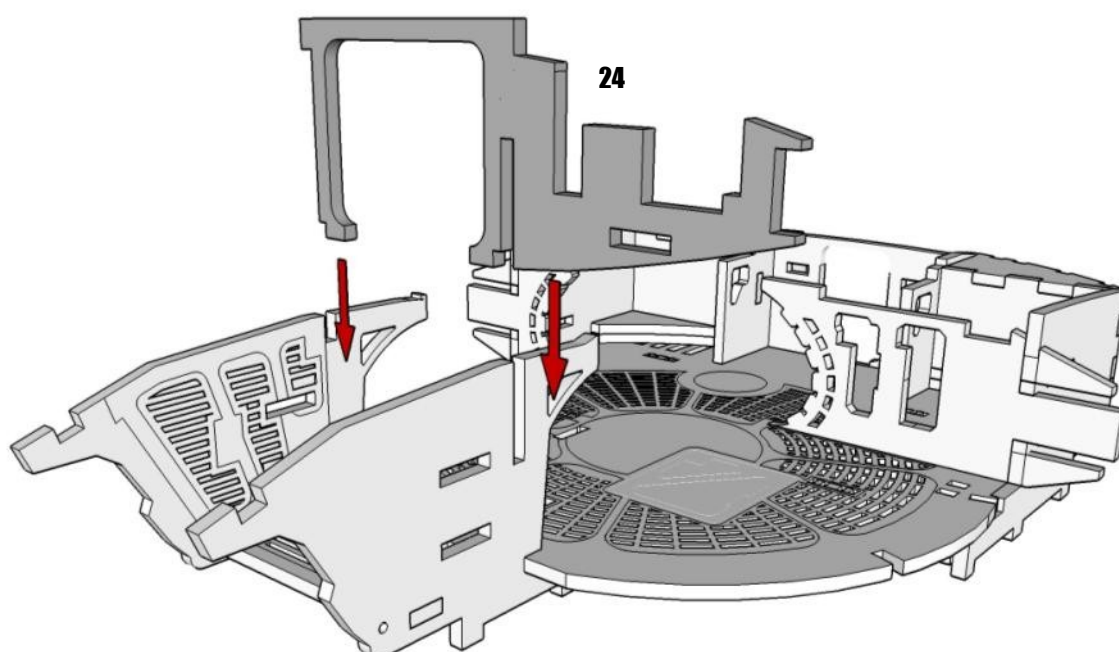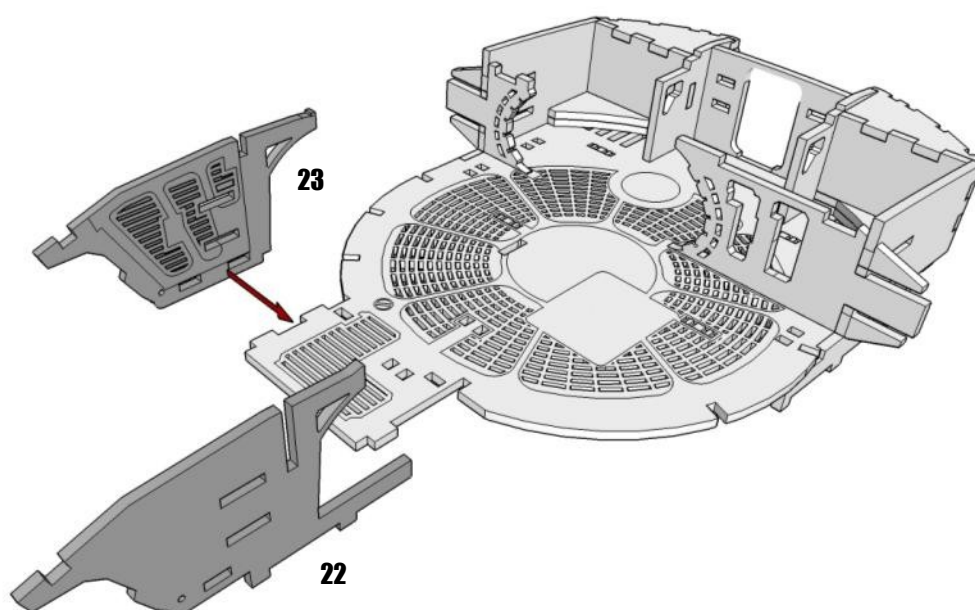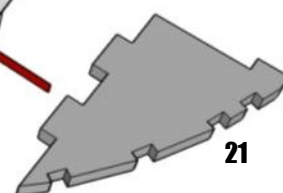
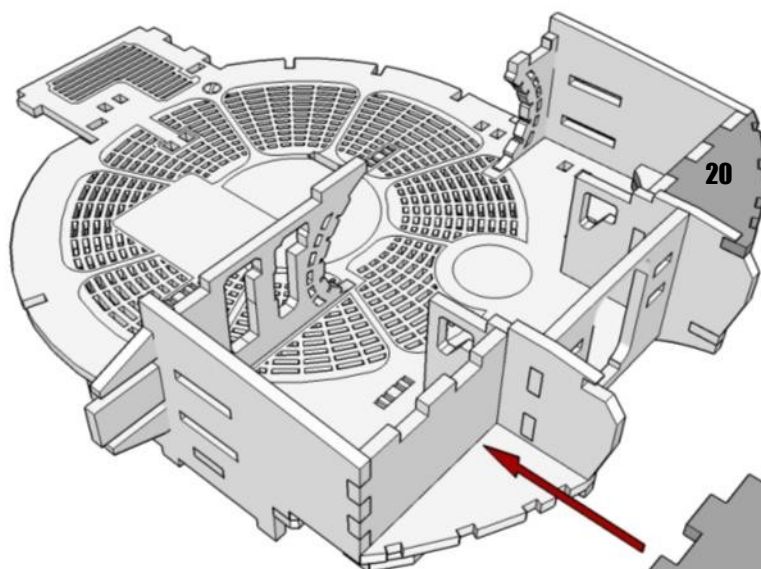


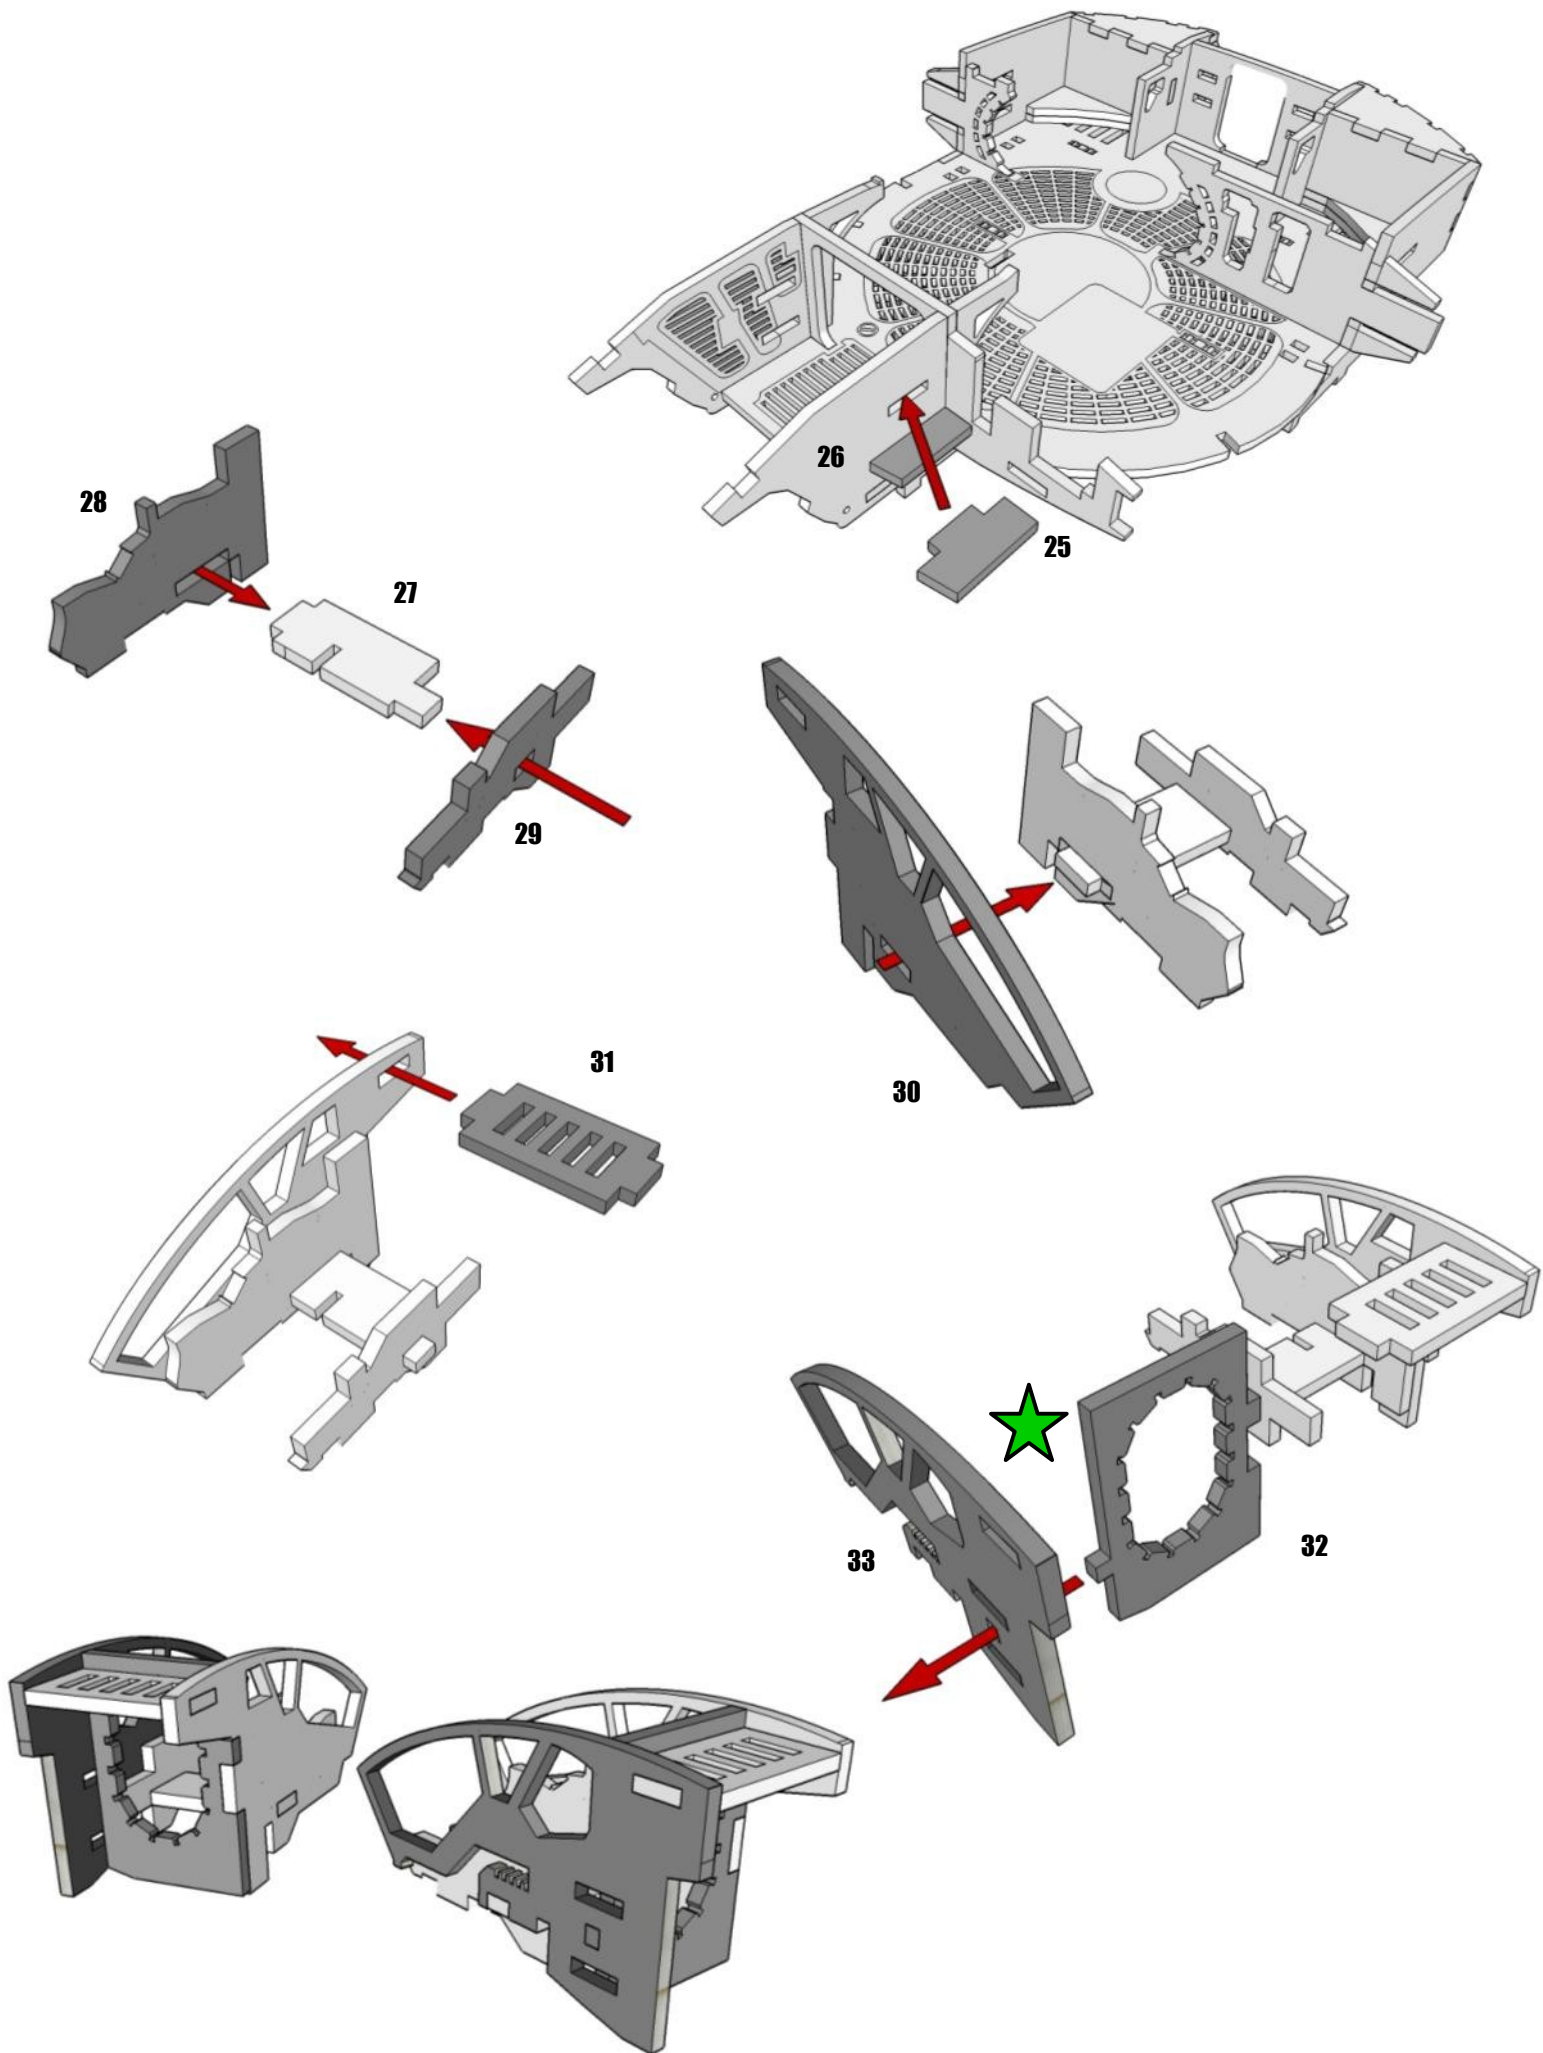




This about the best time to add the cockpit detail. See the interior instructions for your version for clear explanation.




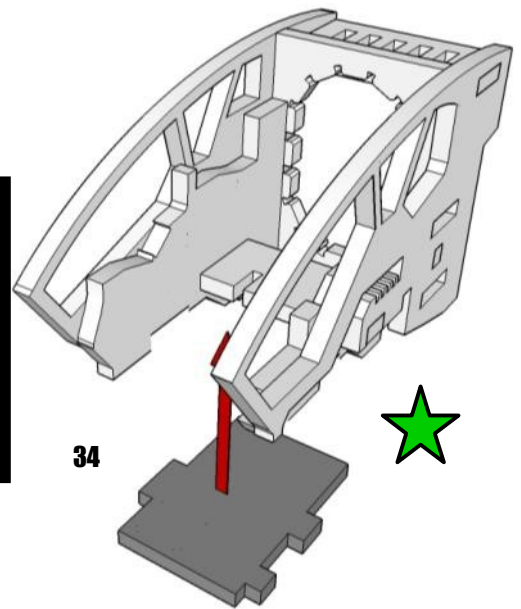



34

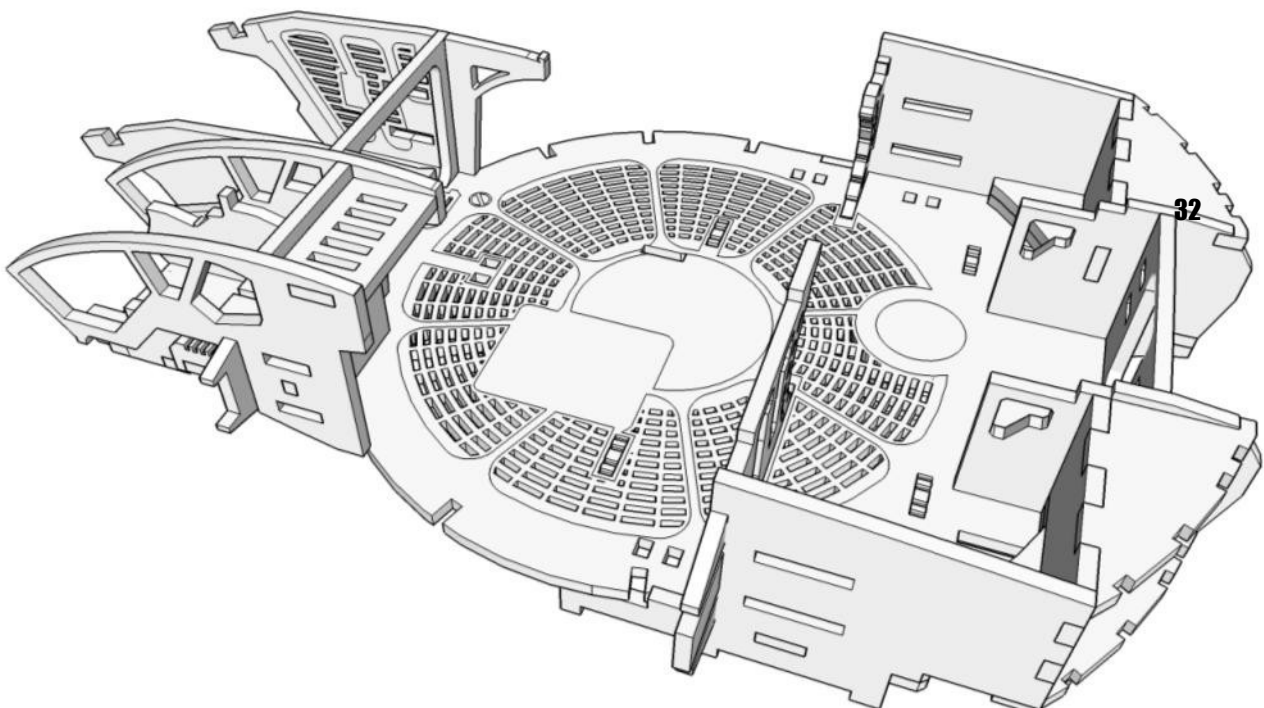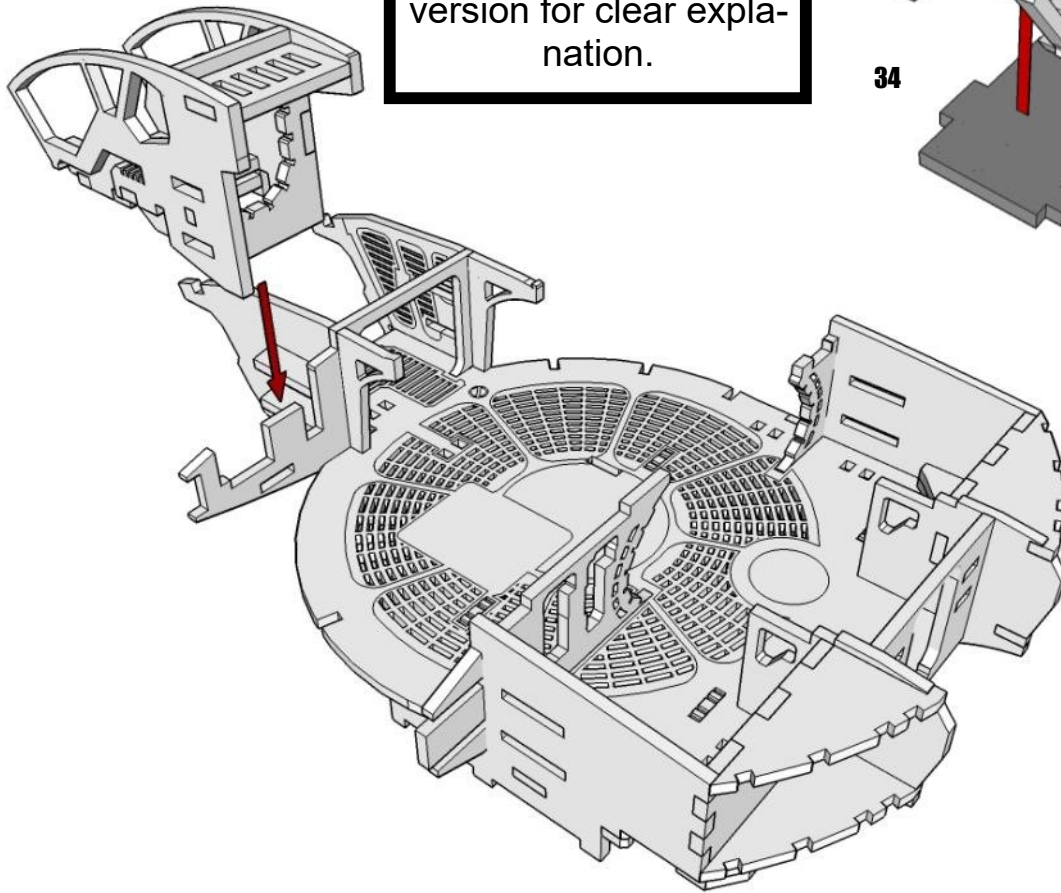




32


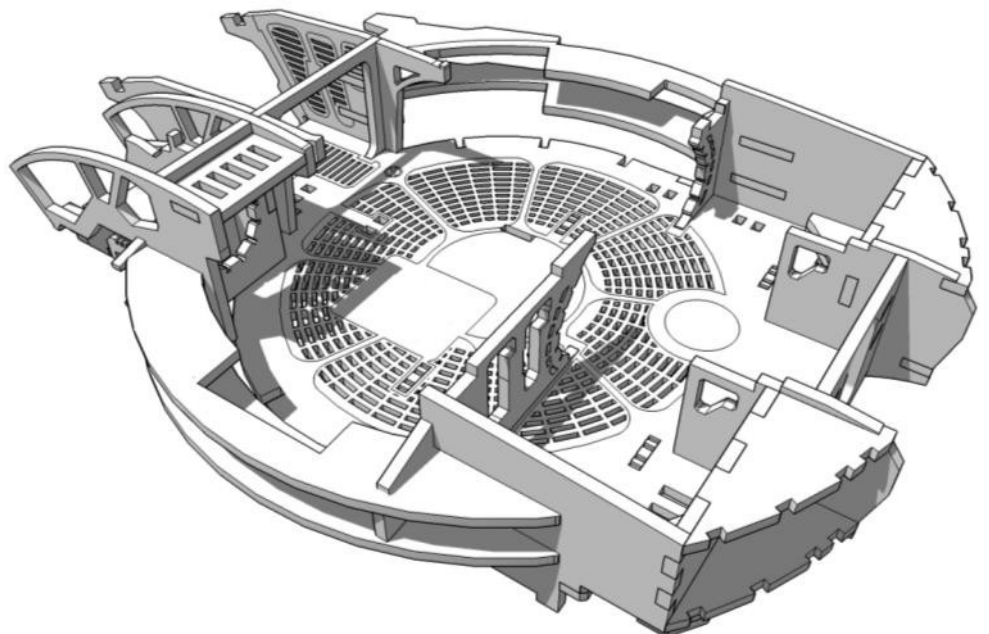
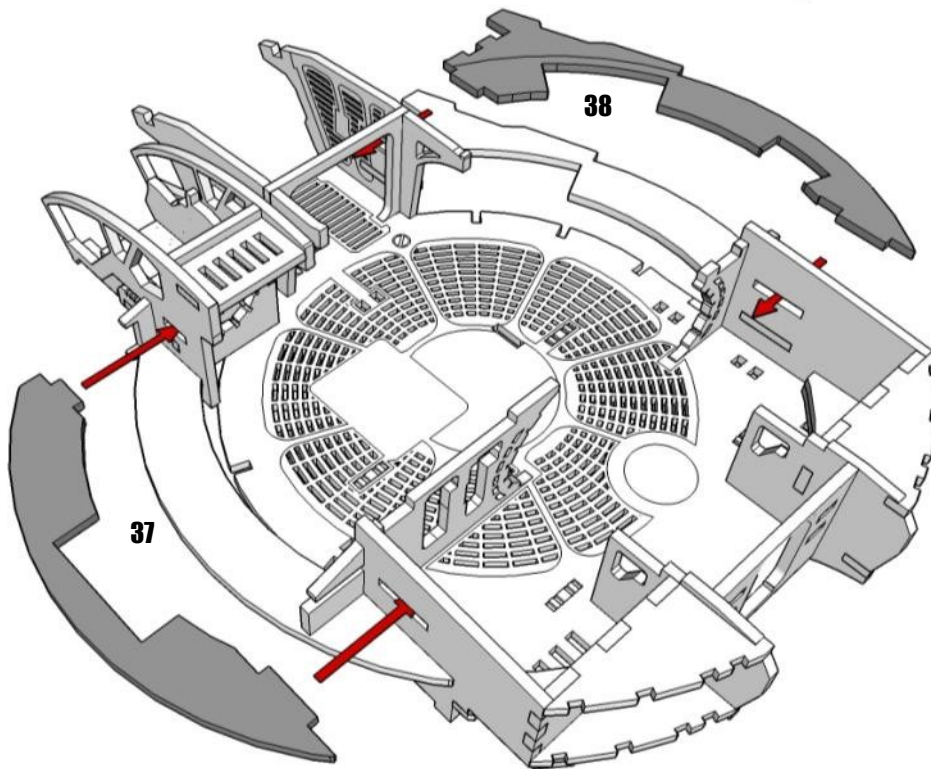
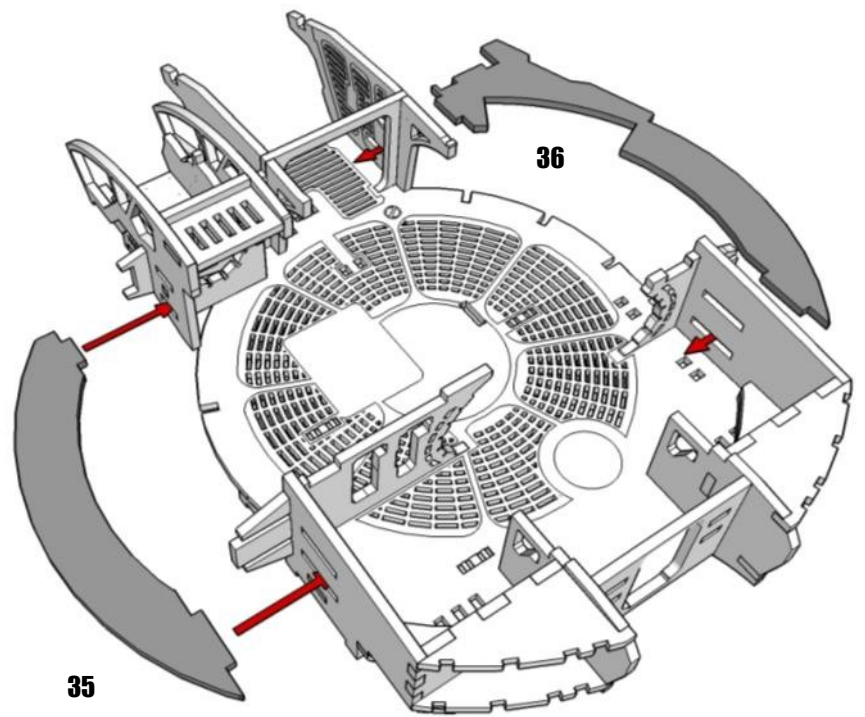


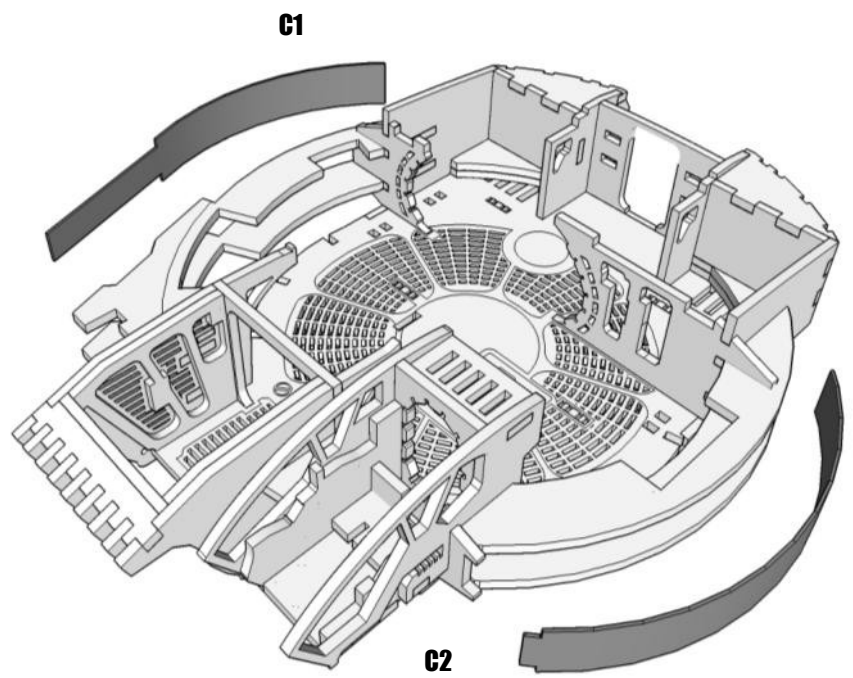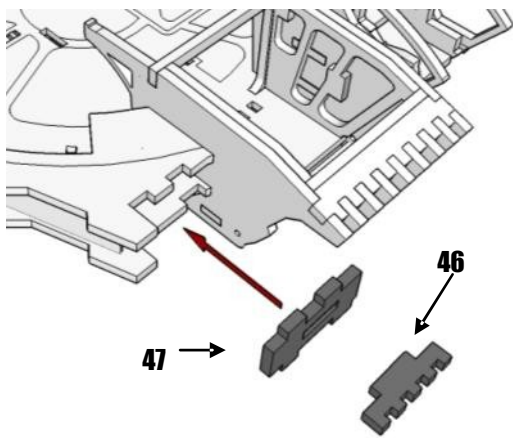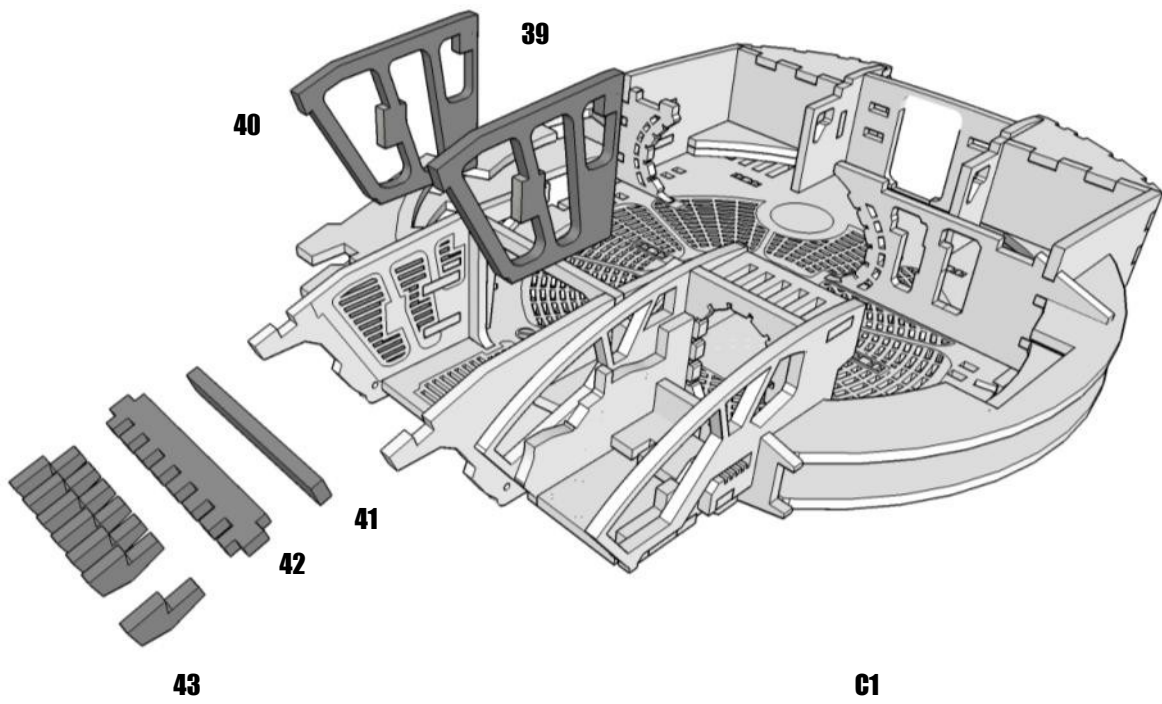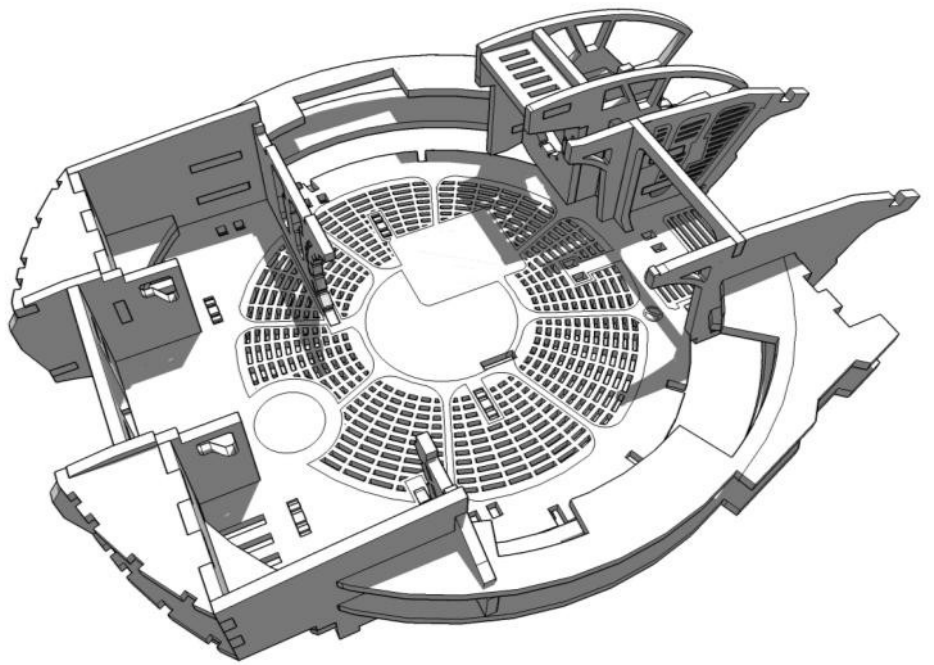



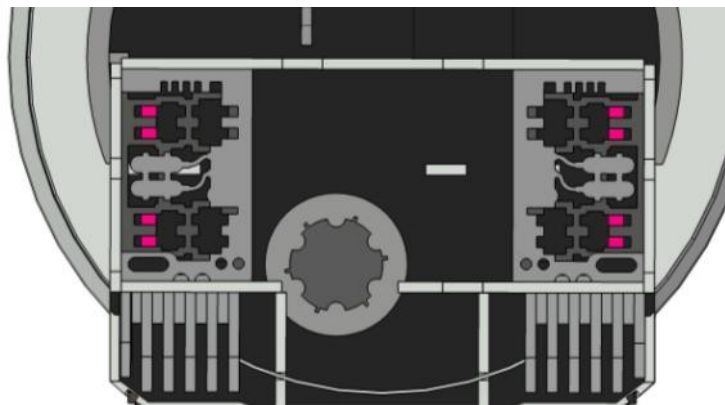


Note the direction of the undercarriage well plates and be careful not to obscure the UC mounting holes!!!!

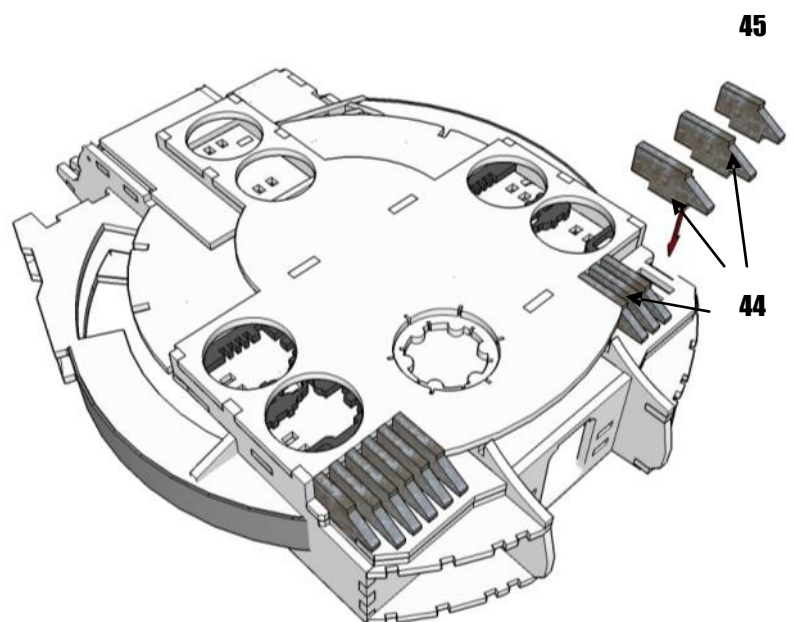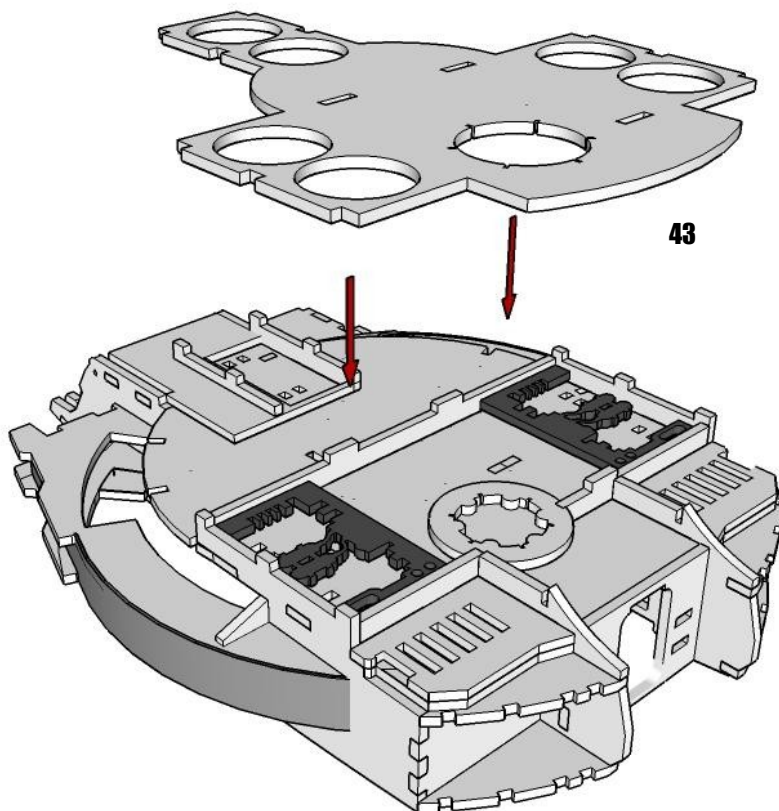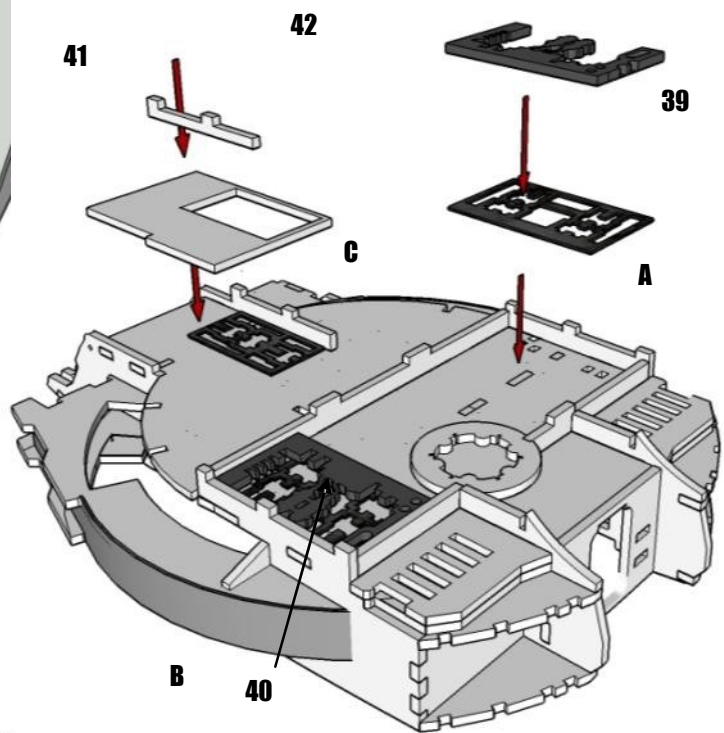


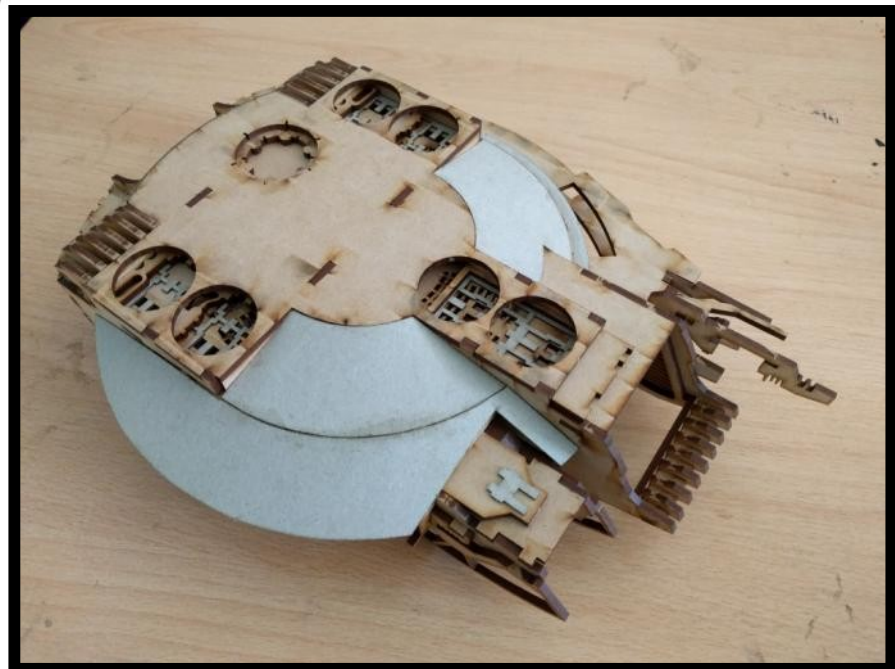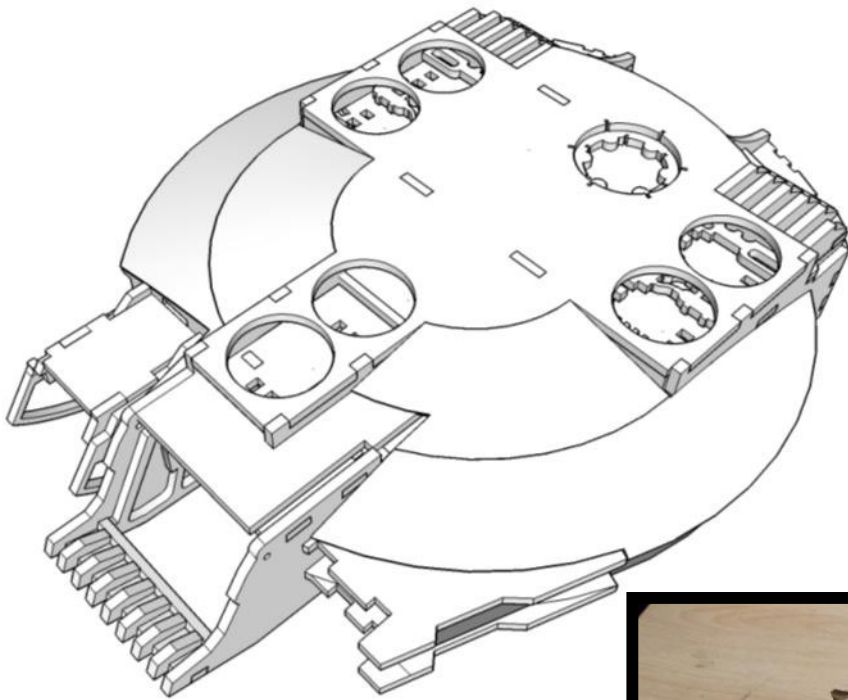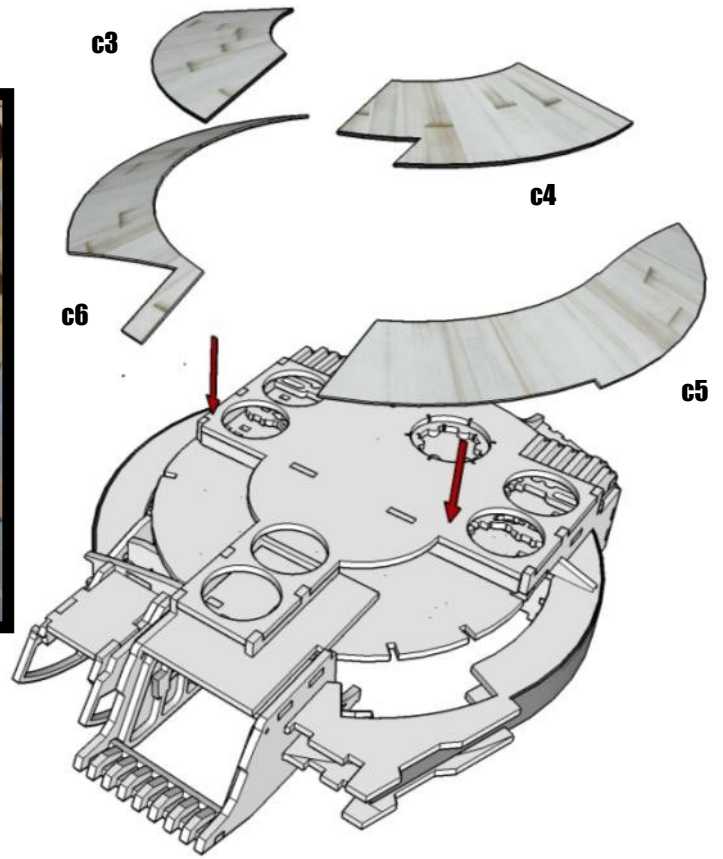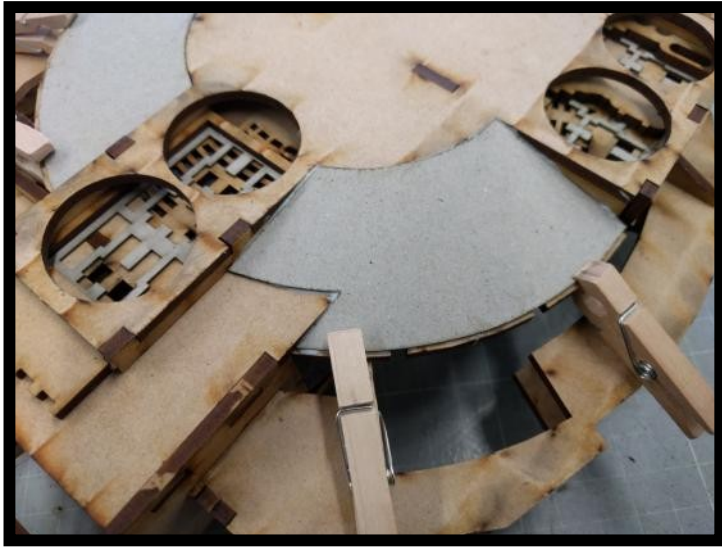

It's easiest to attach parts 48 first.

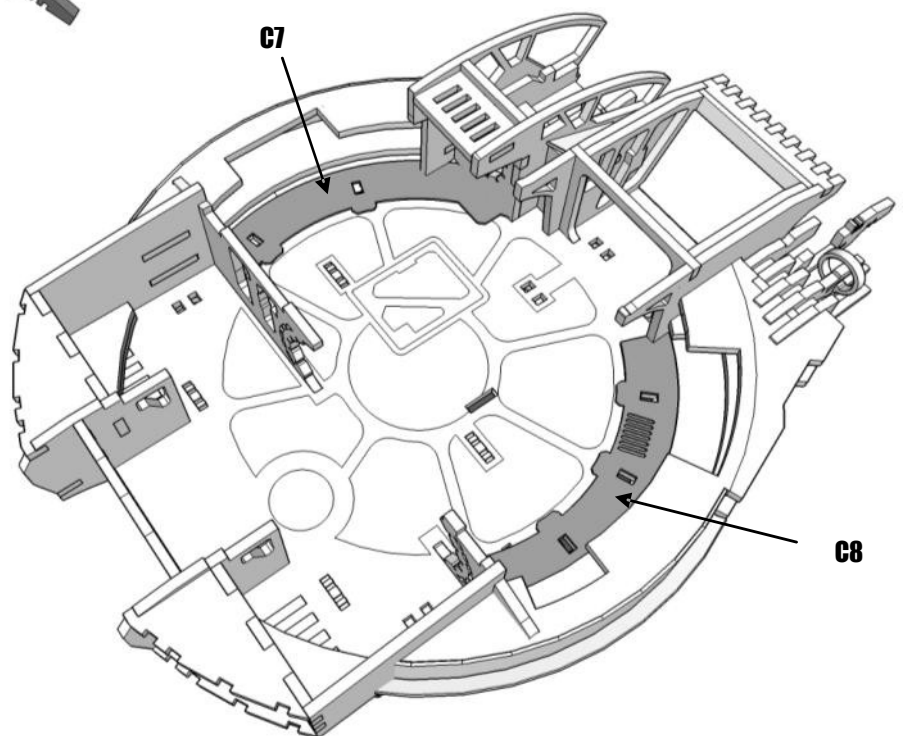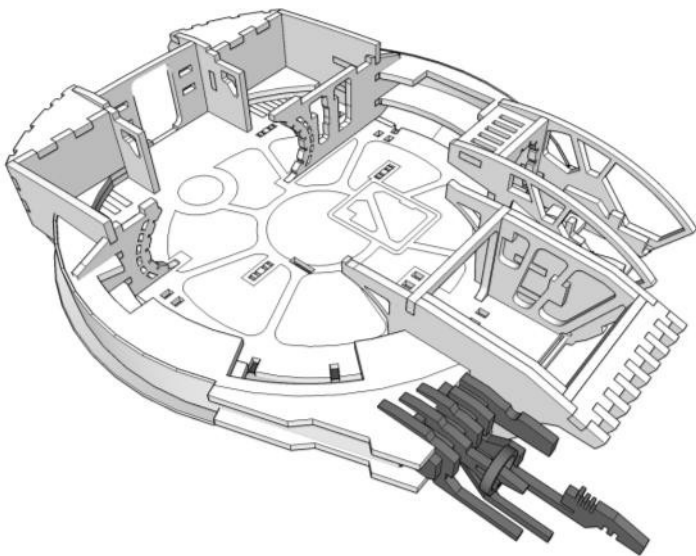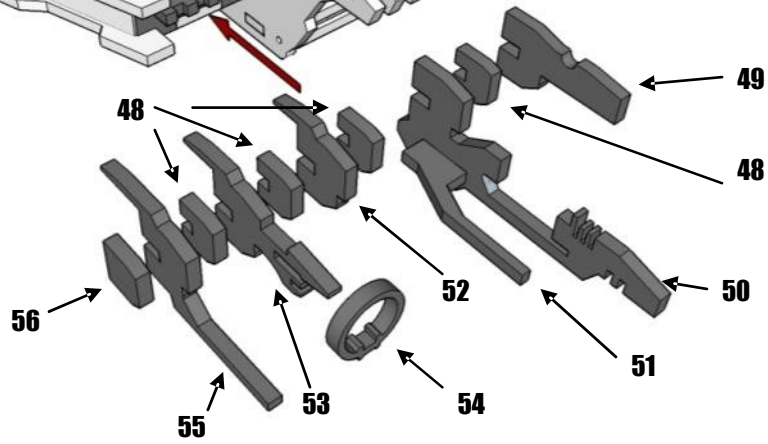

c10

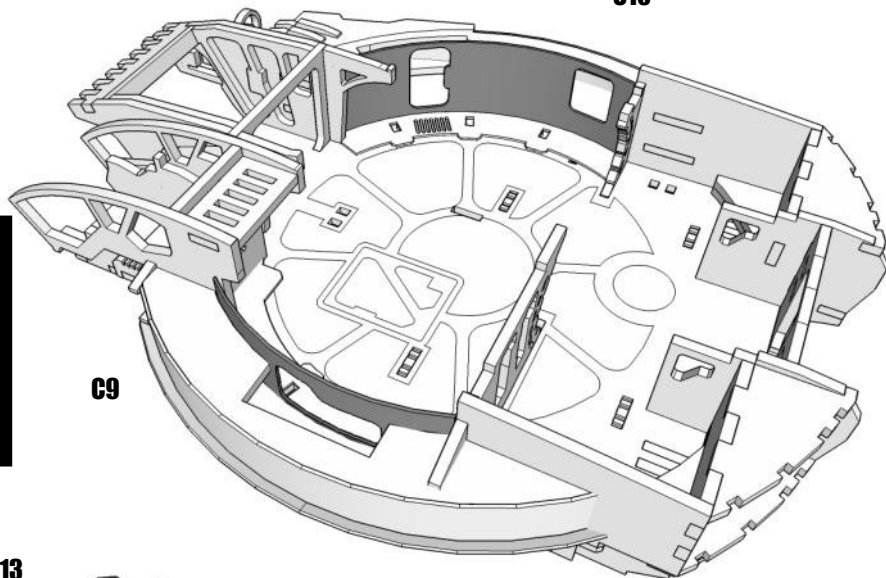

c9

note that If you have the De-
luxe Version, You will need
to add the toilet parts now.



c13

c12

c11



Now is a good time to begin
adding and painting the inter-
ior parts. Refer to the interior
instructions for your version.


c15


c14

c17

c16

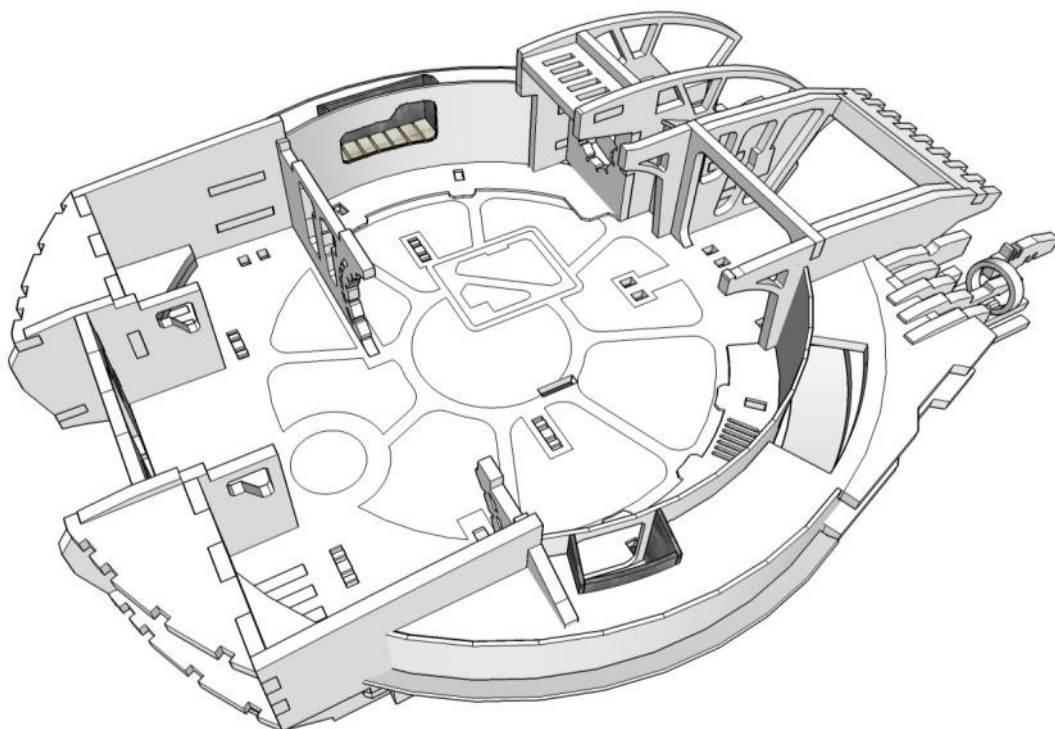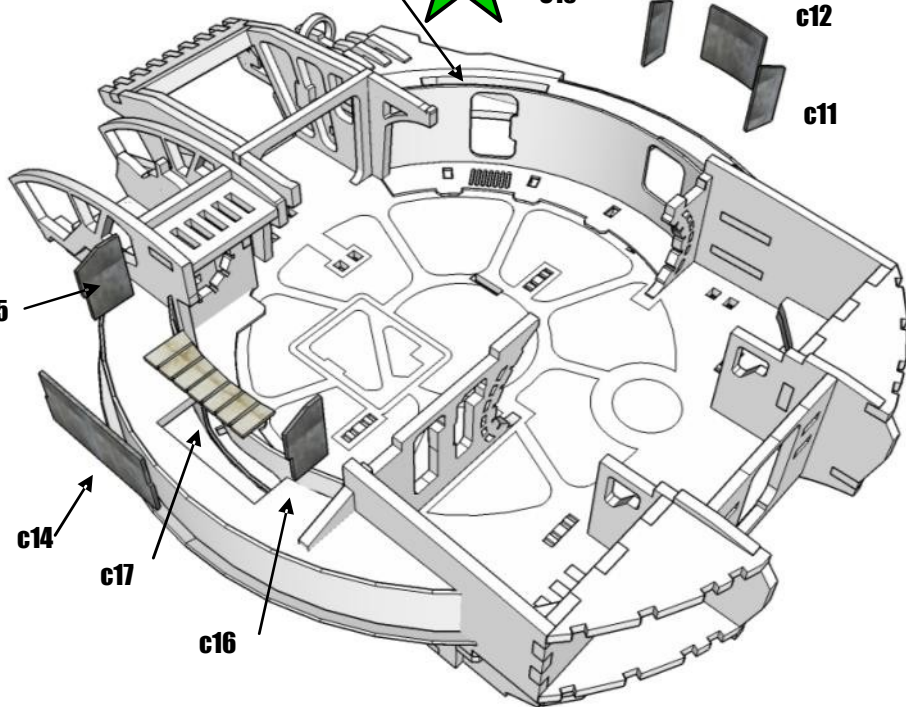


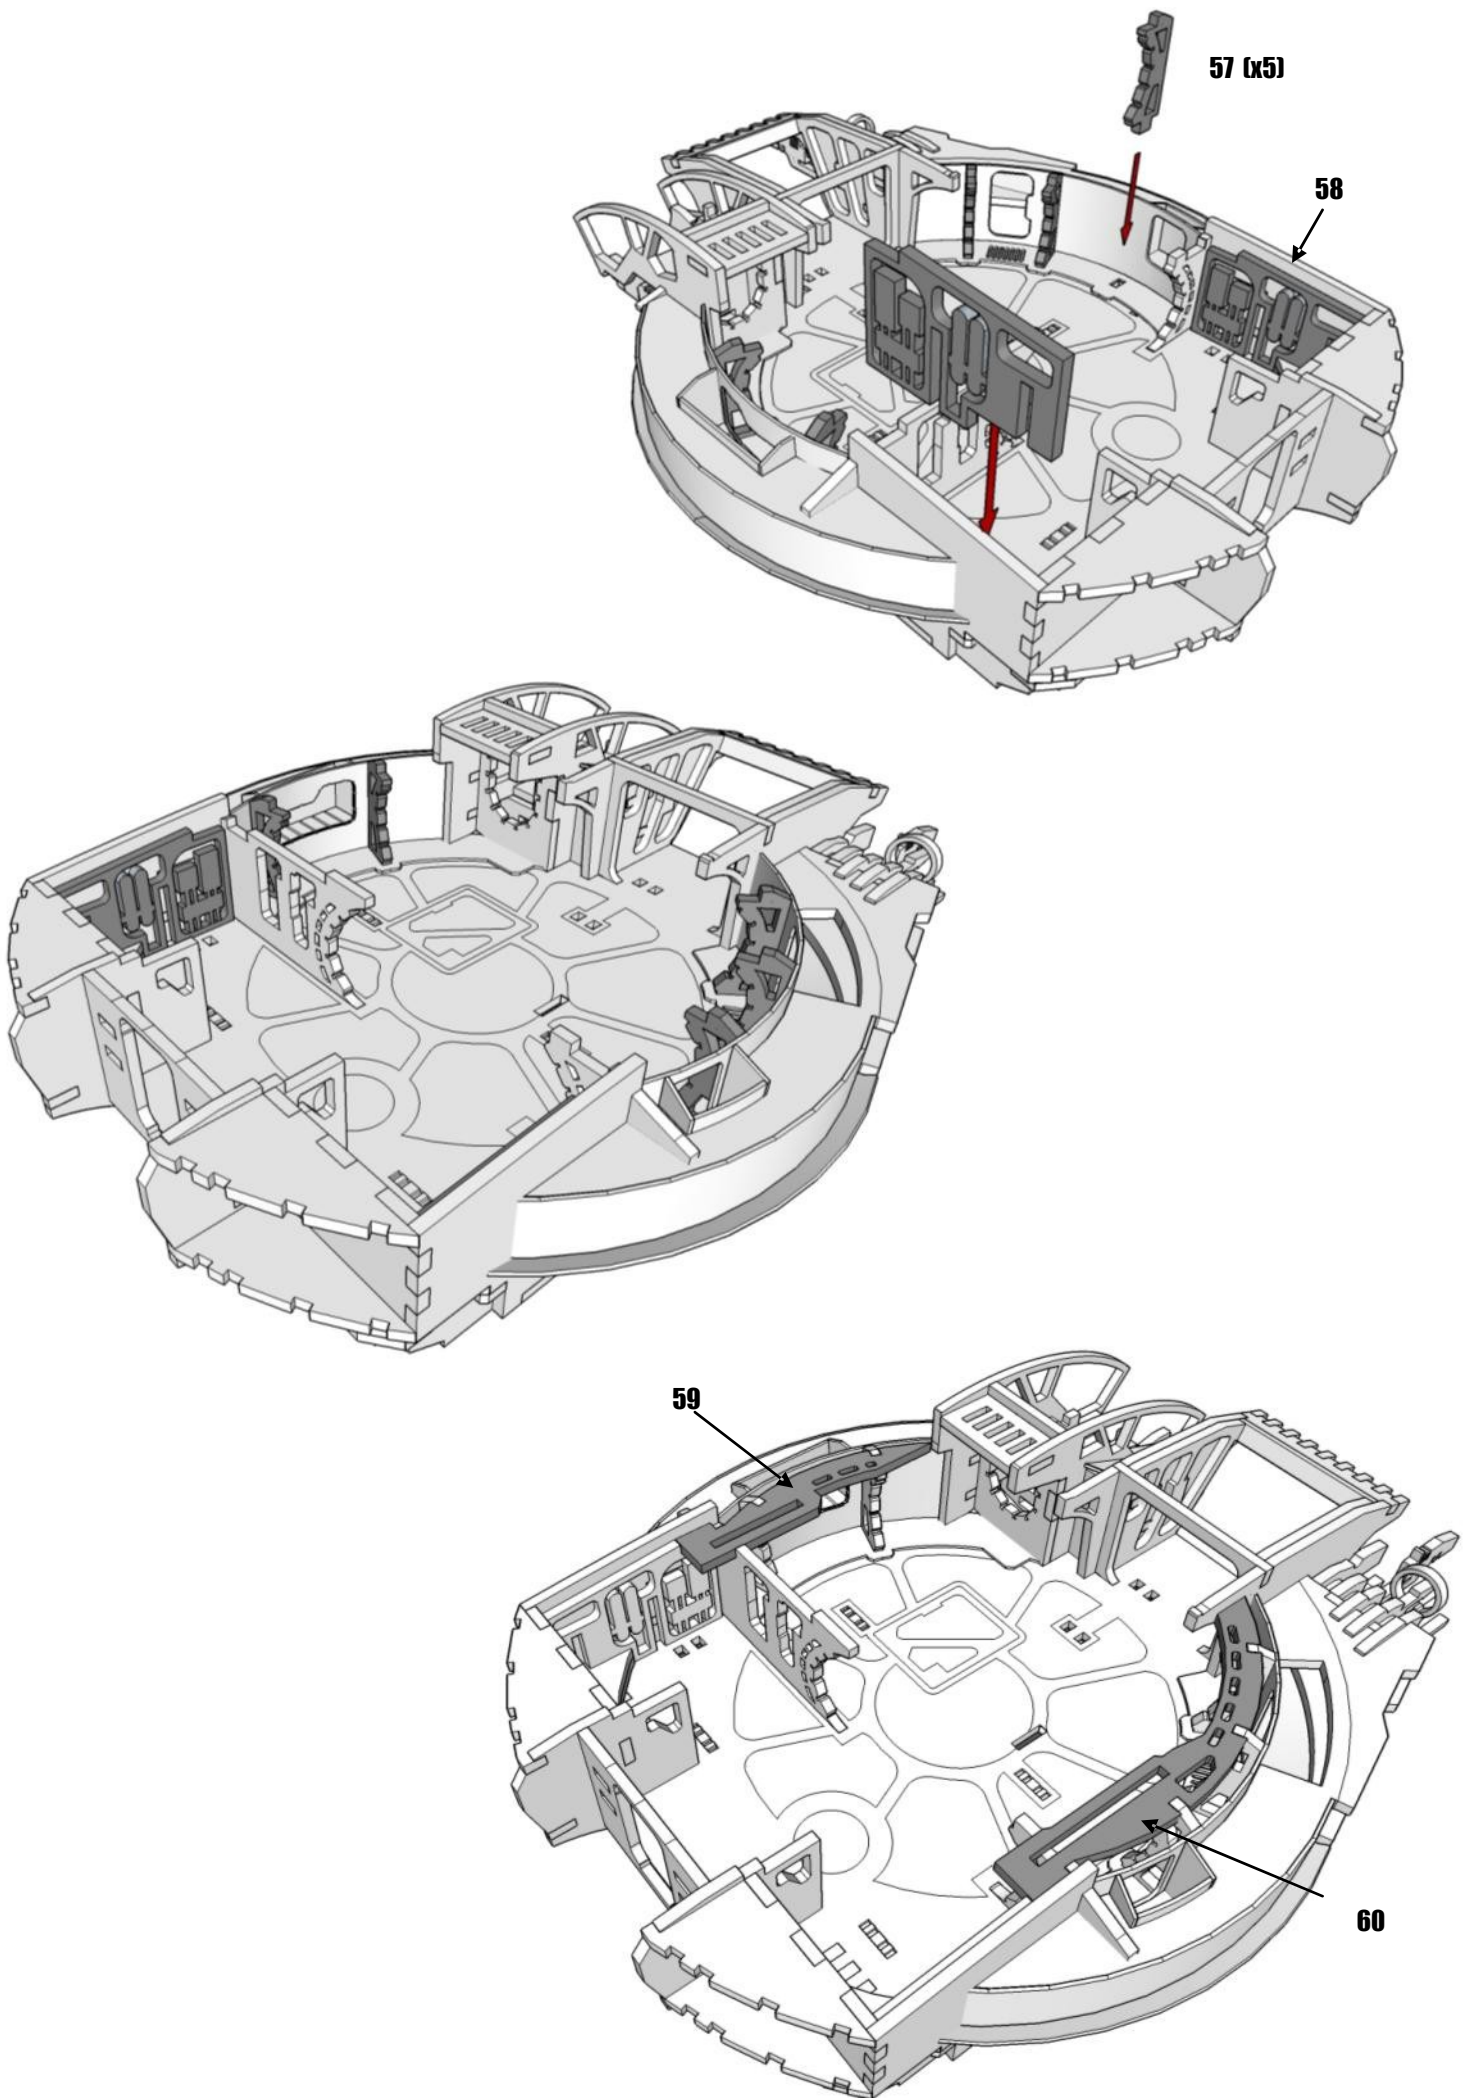


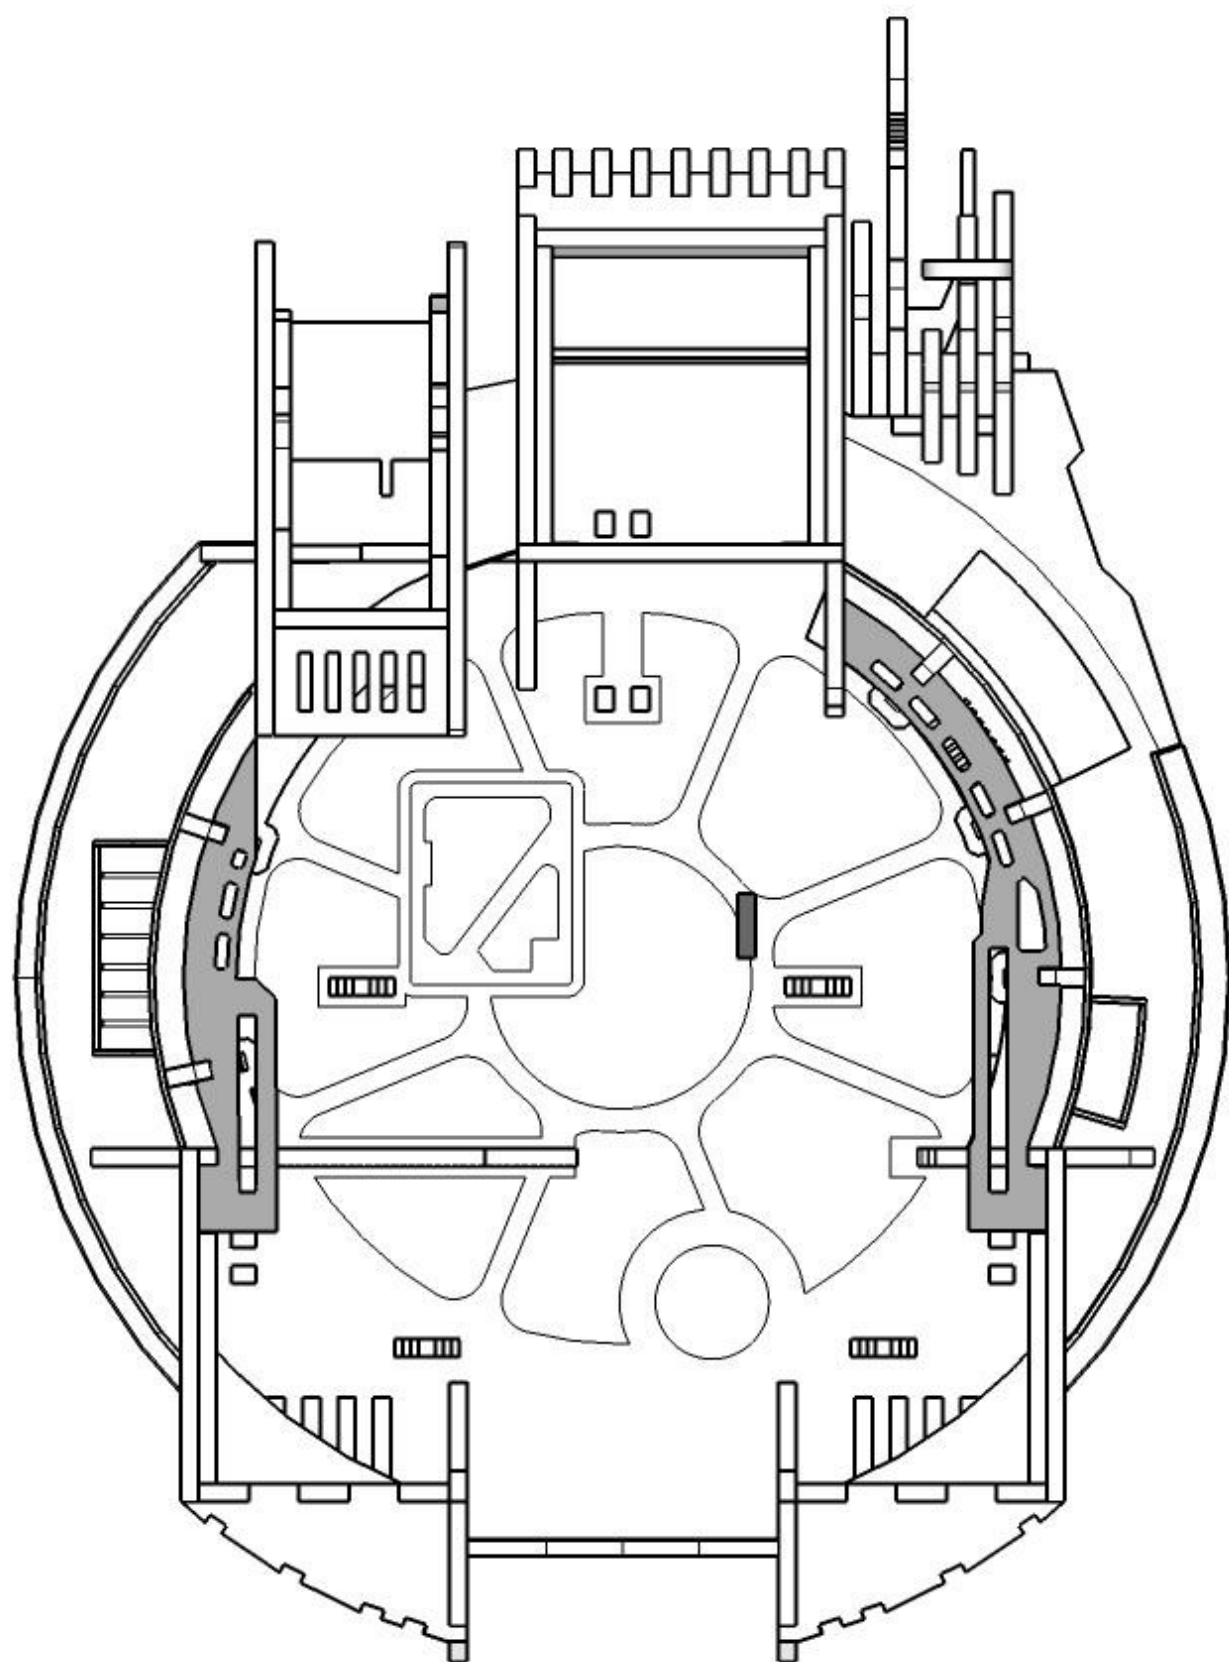



Allow this part to dry flat on the table.

Actually, it's best to leave all of the following 4 or 5 steps to dry between stages.


Skip ahead to the undercarriage, if you like, while you are waiting.

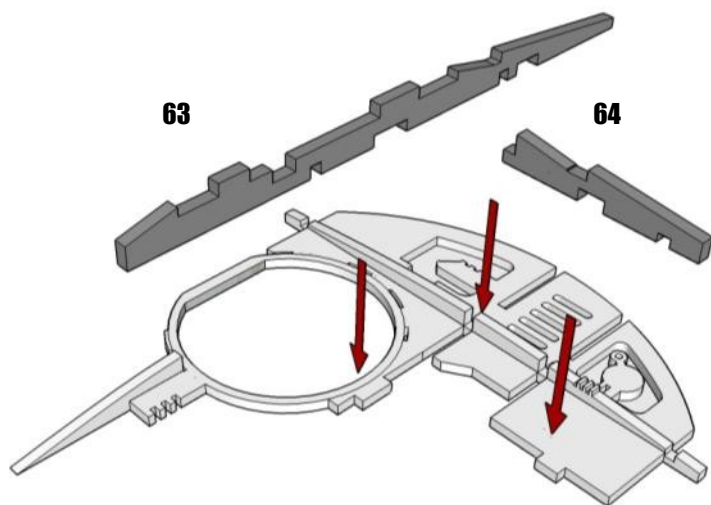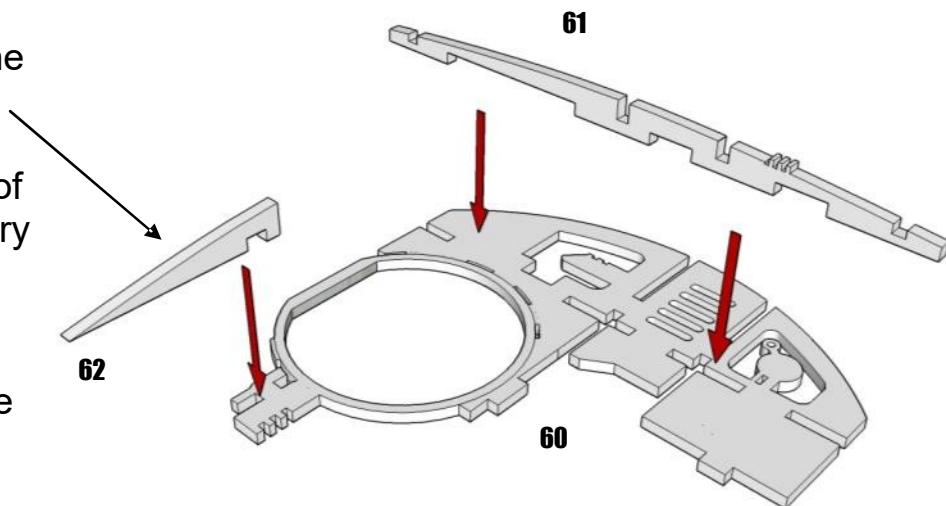


Note: The entire roof frame assembly is quite fragile and prone to breakage **until** you attach the outer skins. But it IS much easier to check the roof for fit without them.

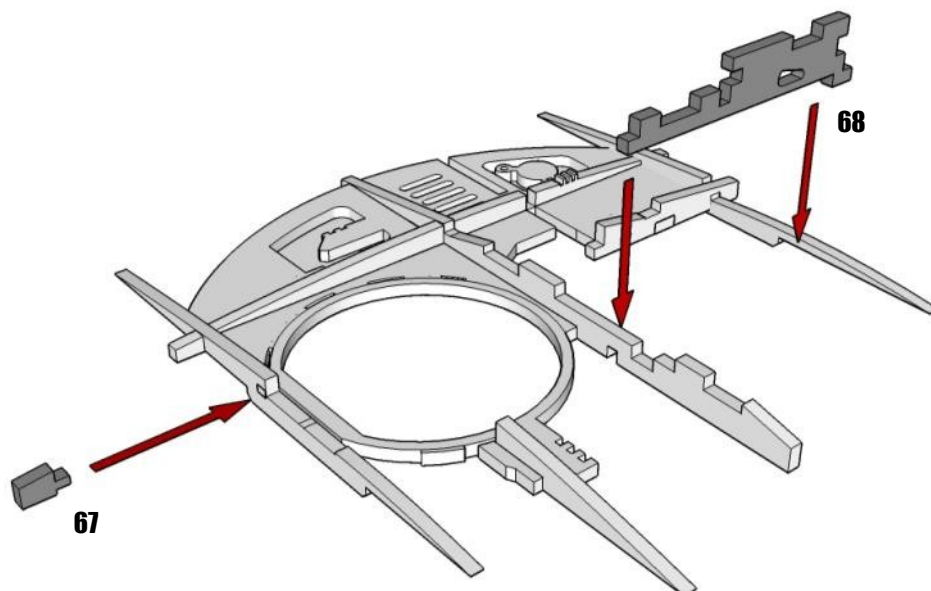
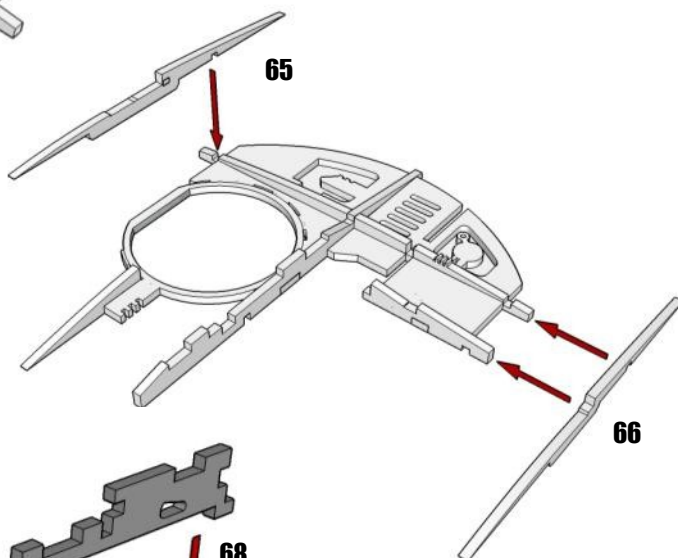


69


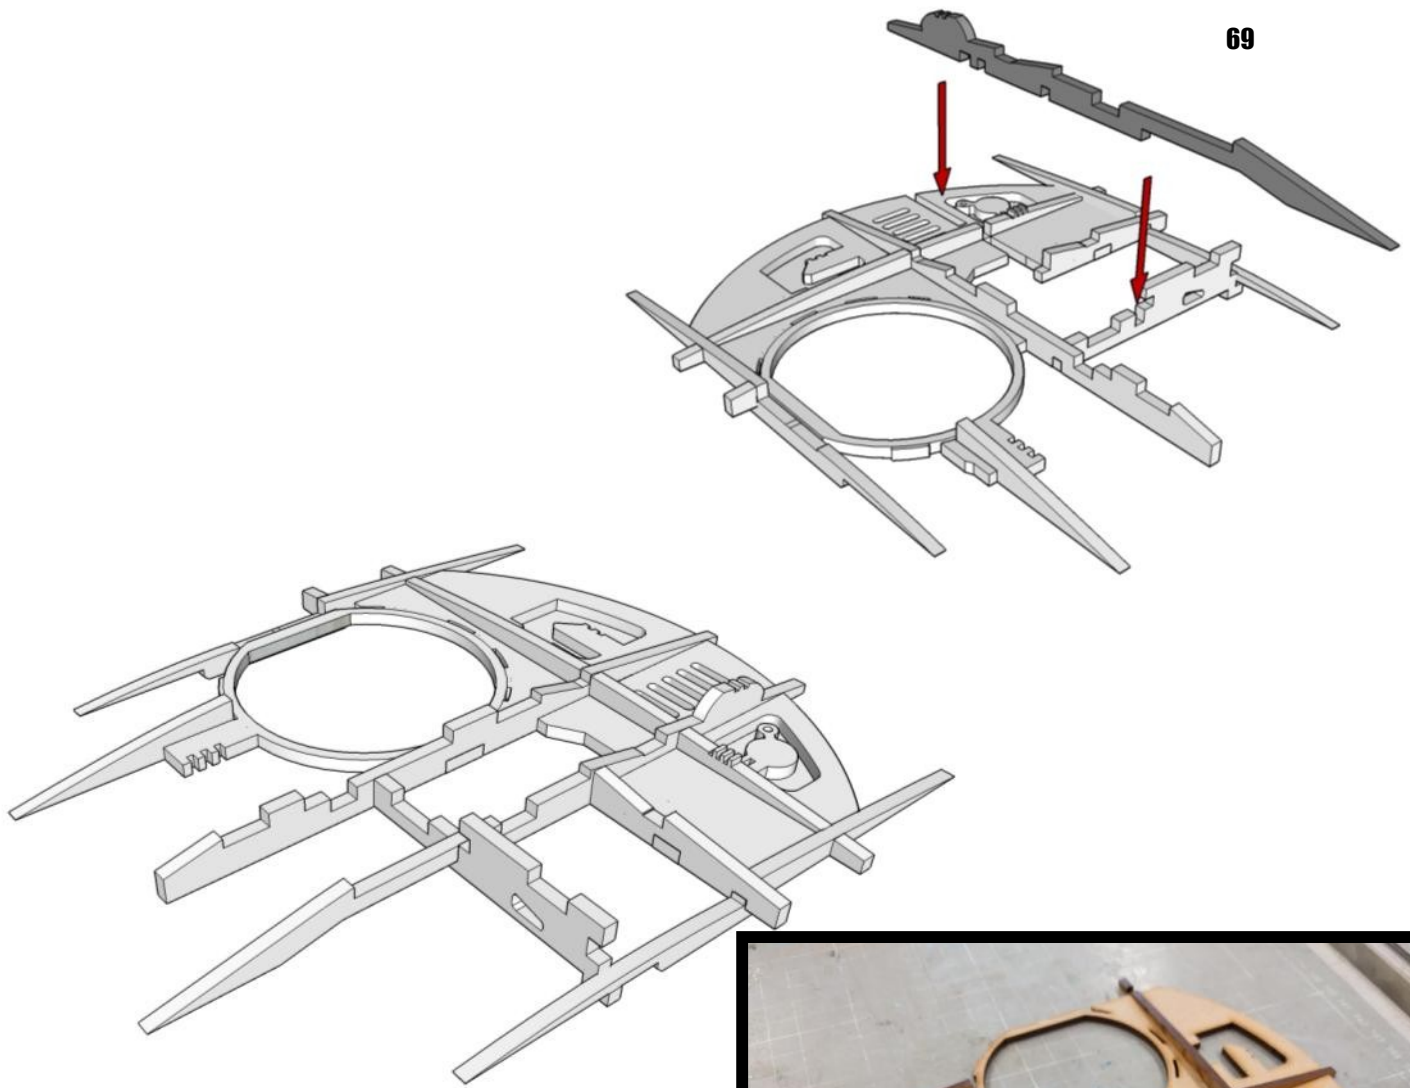





70

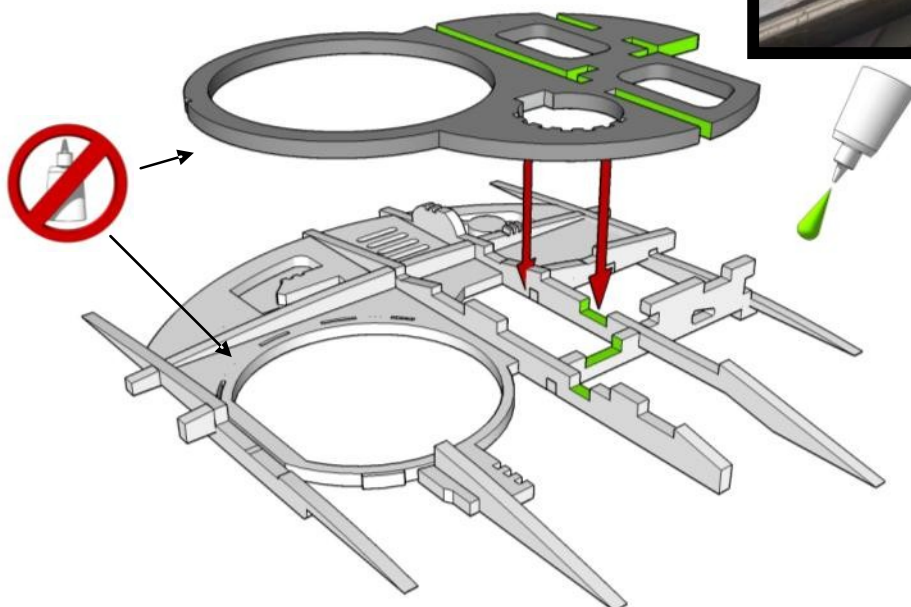


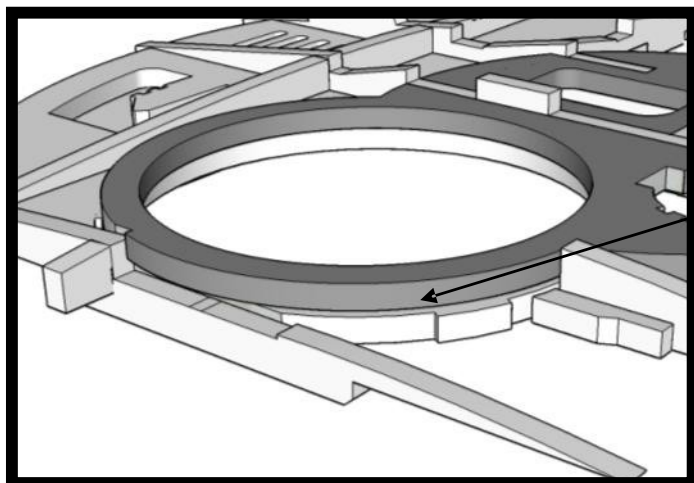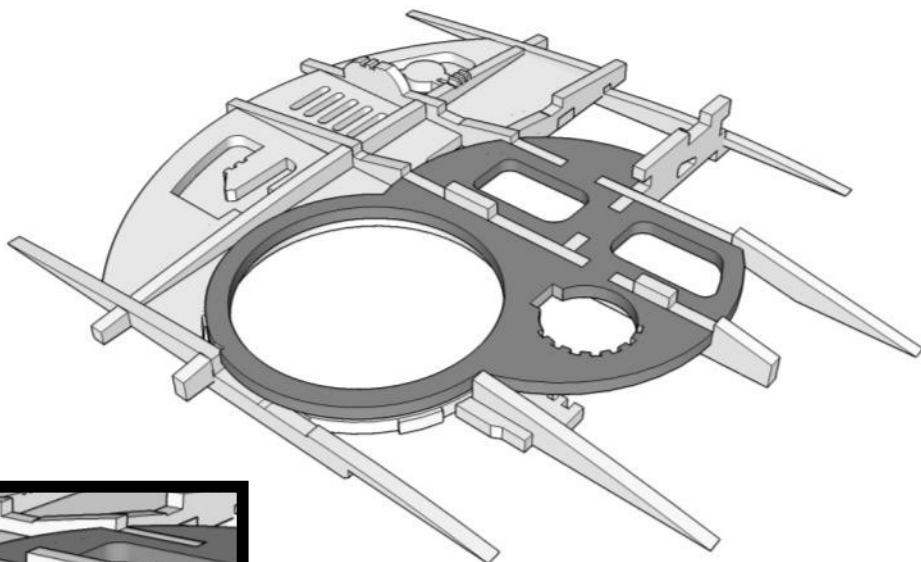

There will be a small gap here.

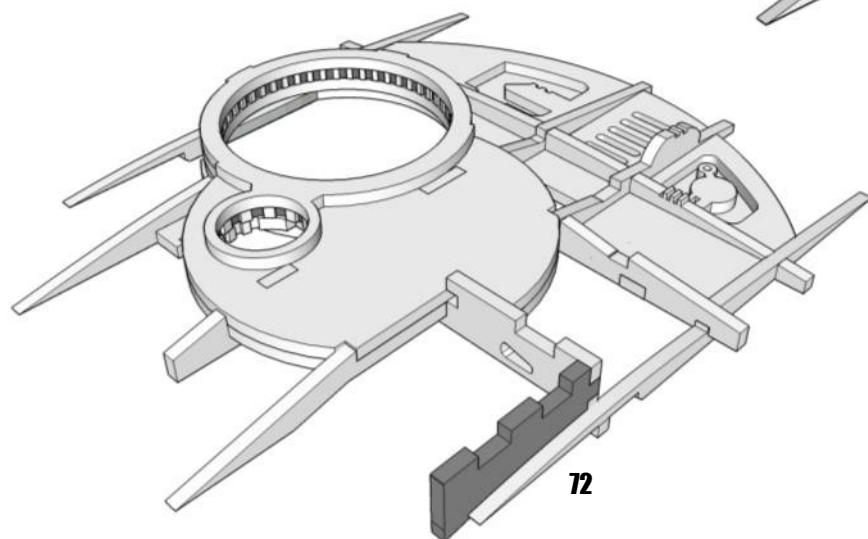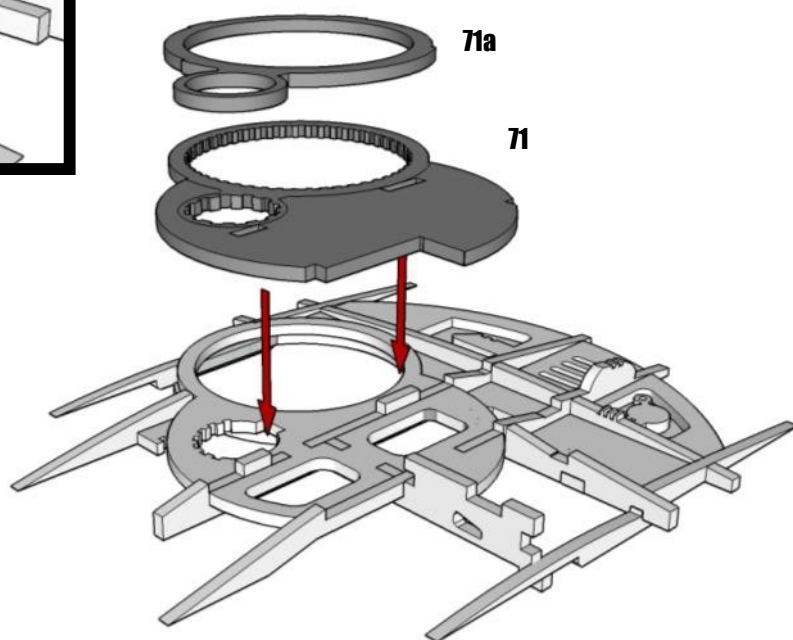


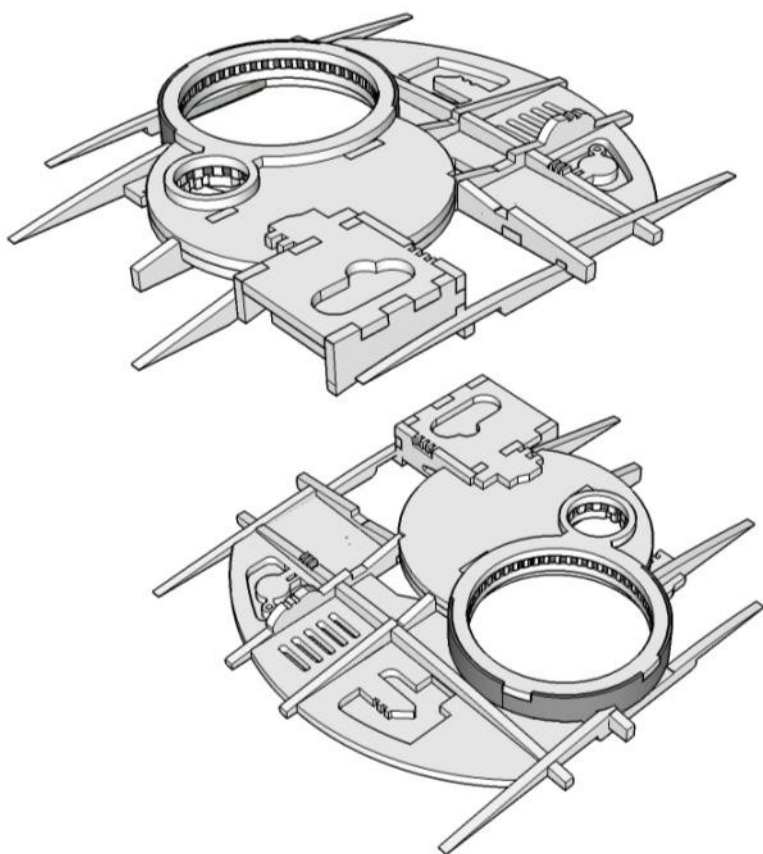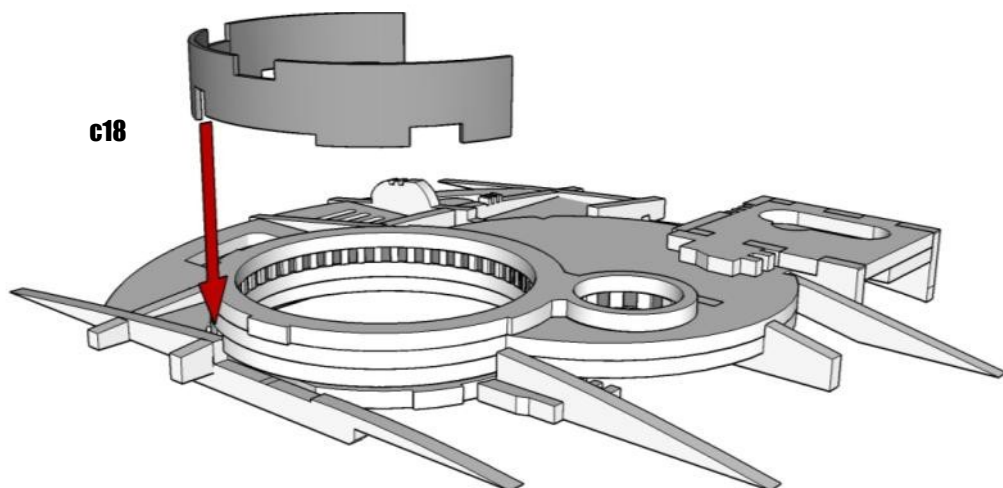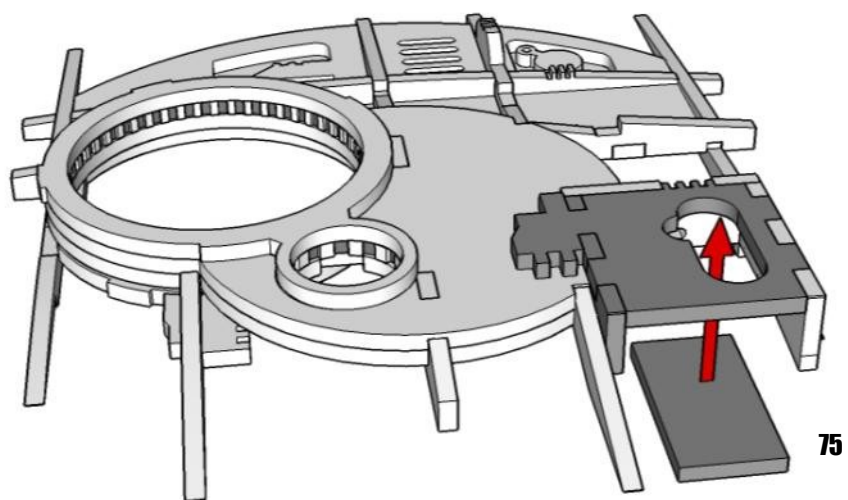

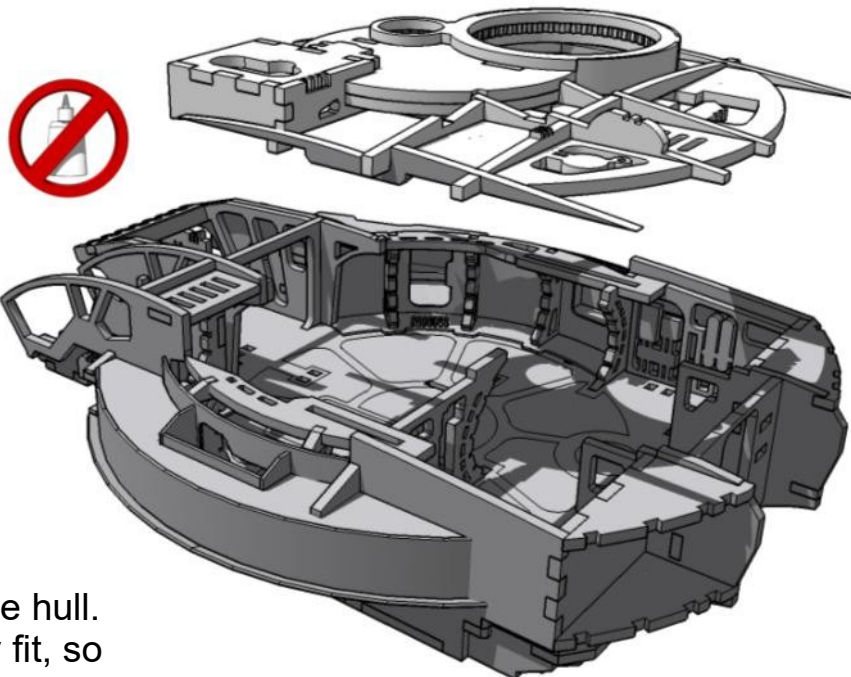

Test fit the roof to the hull. It should be an easy fit, so that the roof can be removed easily. It is much easier to make any adjustments now than later after the skin is attached.

Trim or sand any problem areas until the roof drops easily into place.

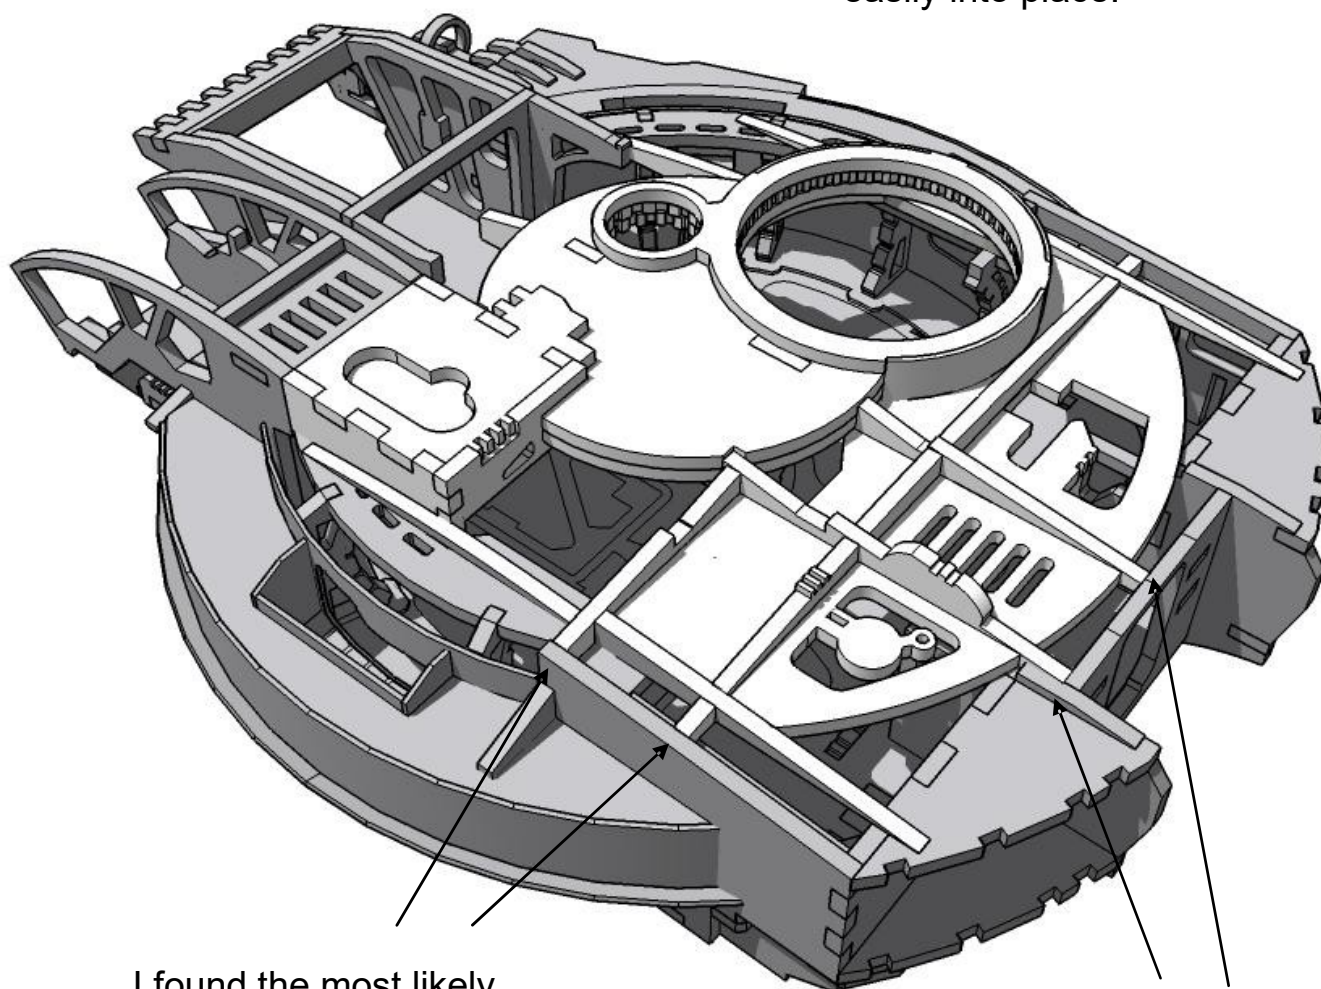


I found the most likely points for sticking were here...

....and here.



Part 76 will be a tight fit, but should drop in behind part c19 with a bit of light pressure.



76

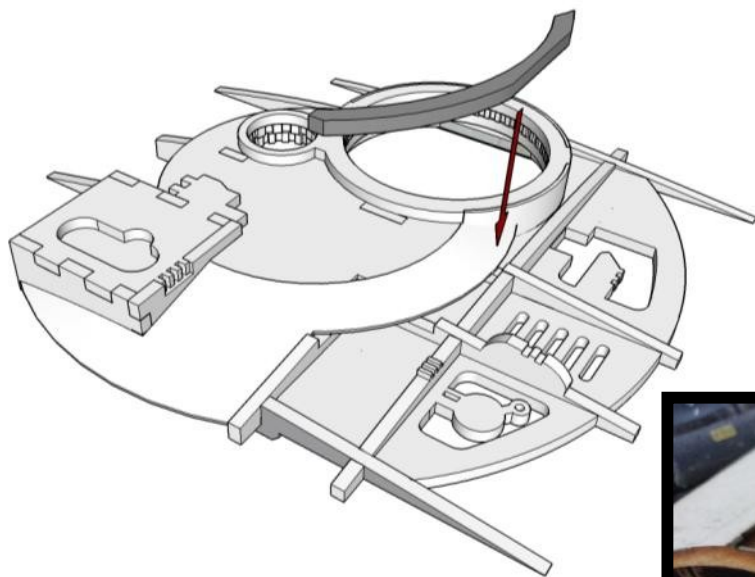


c19



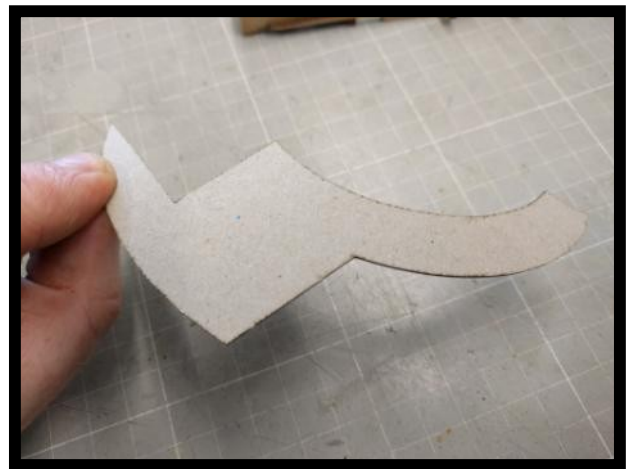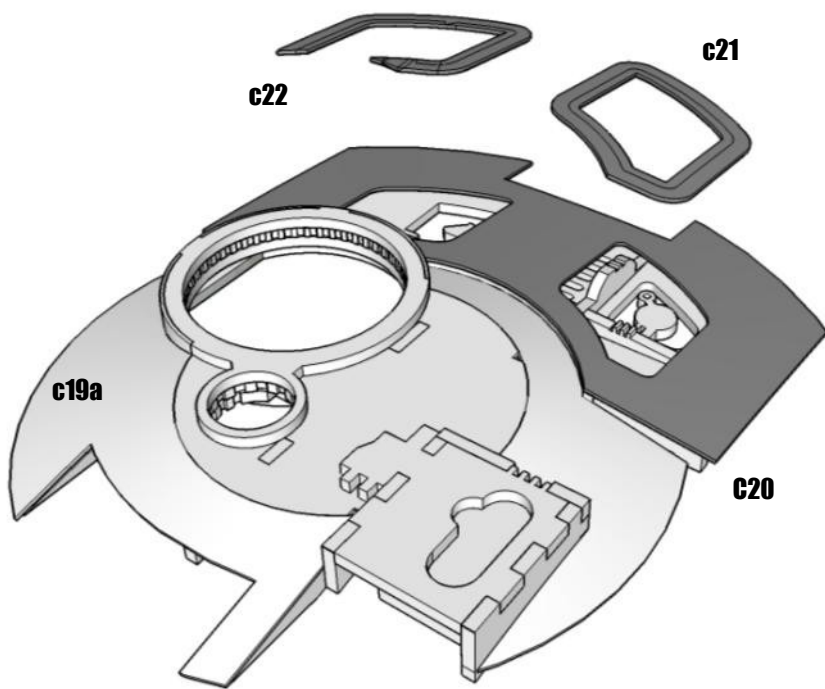

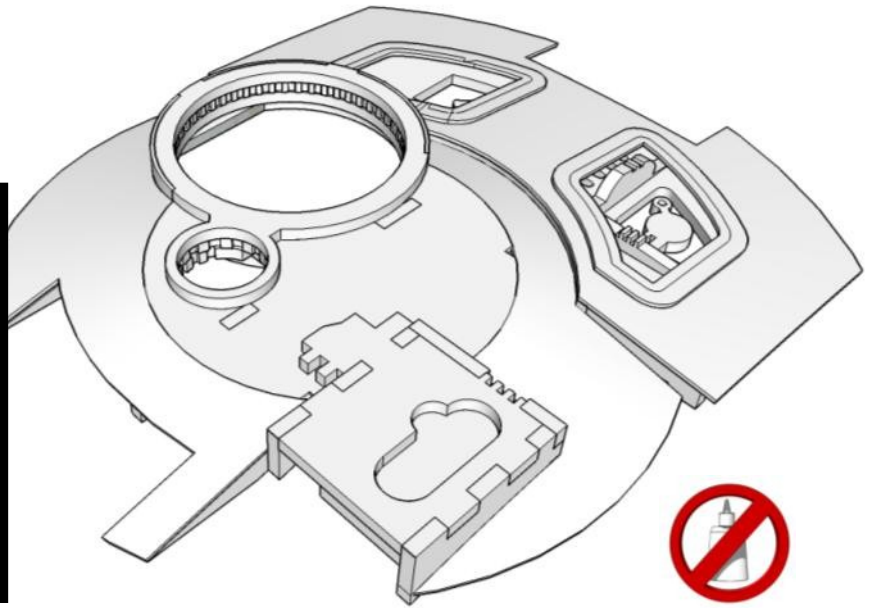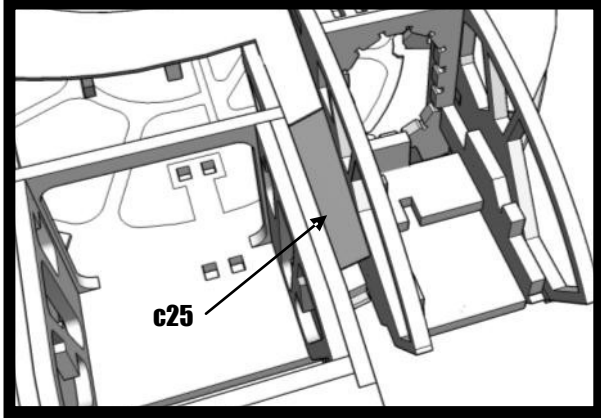


c24

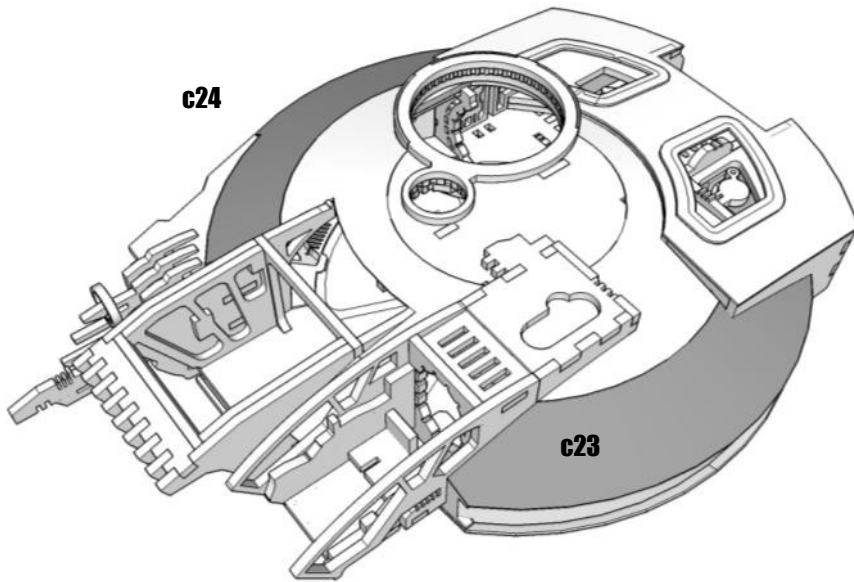

c23


Be SUPER careful not to glue the roof in by mistake.

78

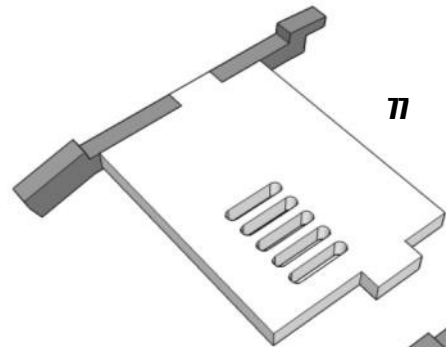


77






78

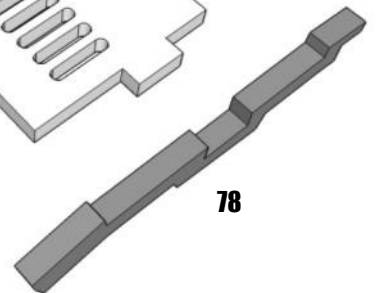


c26



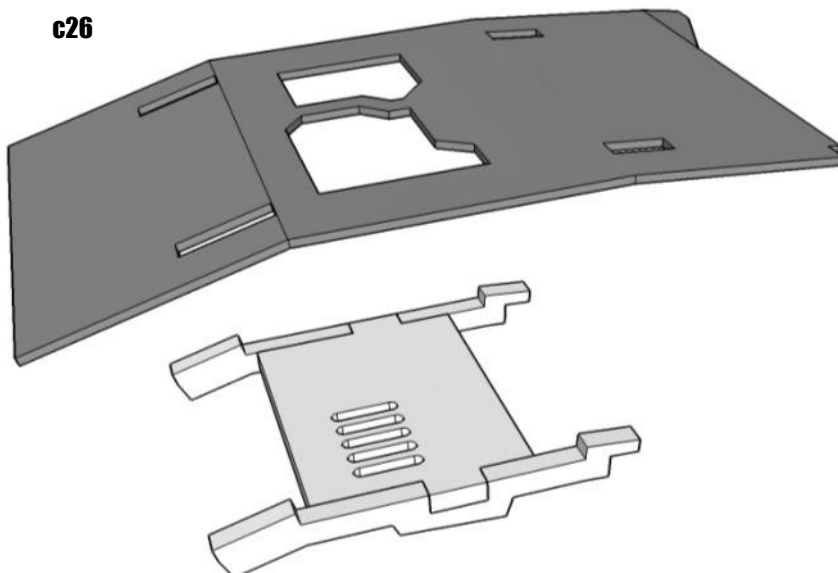








The forward roof should fit in place without glue.

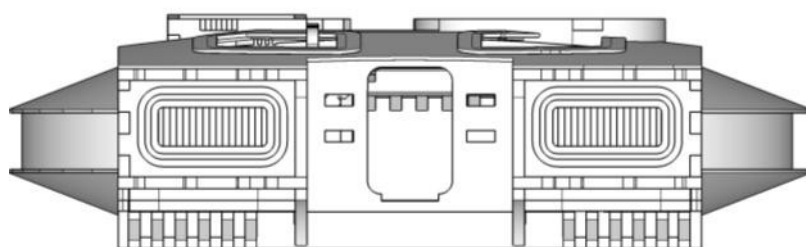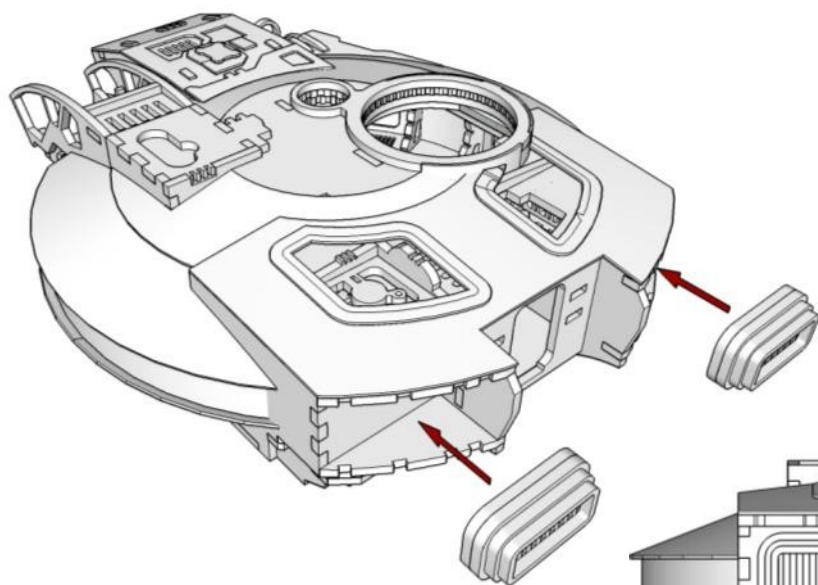
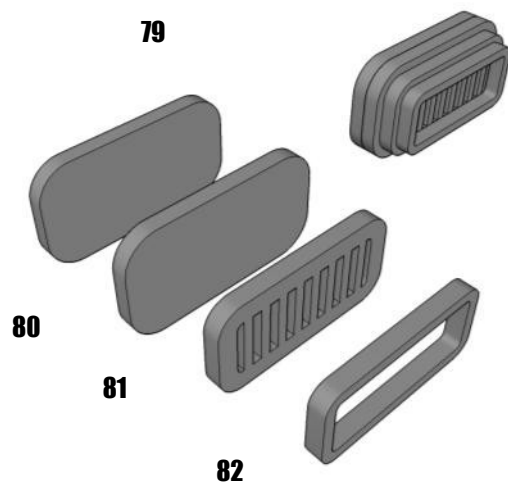
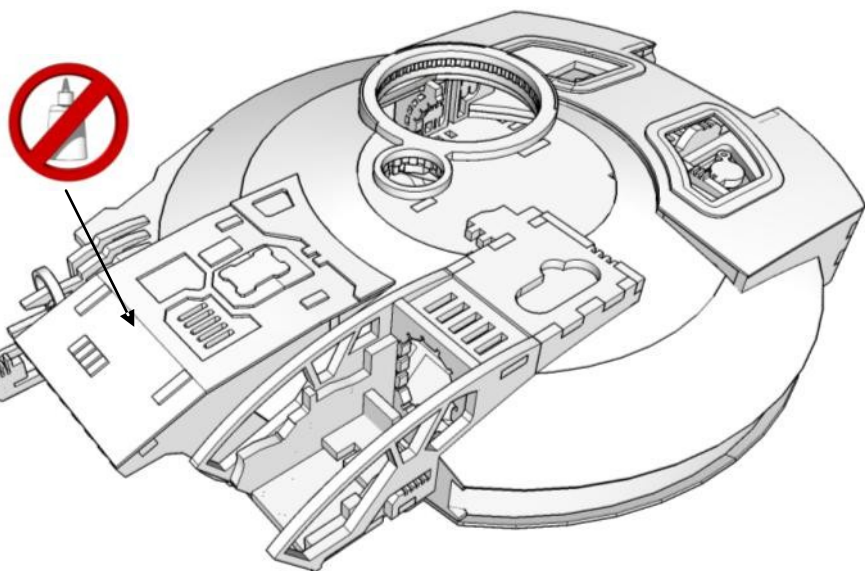
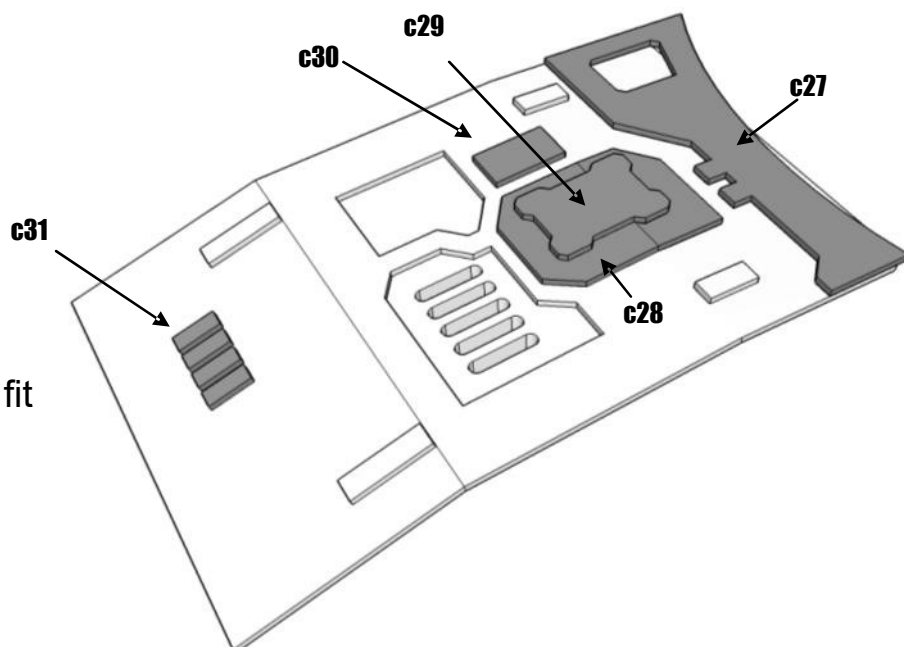


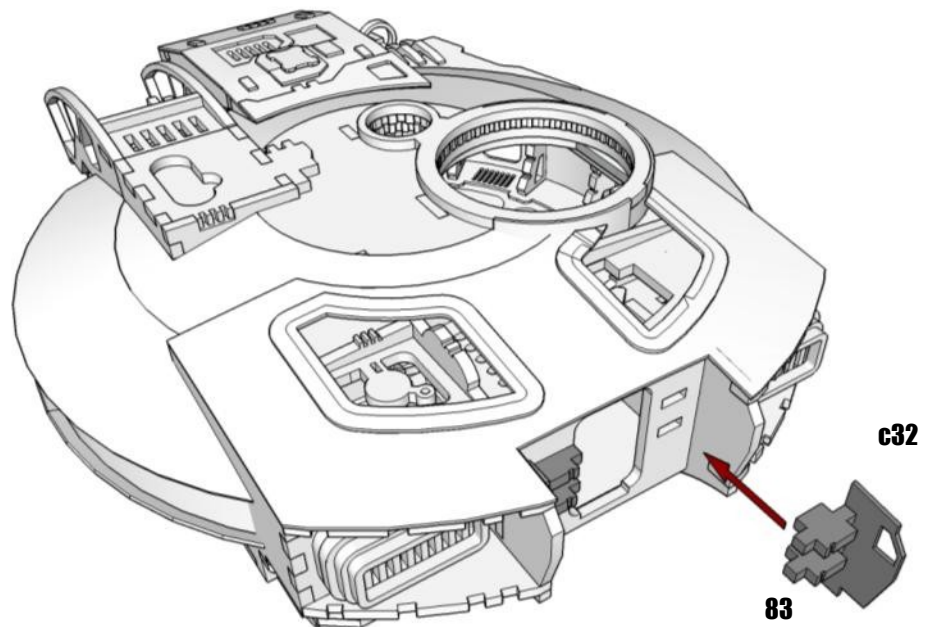


Small notch on part 83 goes toward the central door.

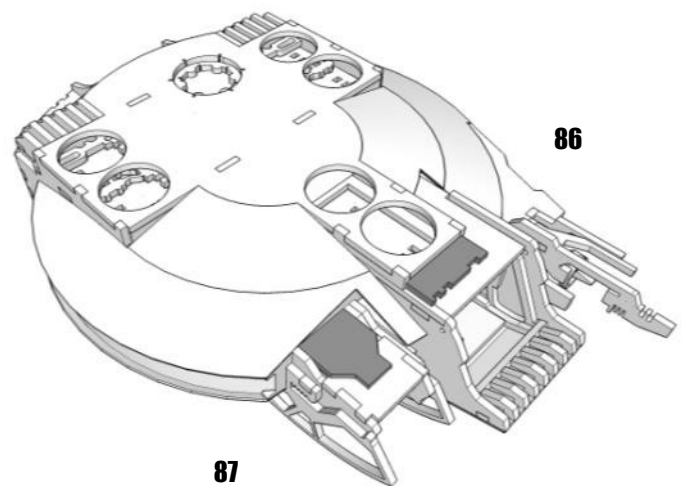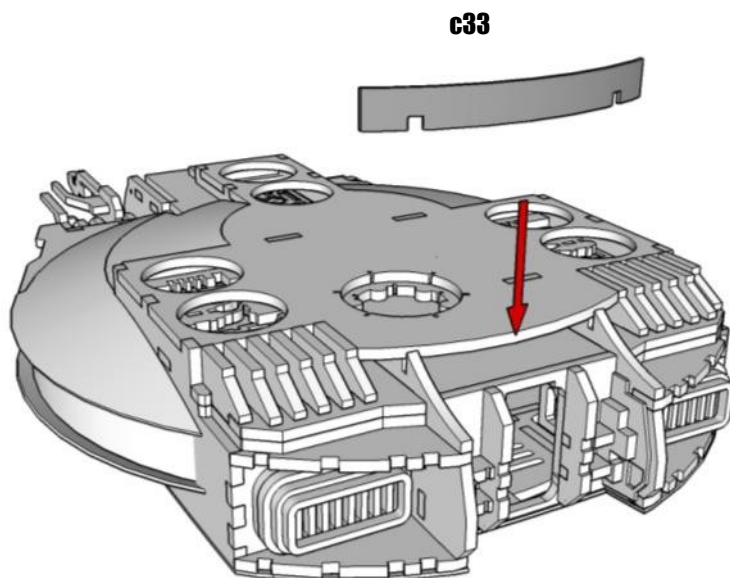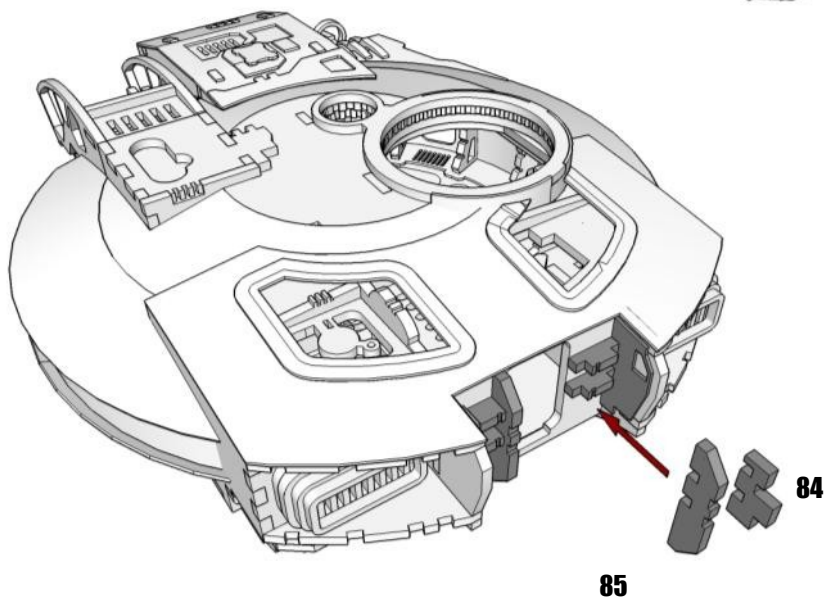


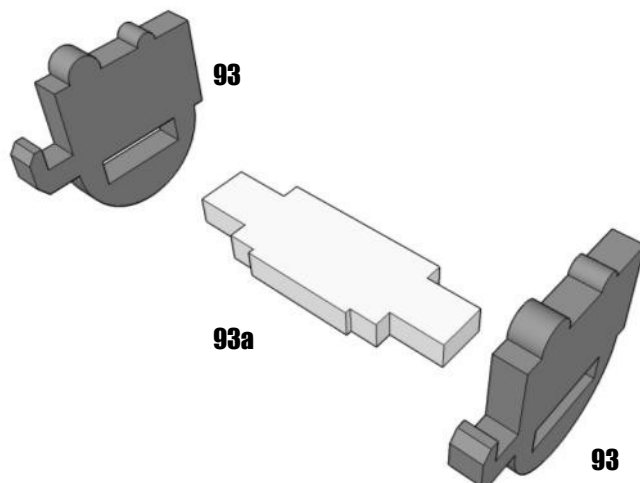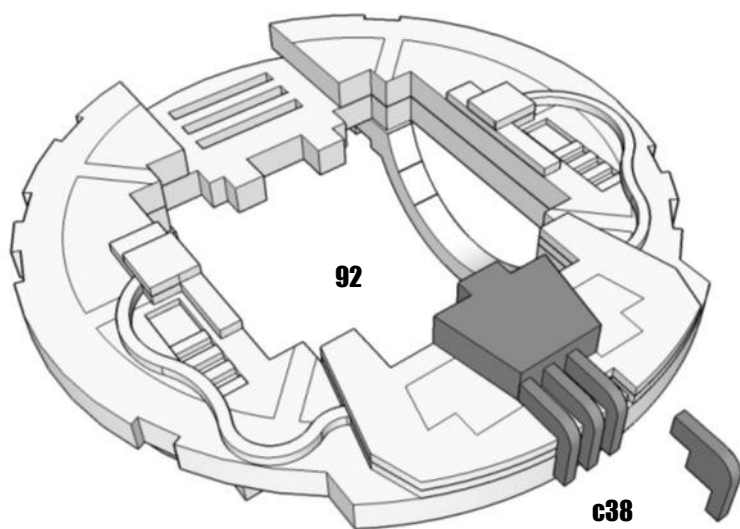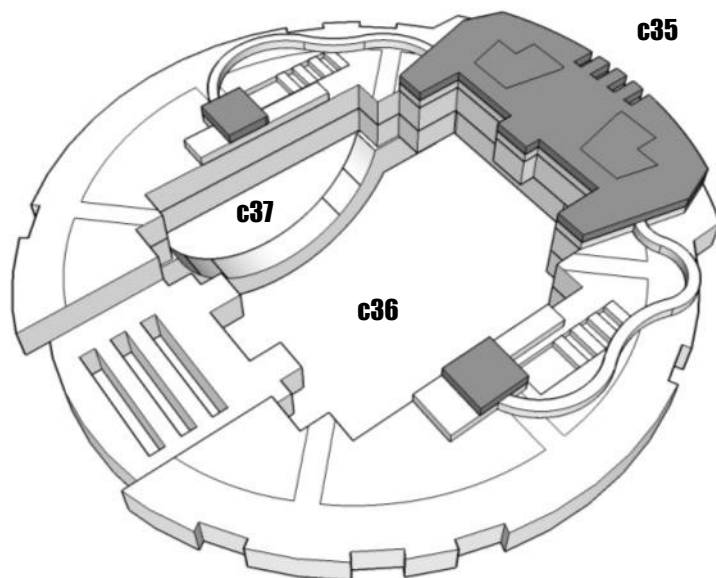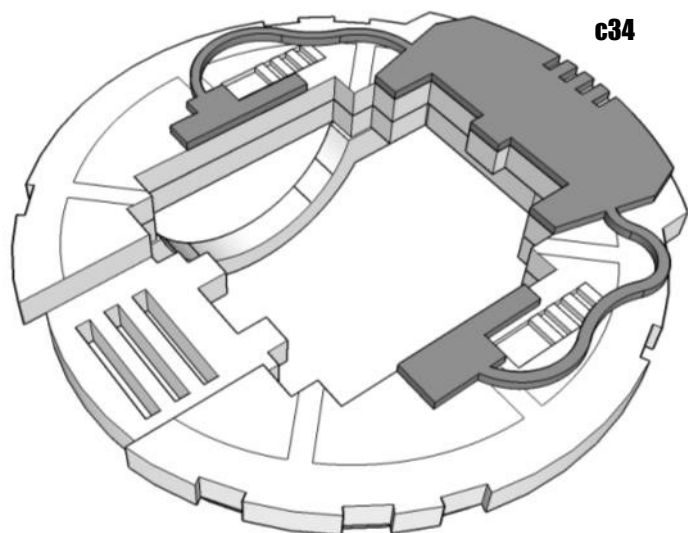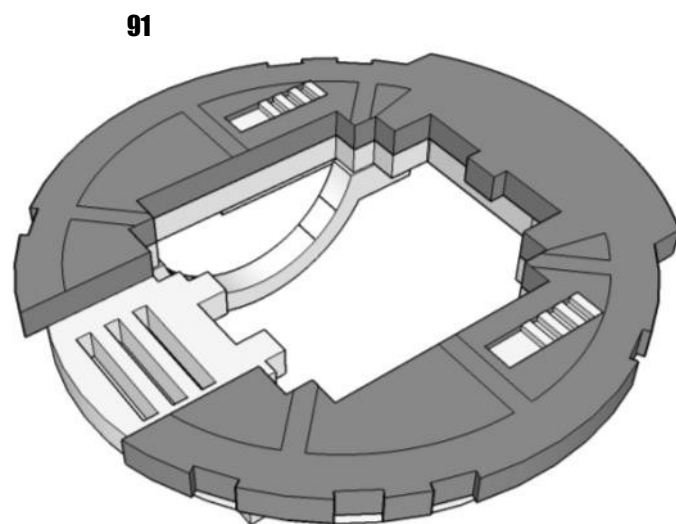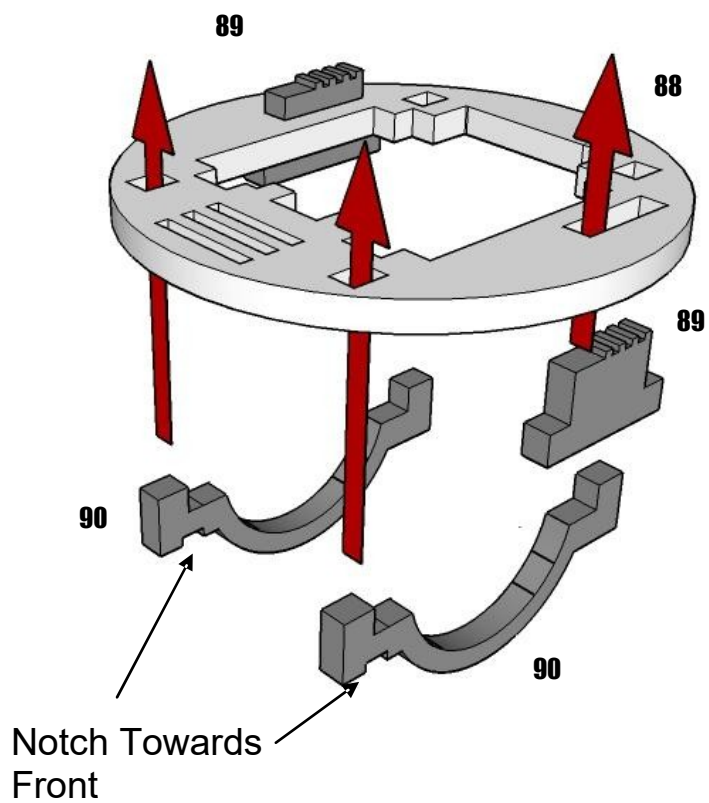

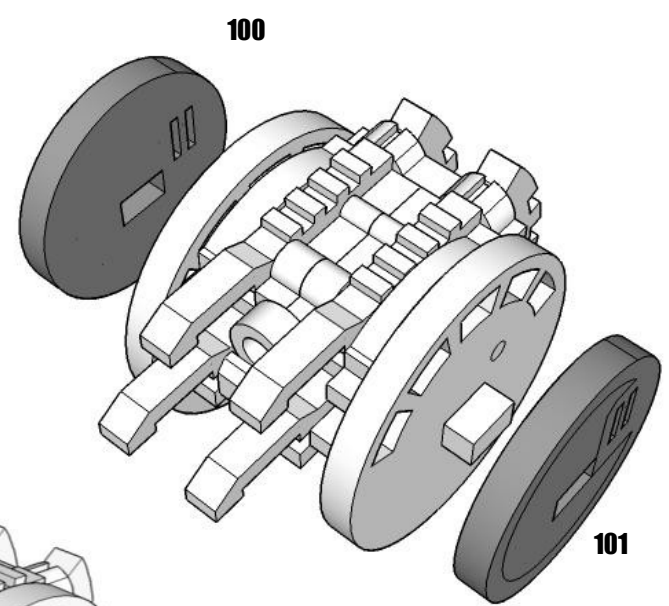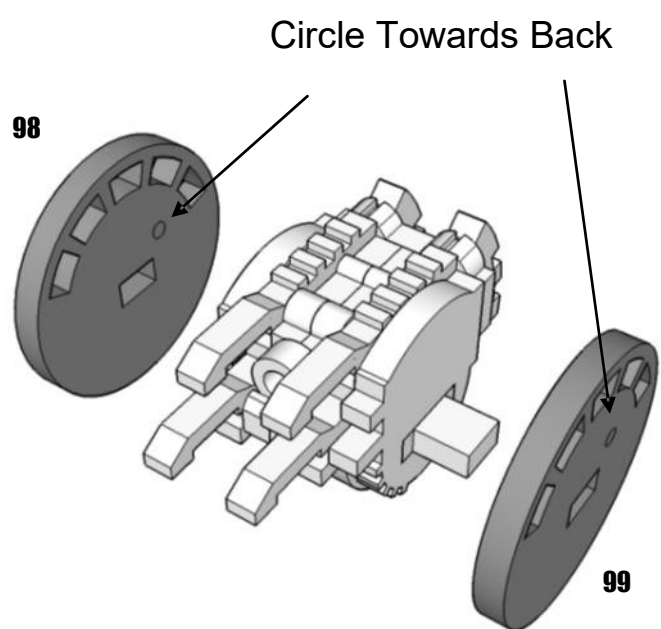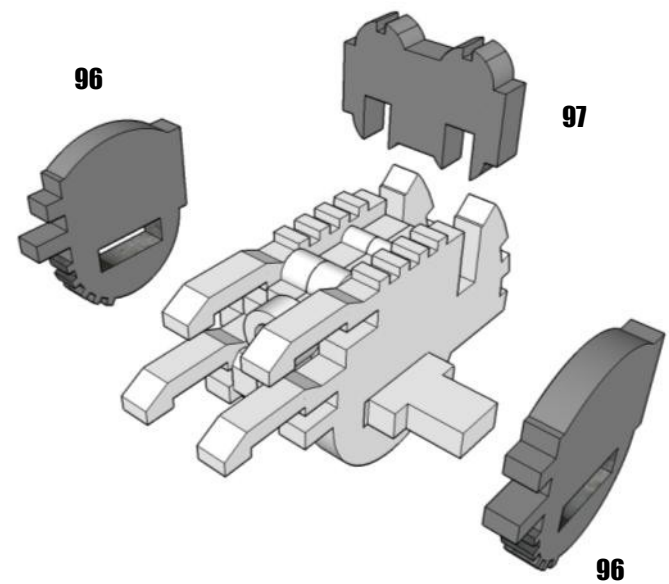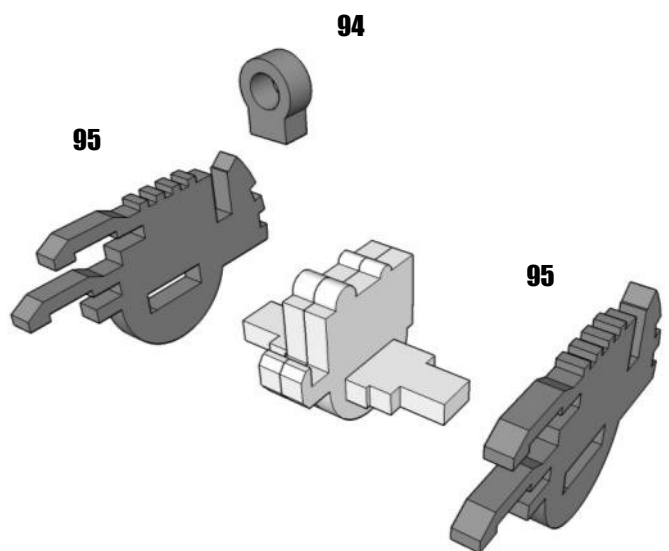

2mm rod, approx 22mm long for barrels. (see page 2)

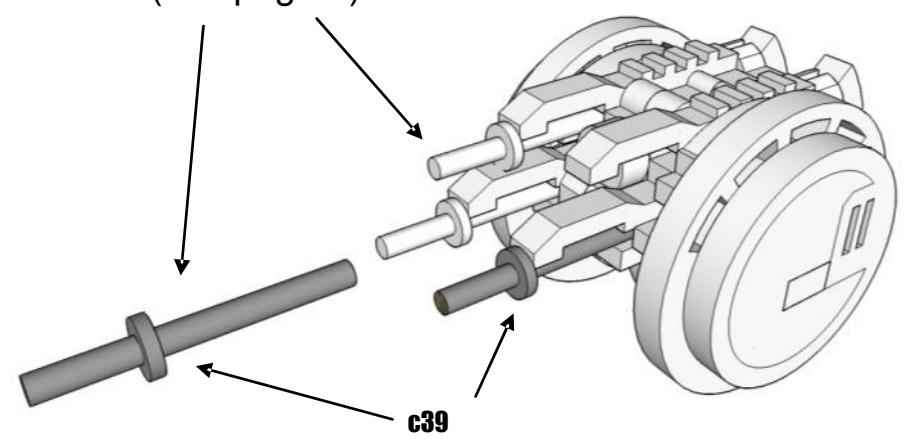


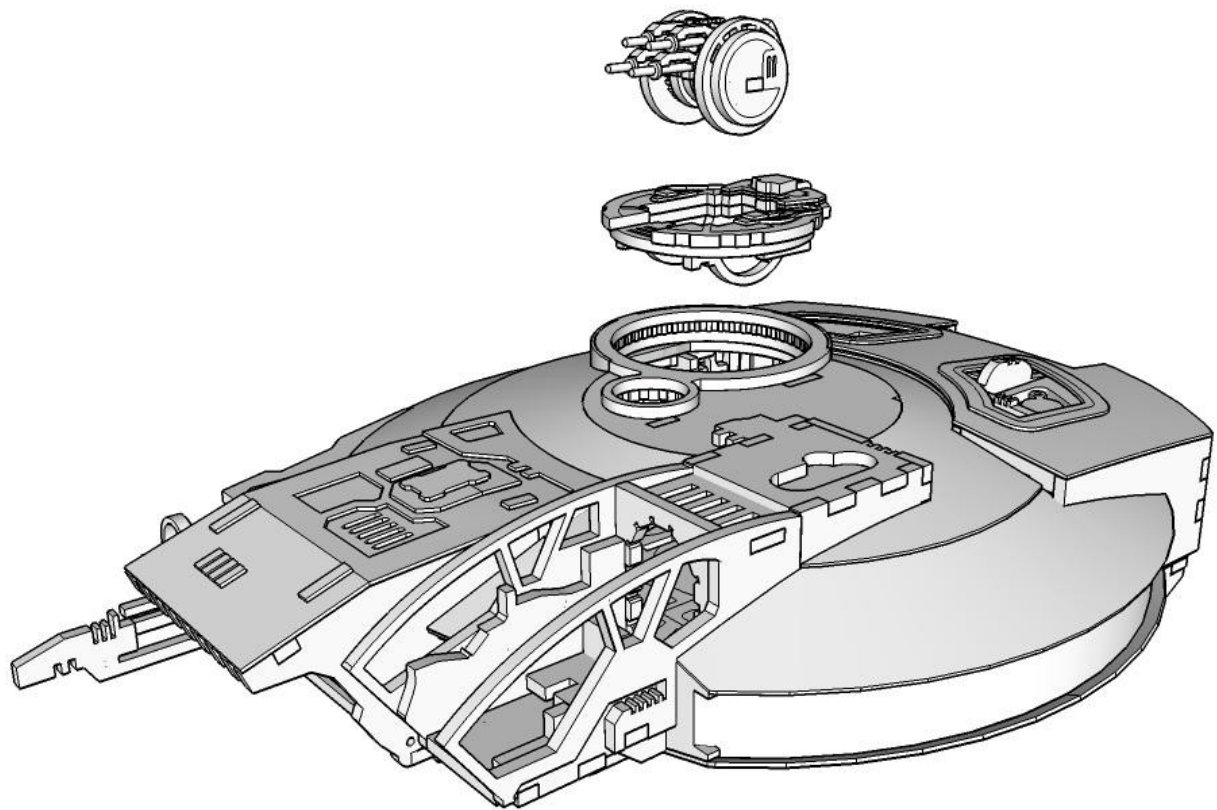


c40



102

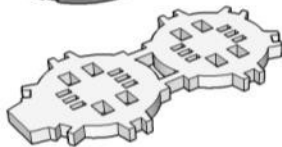


c40

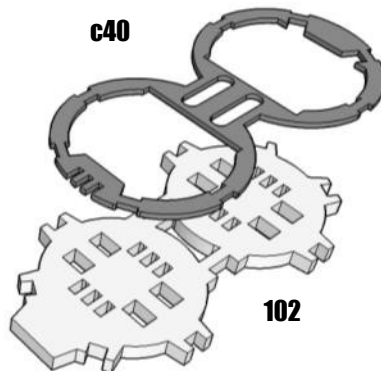

102

c40

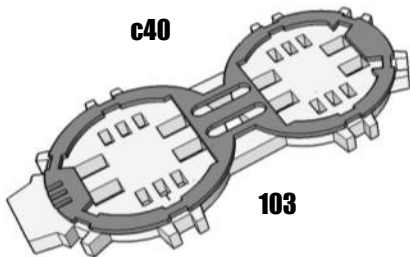


103

104




Part 104 is rather tiny.
We've given you a few
spares.

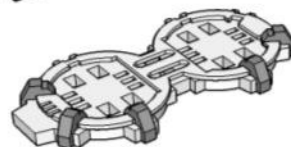


104




c41


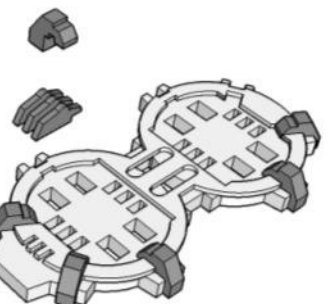



c41

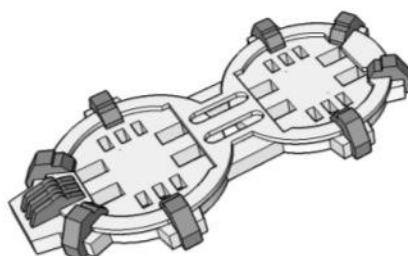


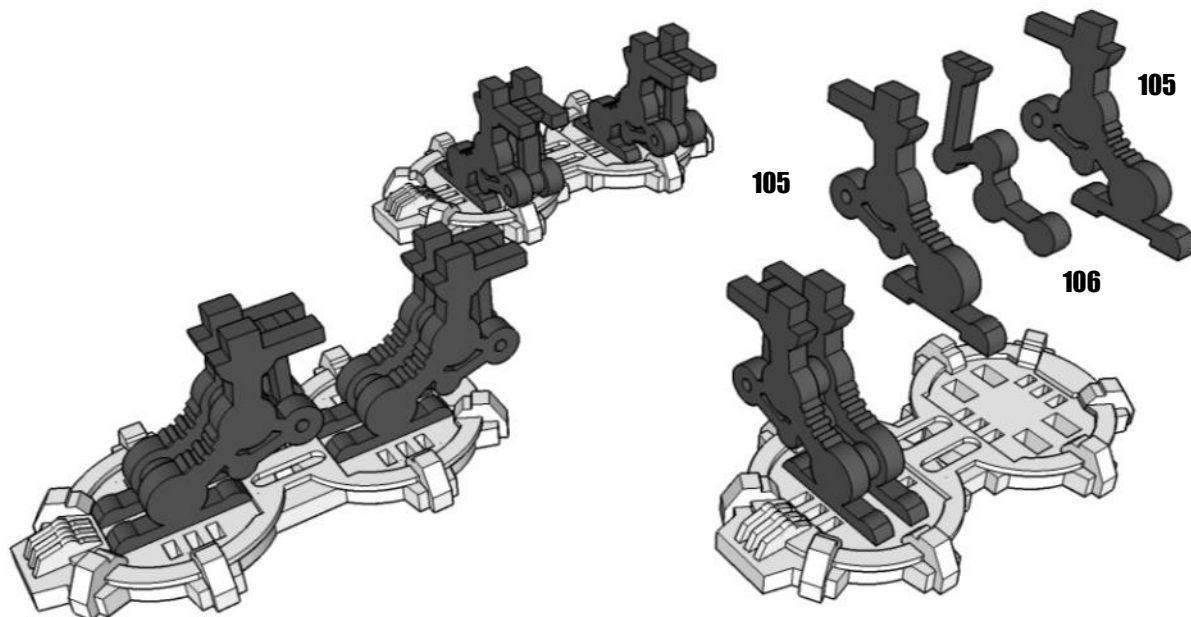








See Page 84 for extra
details!!!

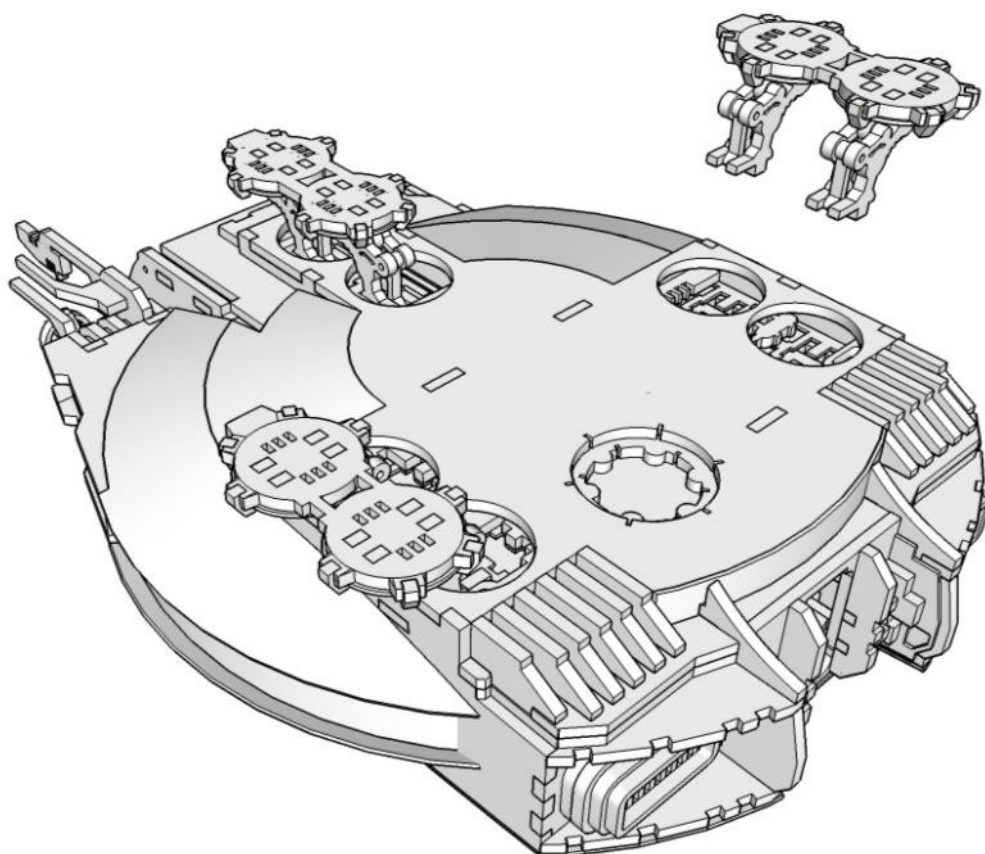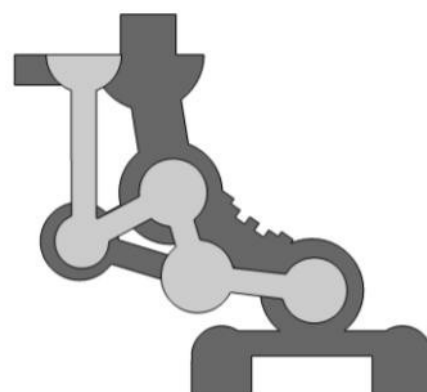


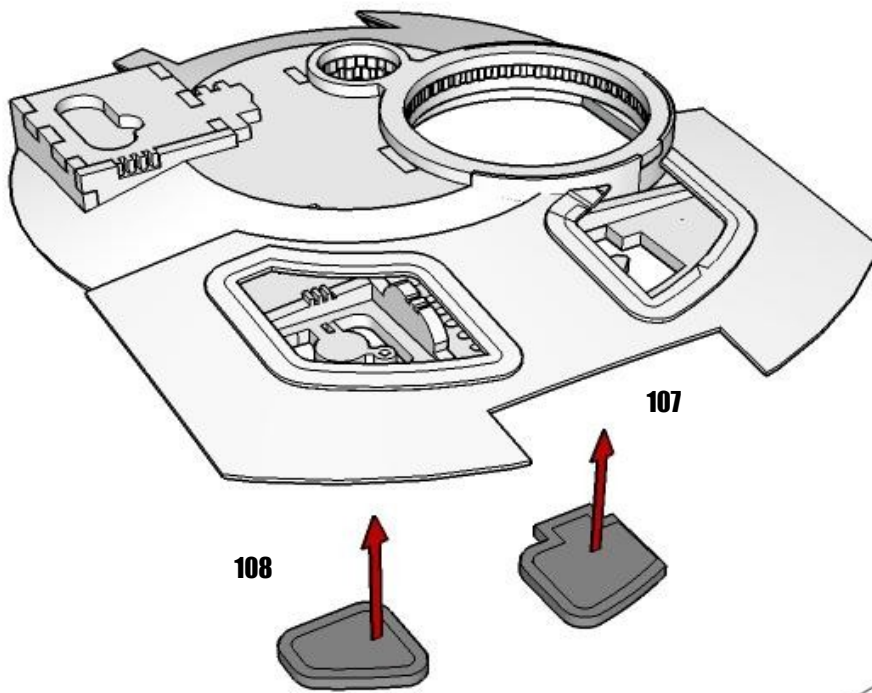


See Page 81 for extra details!!!

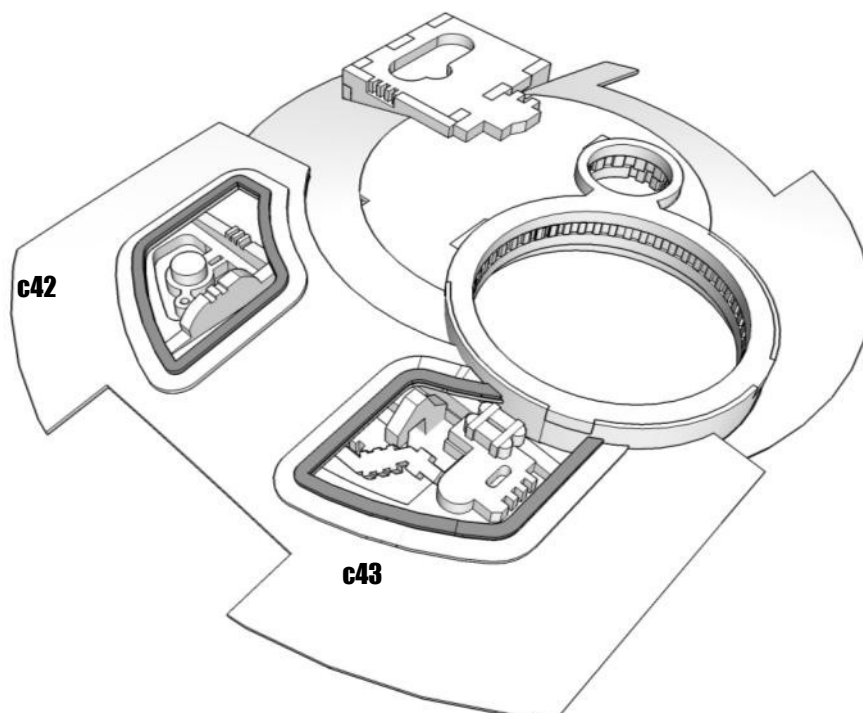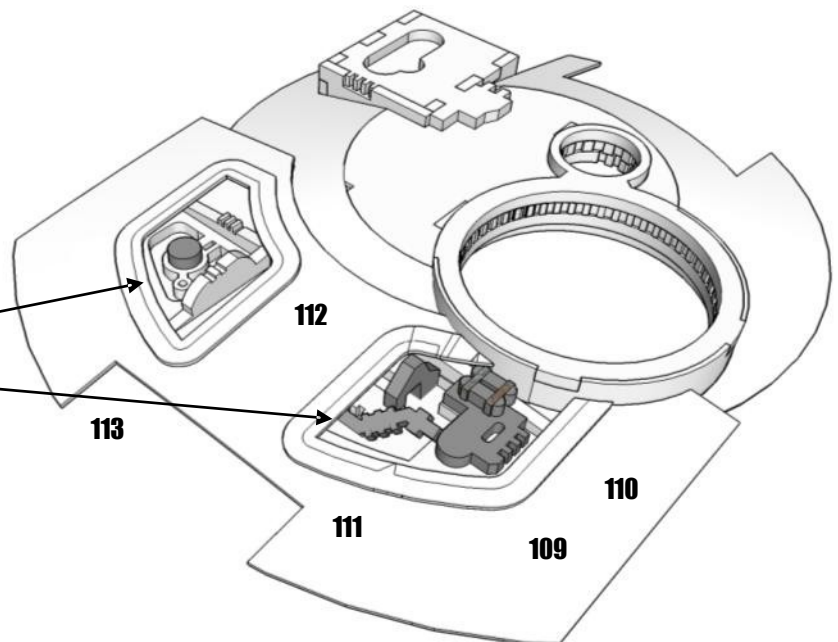

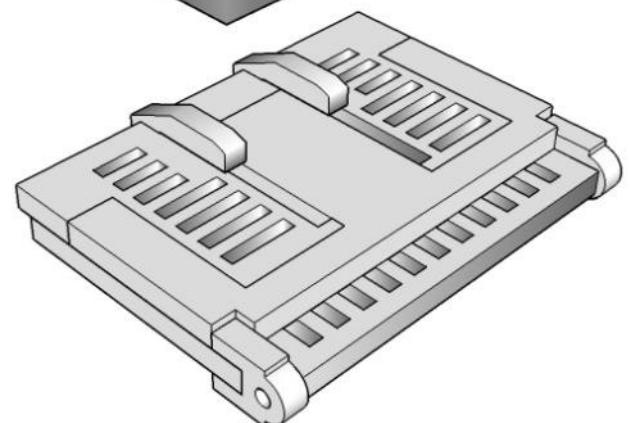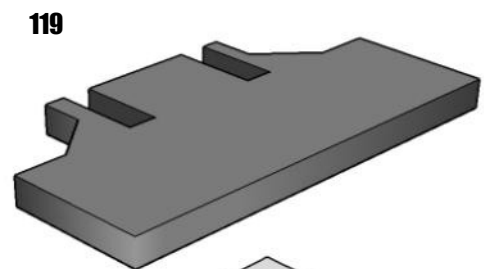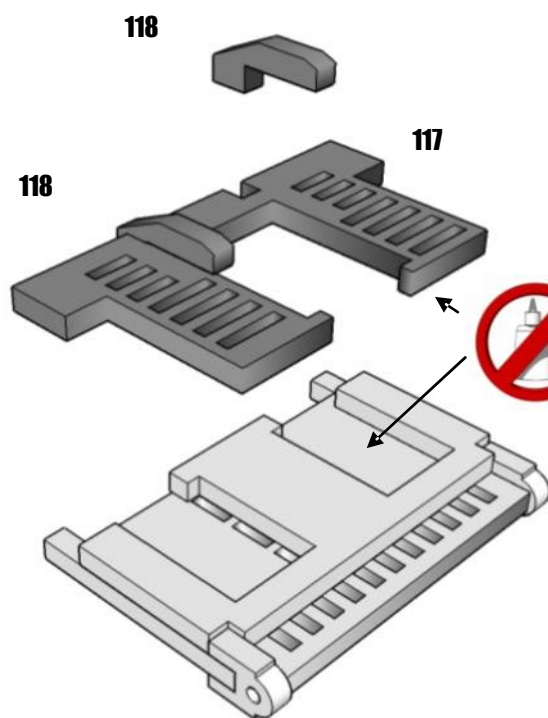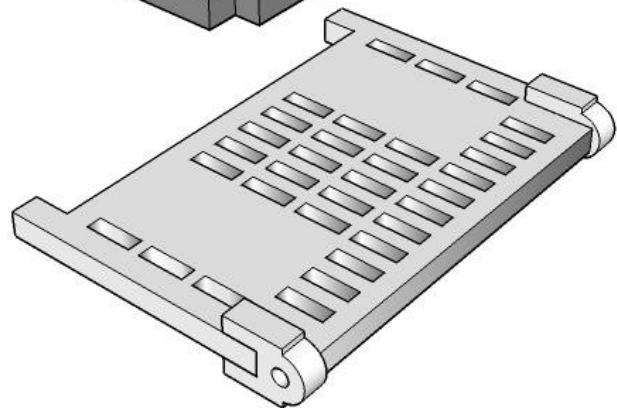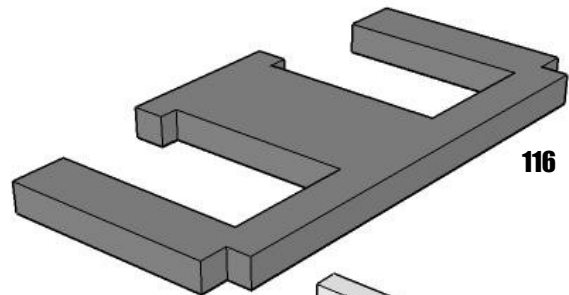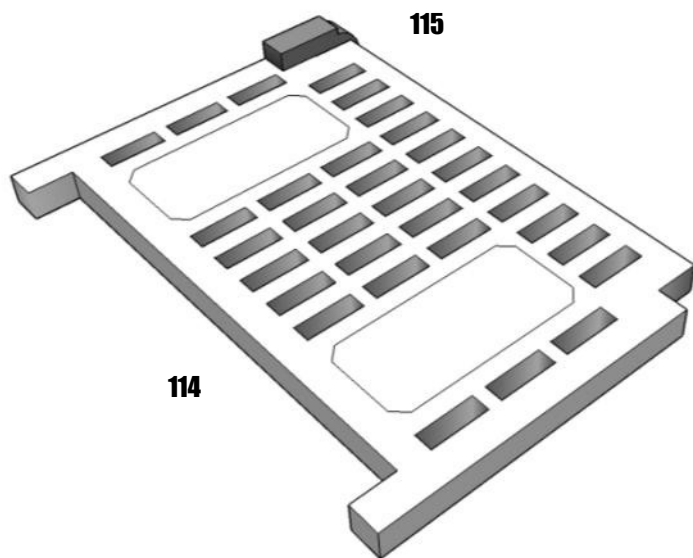

If you assemble the front ramp carefully, the lower section should slide in and out and the whole thing will be able to be raised and lowered.

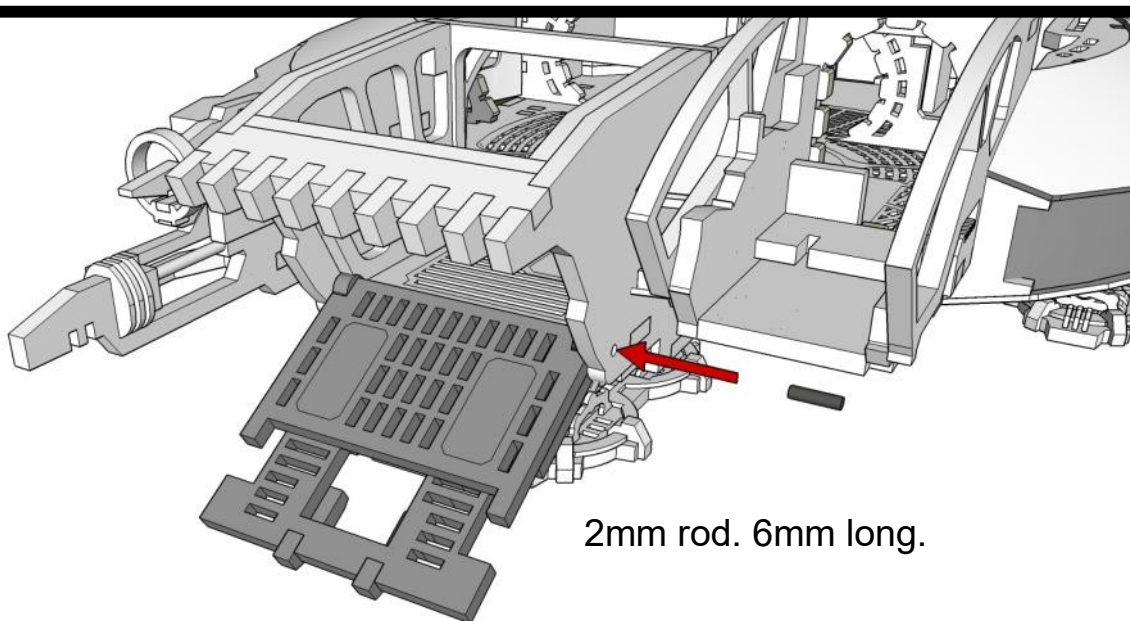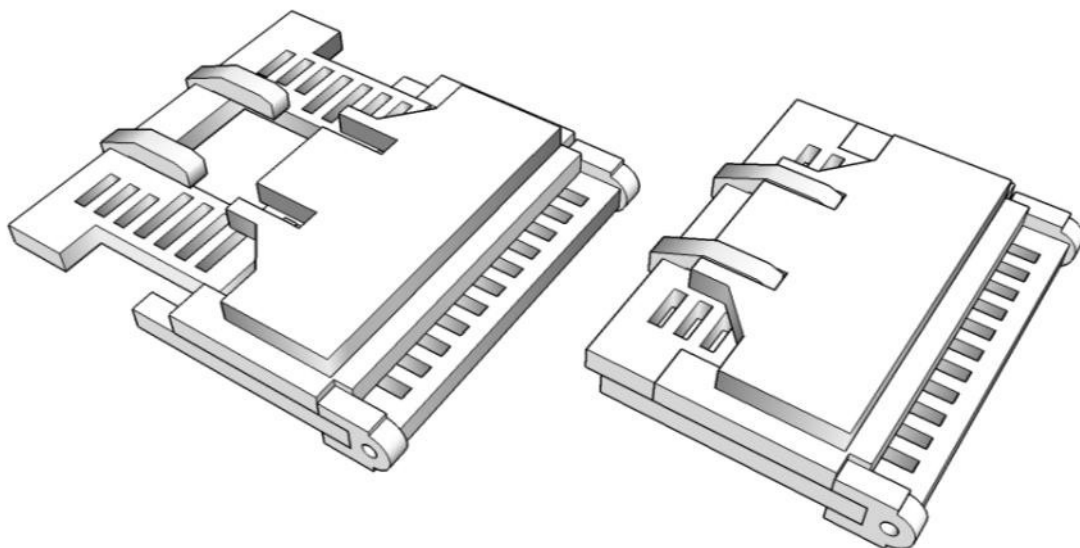

2mm rod. 6mm long.

Detail parts. Deluxe Peregrine Interior.





The following pages contain the instructions for the Deluxe interior for your Y2k Peregrine Light Freighter.


There are MANY very small parts, so be careful and take your time. Use a good quality PVA/ white-glue/ Elmers type glue. **NOT A dollar store cheap one.**

Very small and/or fragile parts can be reinforced considerably by placing a drop of super-glue/CA adhesive on the part after the part has been set in position. **ALLOW THE PVA TO SET FIRST.**


Very small parts can be picked up with the aid of tweezers, or by stabbing them with a new no #11 exacto blade.

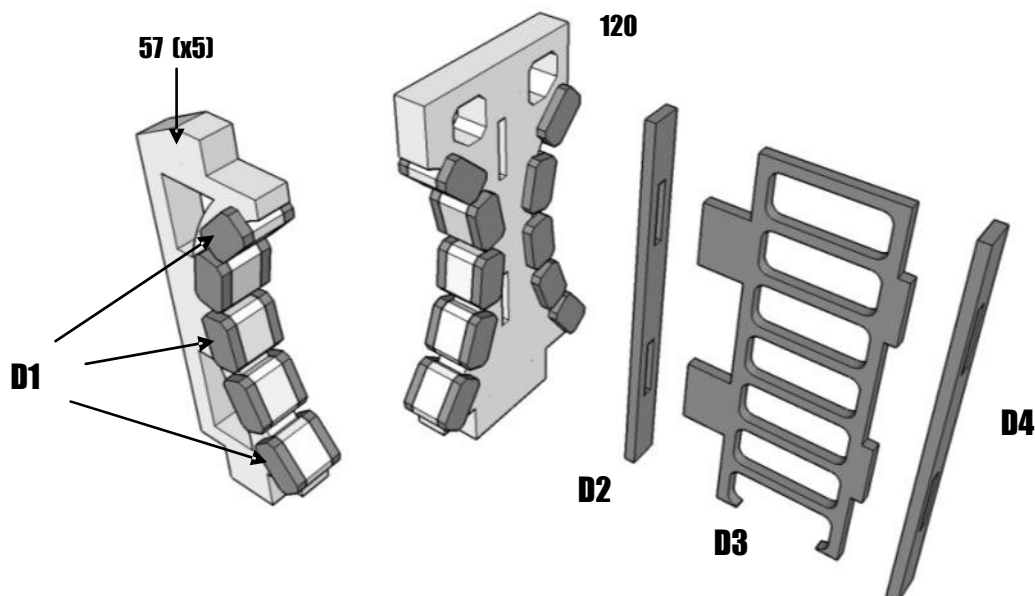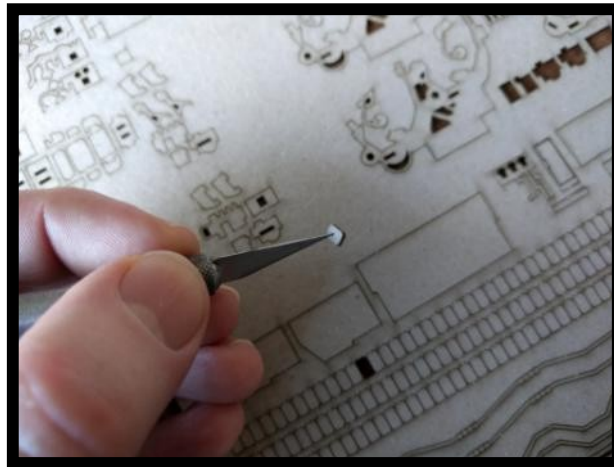


Detail parts. Deluxe Peregrine Interior.
Cockpit.

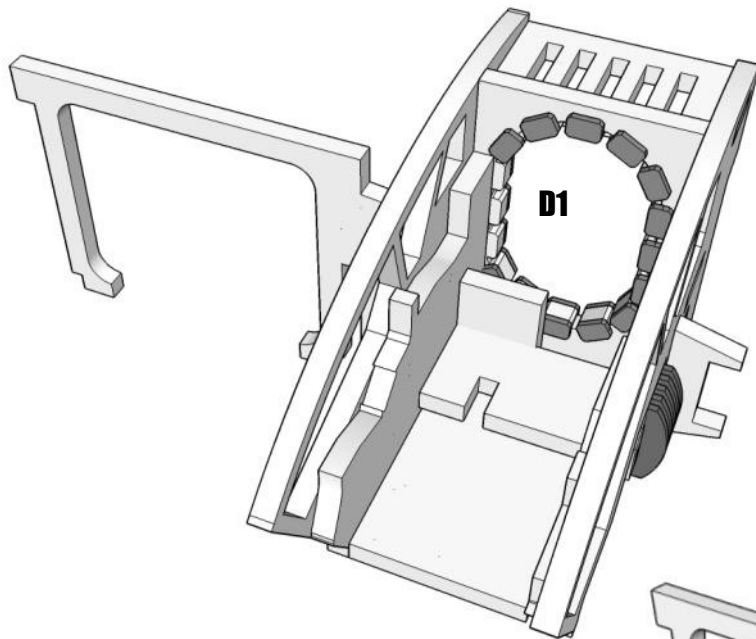






The previously assembled cockpit frame is shown in the following steps without the rest of the hull for clarity.

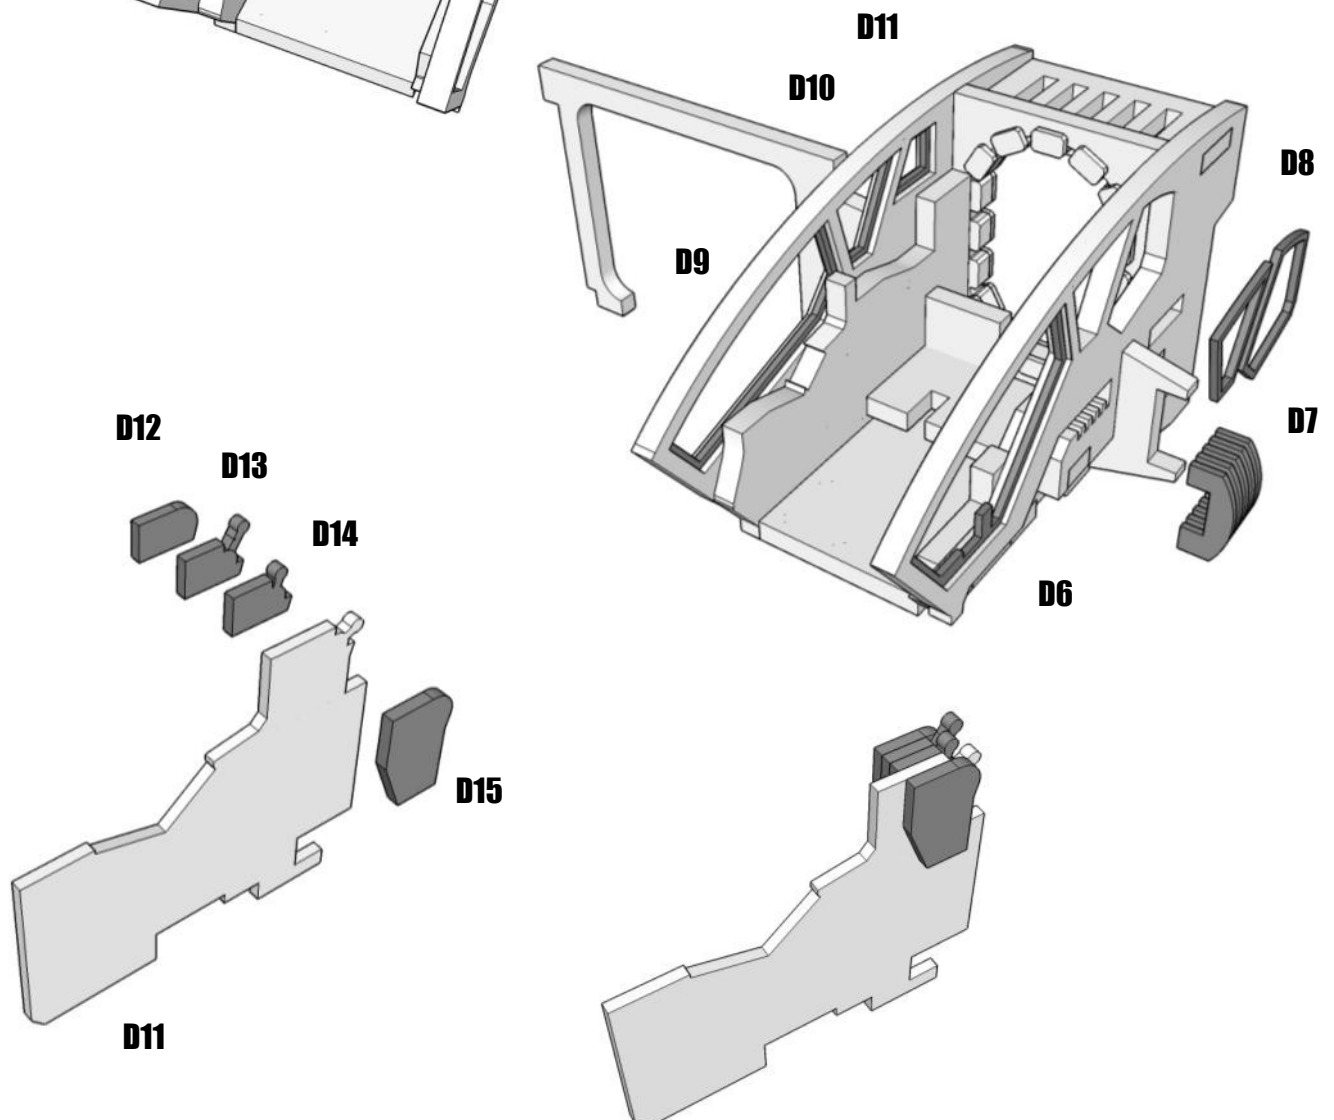


Detail parts. Deluxe Peregrine Interior.
Cockpit.

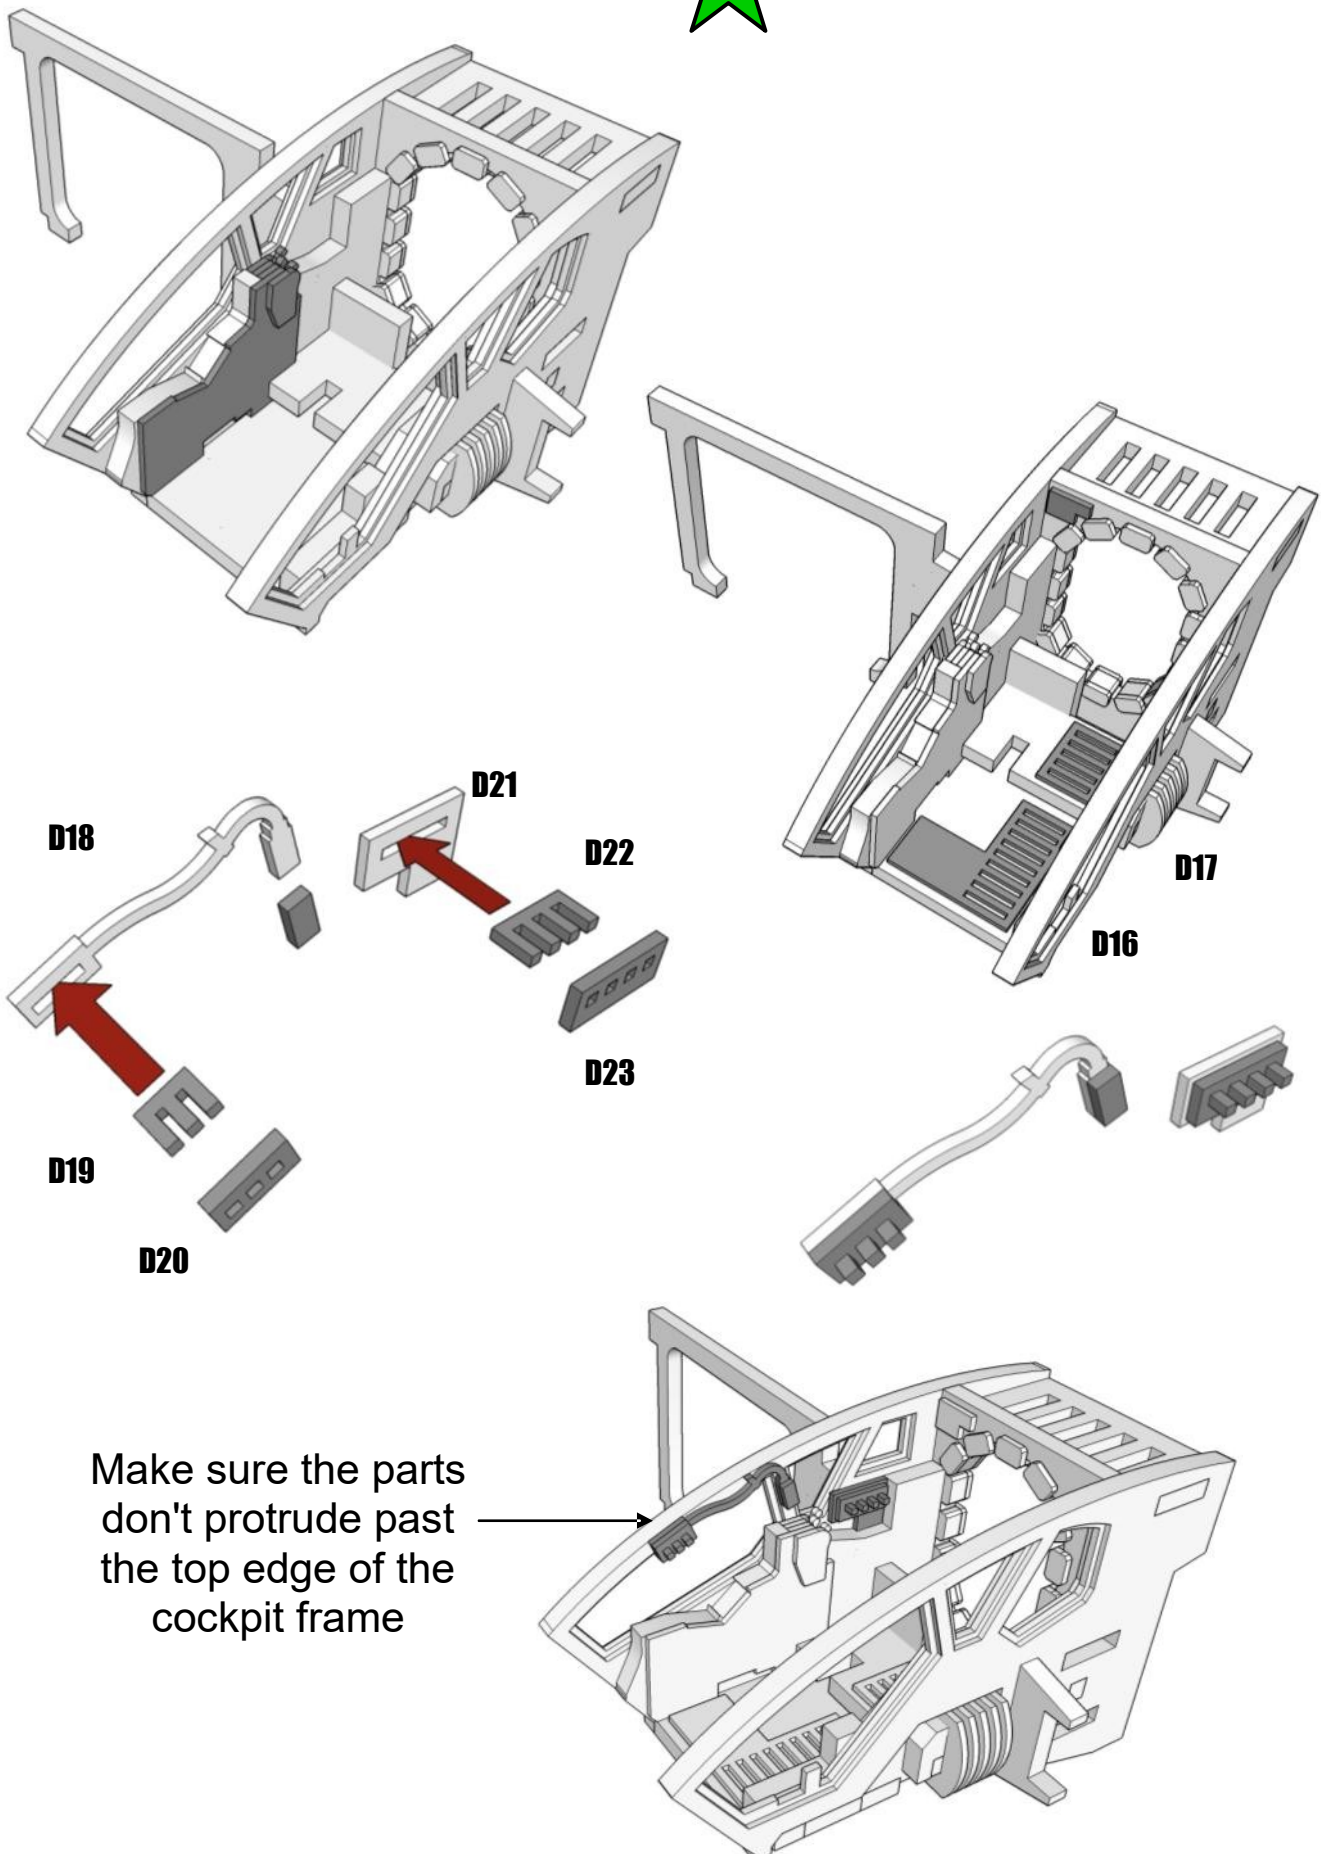



Detail parts. Deluxe Peregrine Interior.
Cockpit.

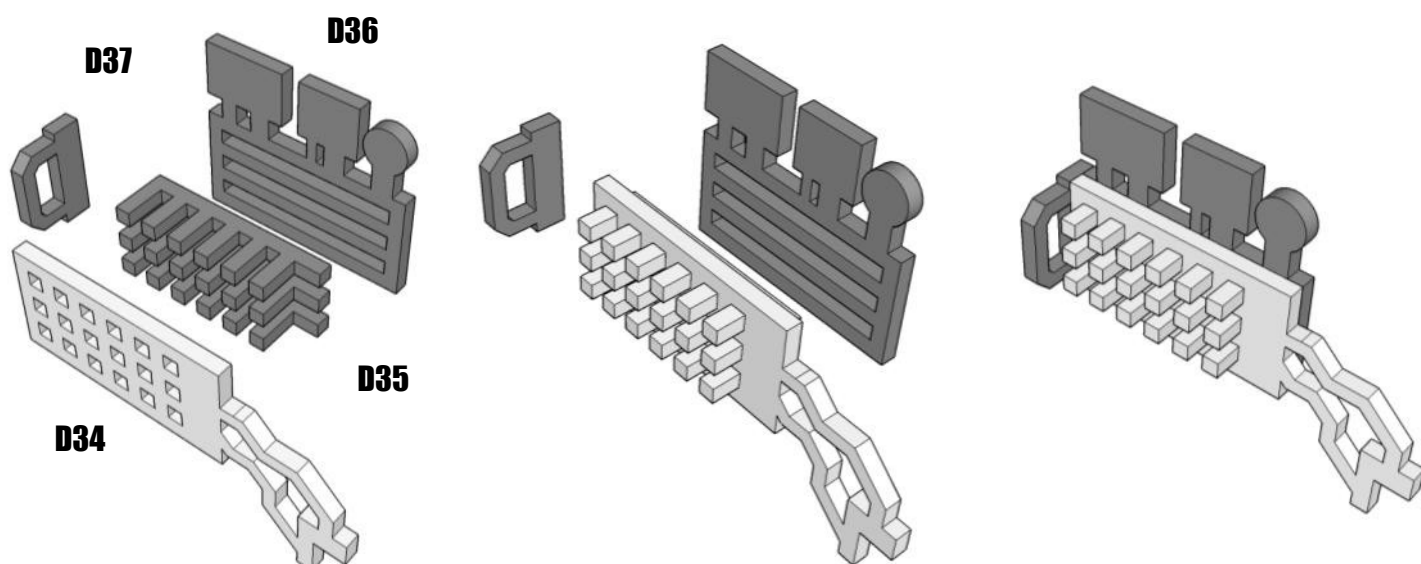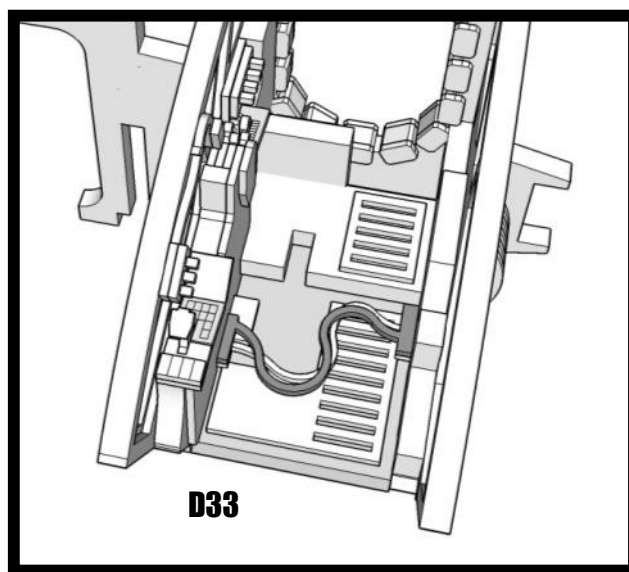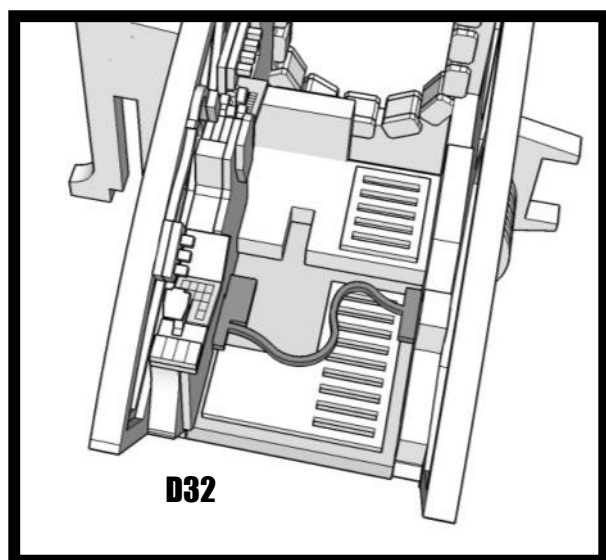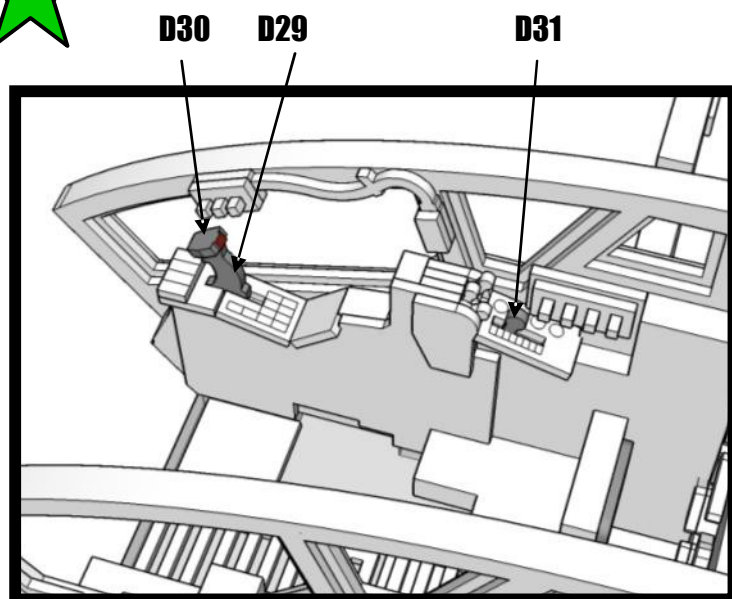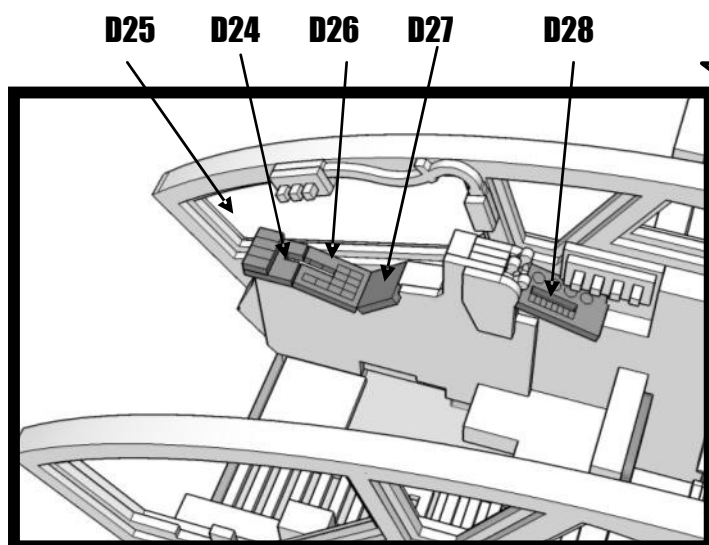

Detail parts. Deluxe Peregrine Interior.
Cockpit.





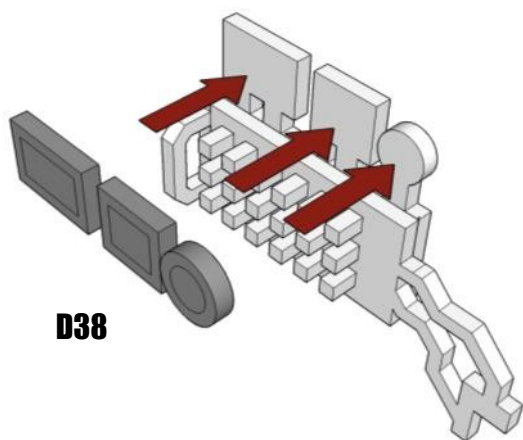


D38

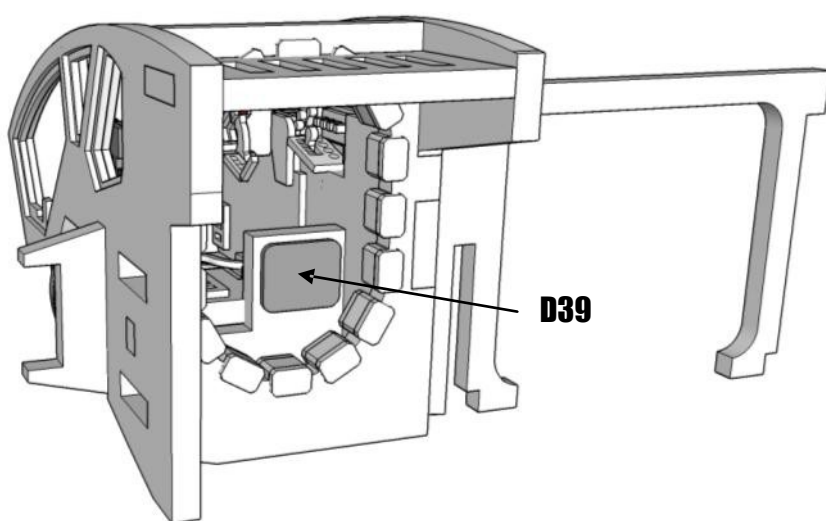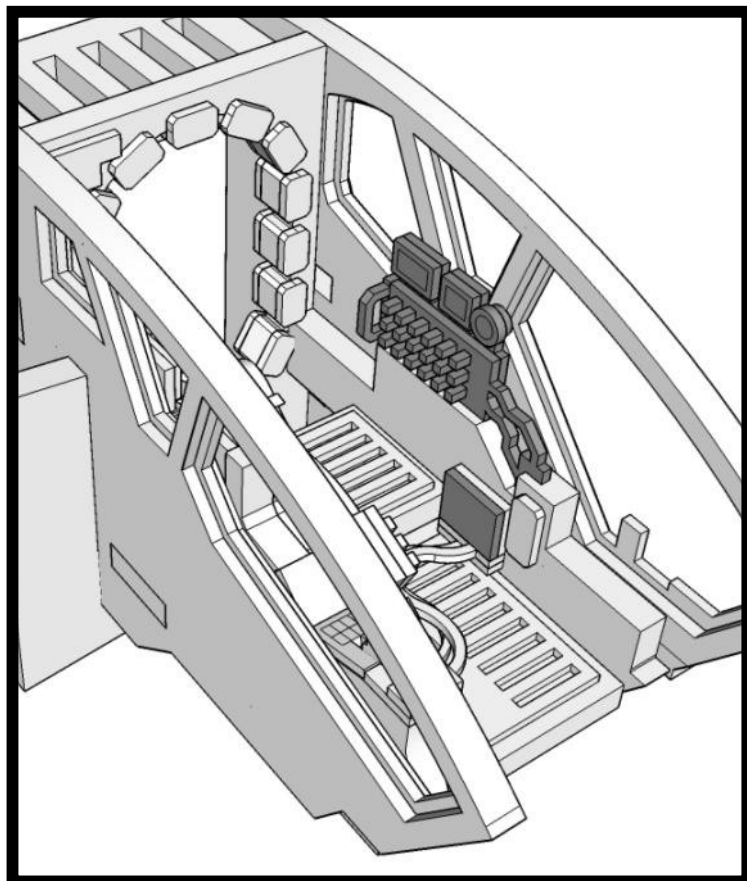


D39

Detail parts. Deluxe Peregrine Interior.
Cockpit.

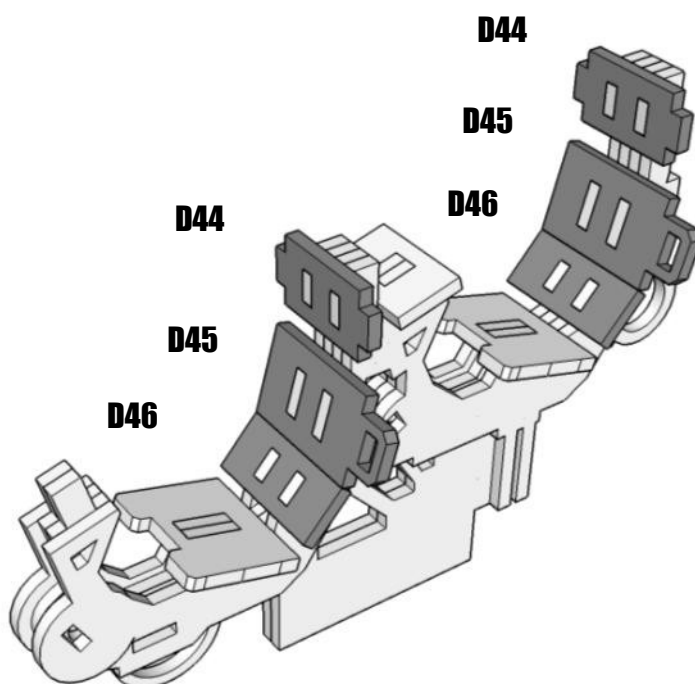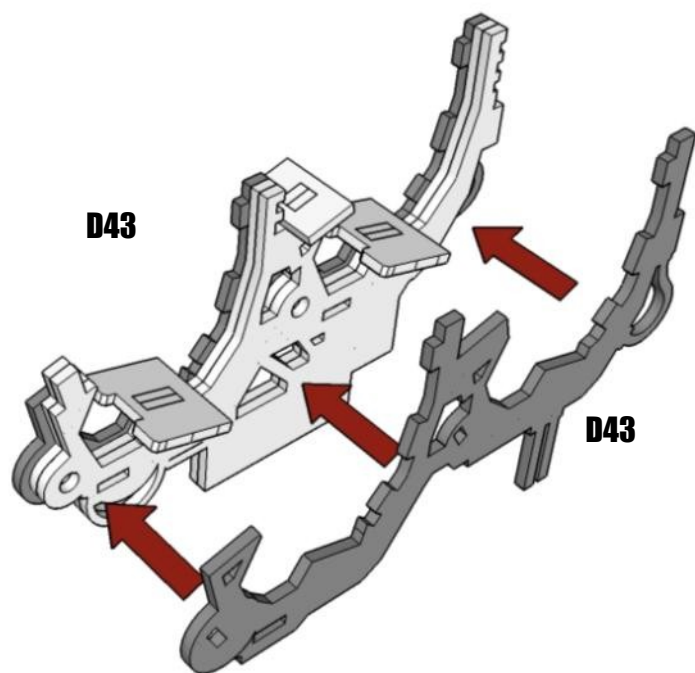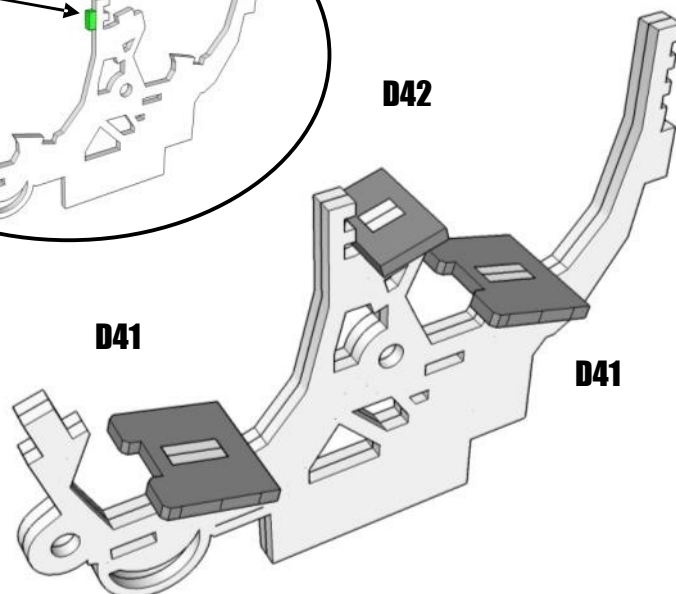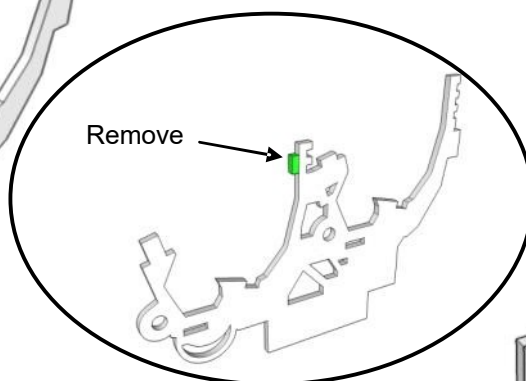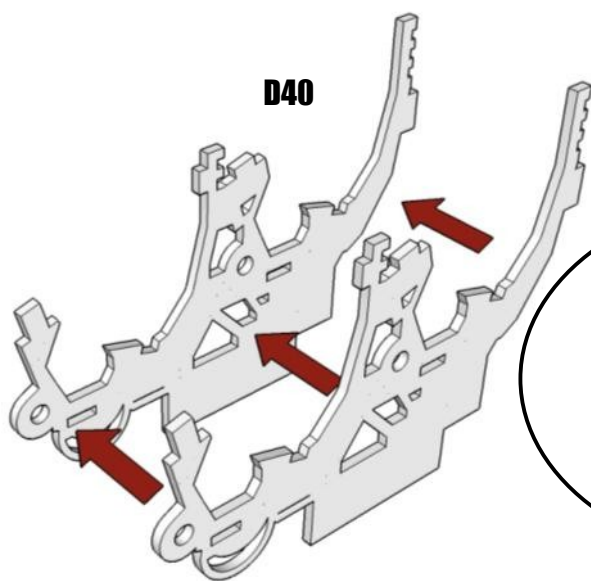


Detail parts. Deluxe Peregrine Interior.
Cockpit.

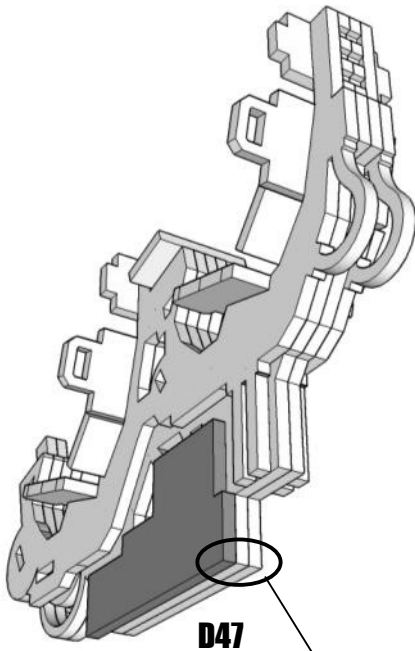

D47

Parts should line up here.

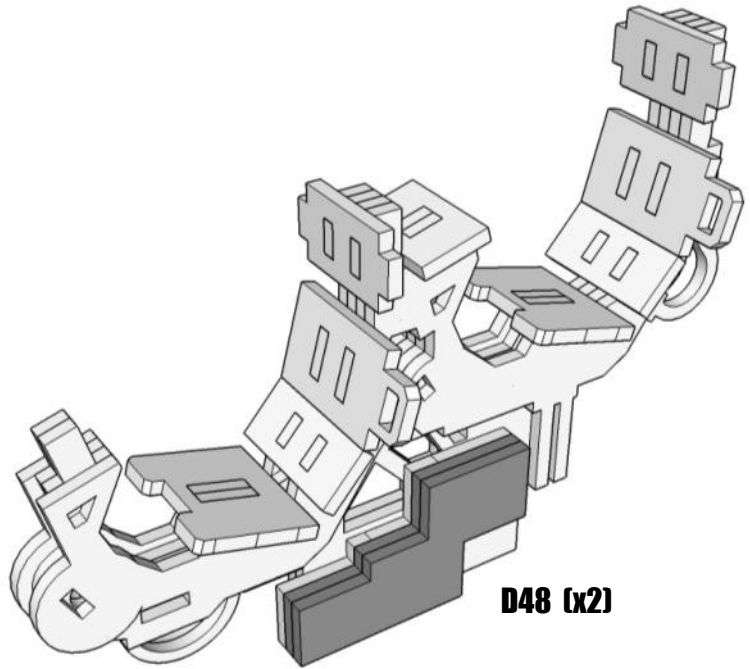

D48 (x2)


Don't cover up the foot
pedal holes!!

D49

D50

D51

D51

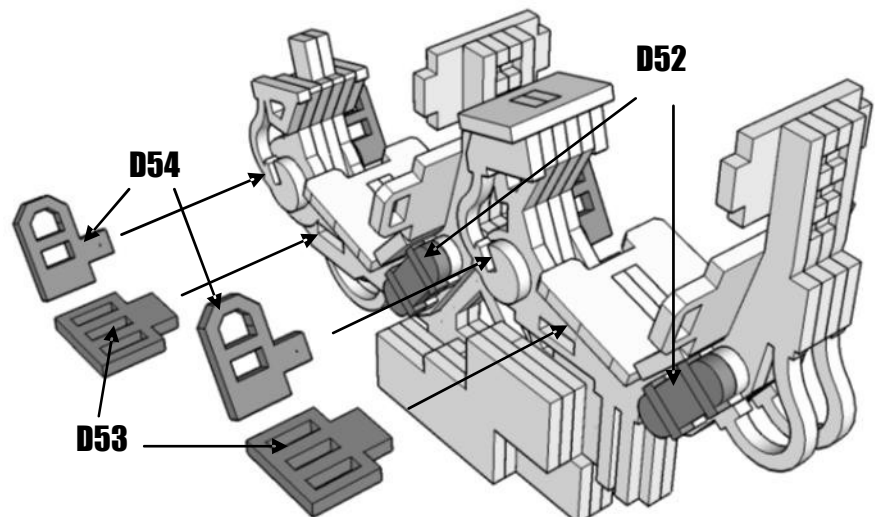



D52

D54

D53

Be Careful. These parts
are easy to damage.

Detail parts. Deluxe Peregrine Interior.
Cockpit.

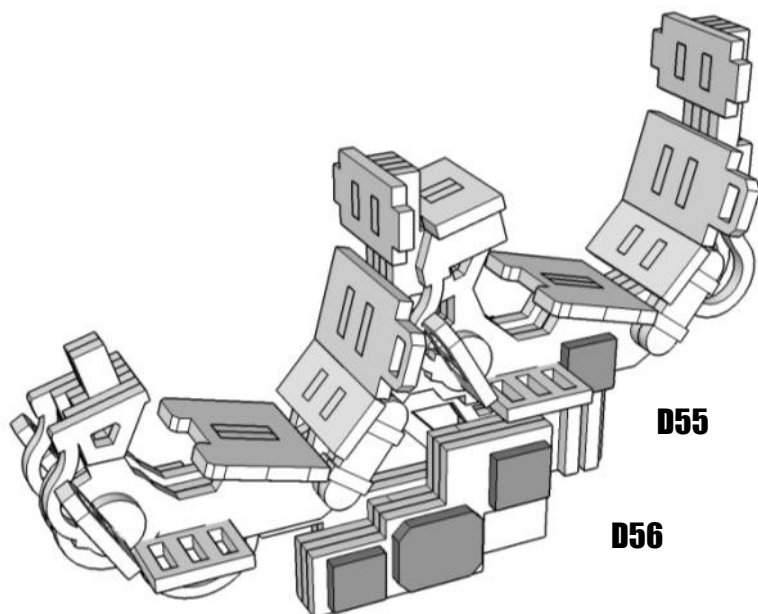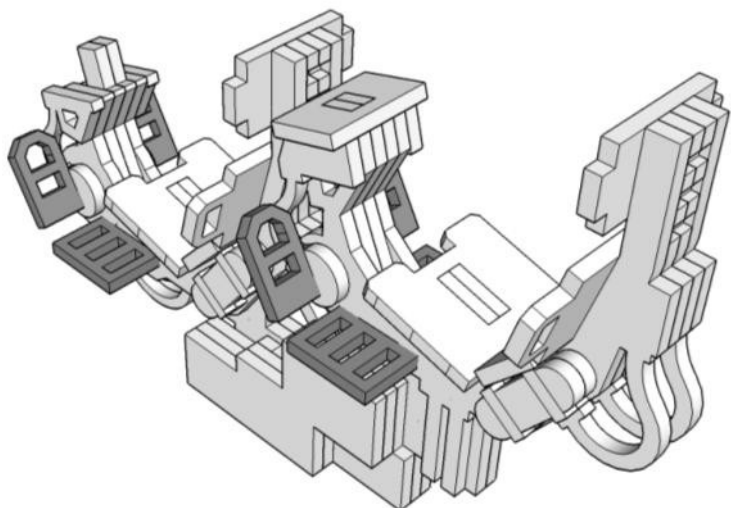


D55

D56

D57

D58

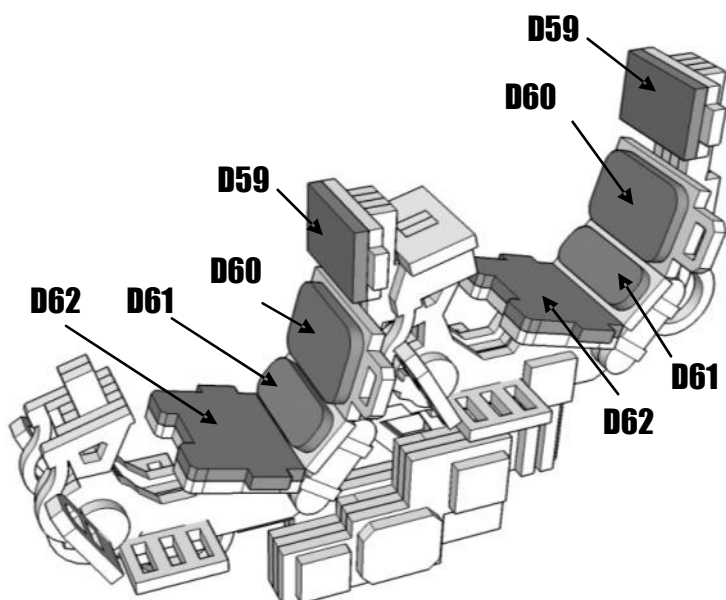

D59

D60

D59


D60

D62

D61





D61

D62

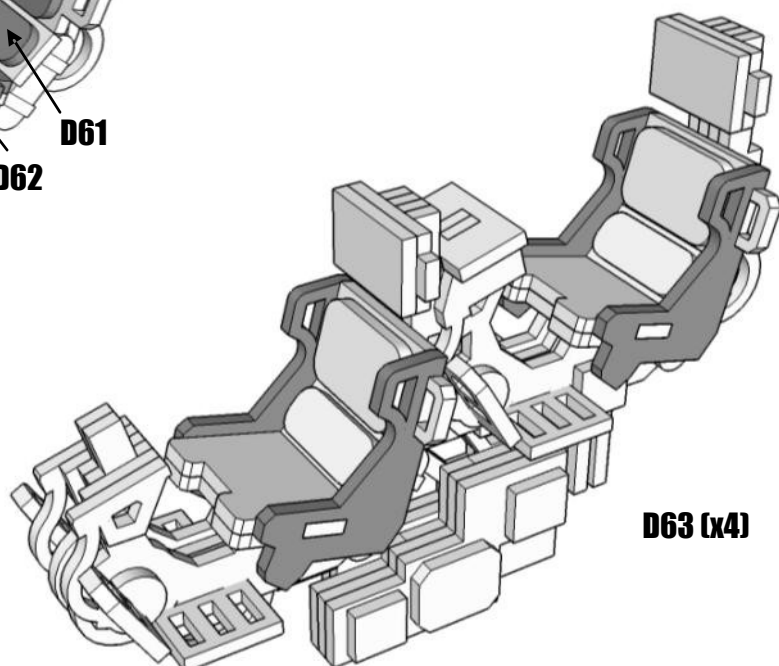

D63 (x4)

Detail parts. Deluxe Peregrine Interior.
Cockpit.

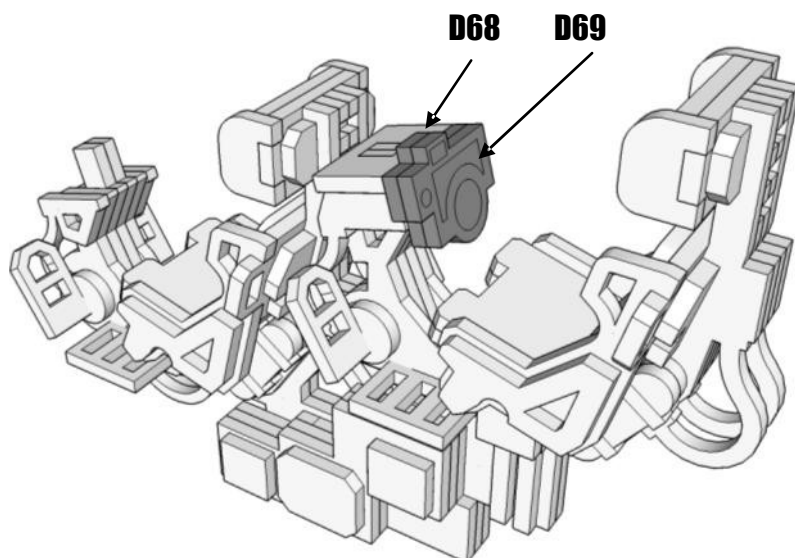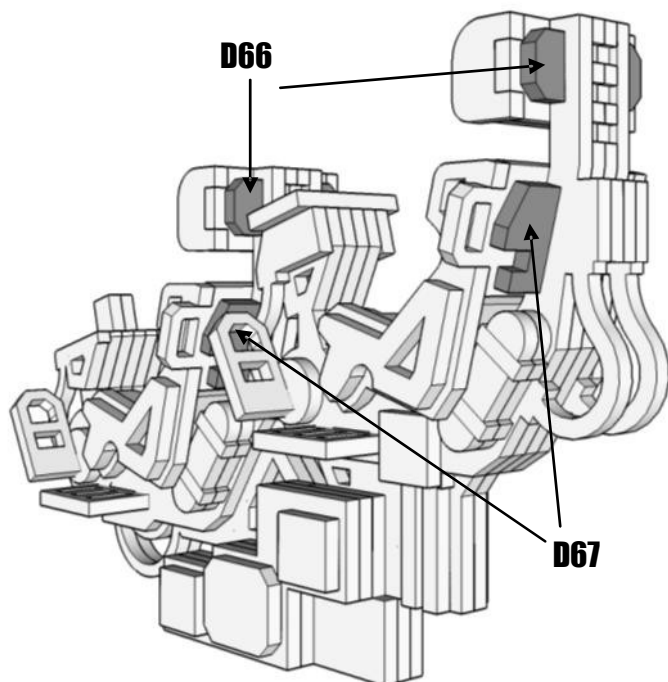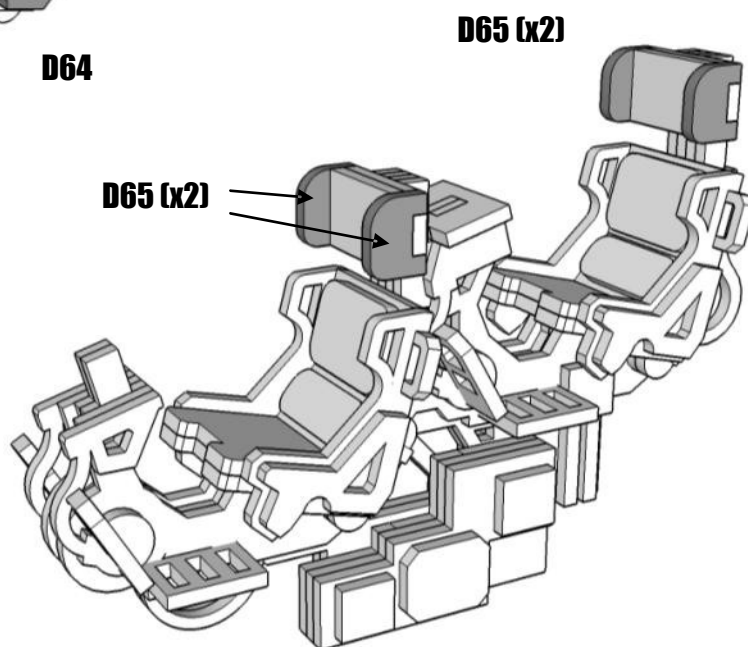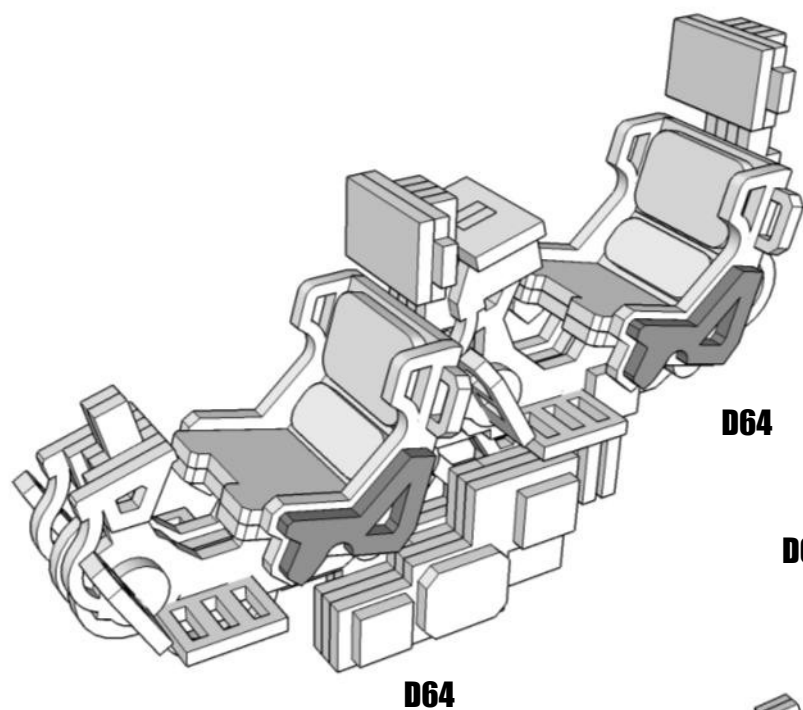


Detail parts. Deluxe Peregrine Interior.
Cockpit.




D70


D71

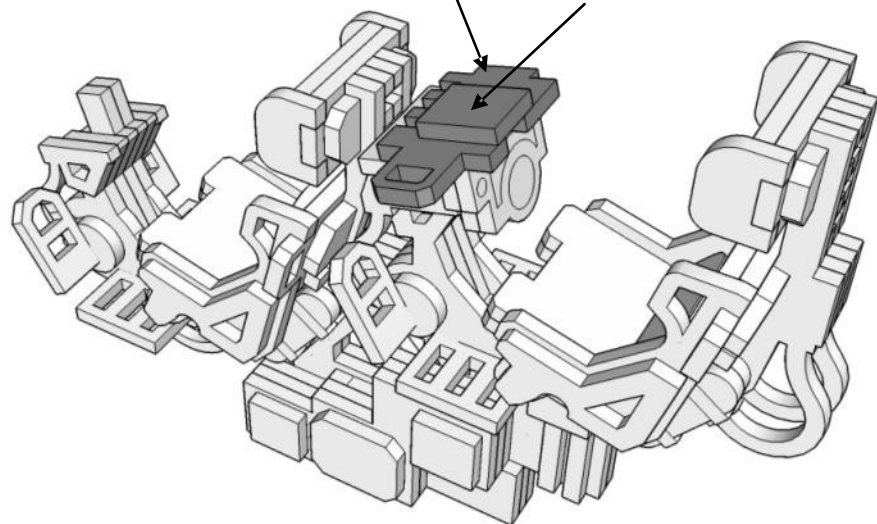


D72 (Both sides)

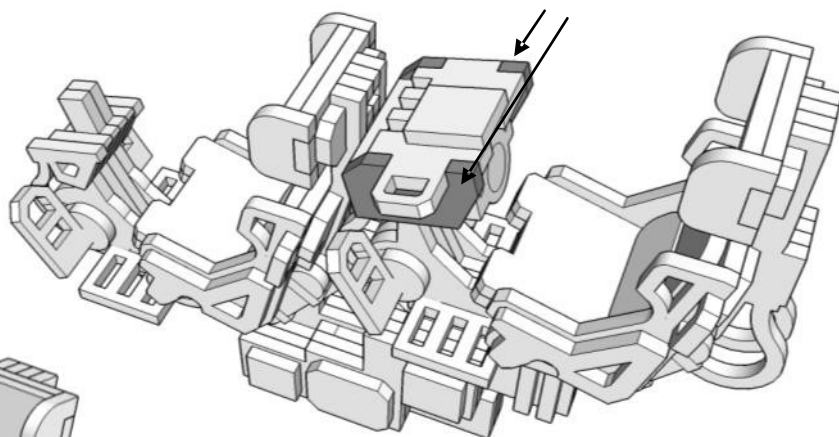

D73

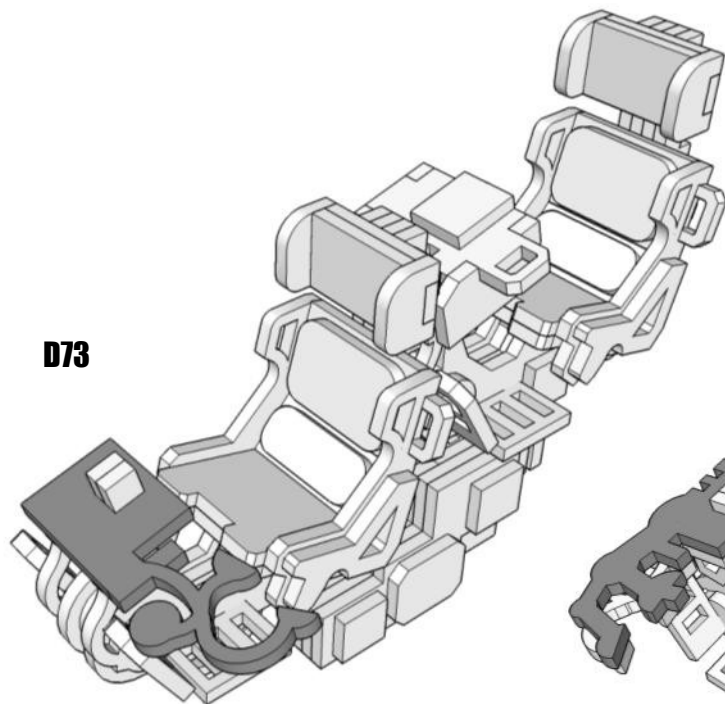


D74

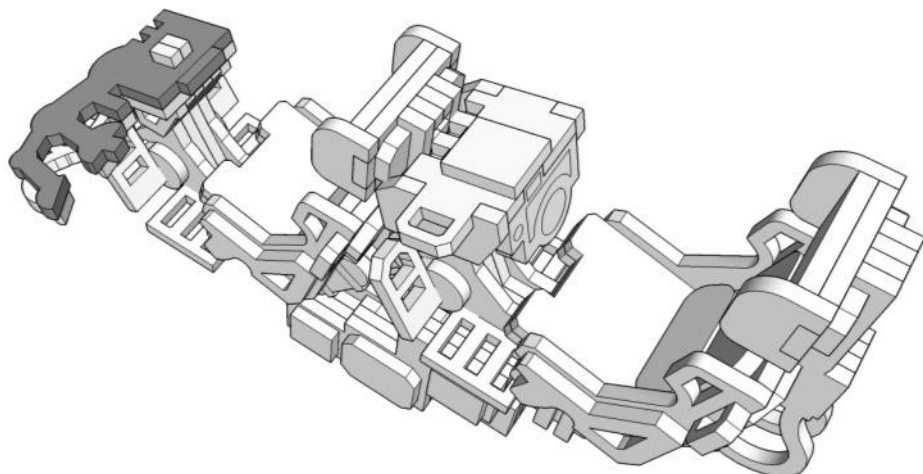

Detail parts. Deluxe Peregrine Interior.
Cockpit.




D75

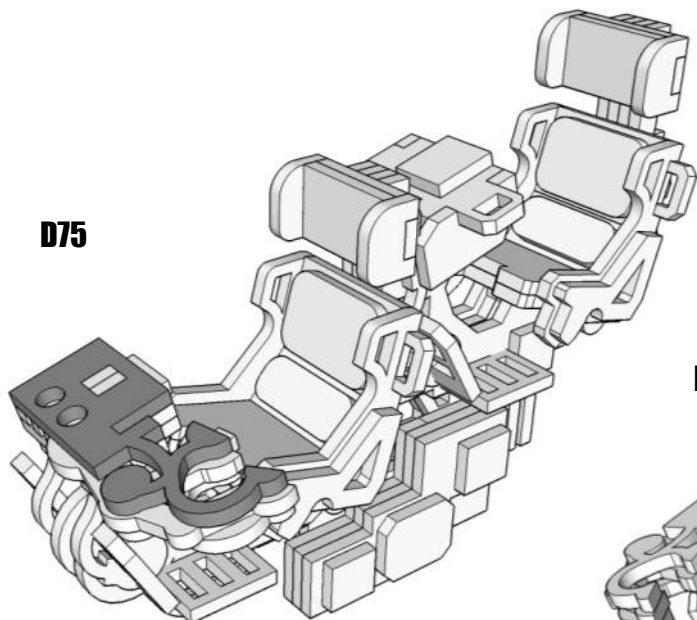


D76

D77

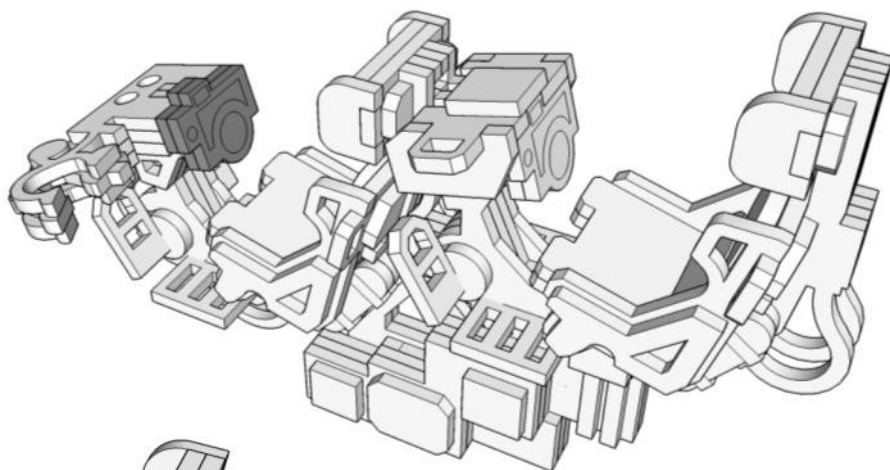


D78 (both sides)

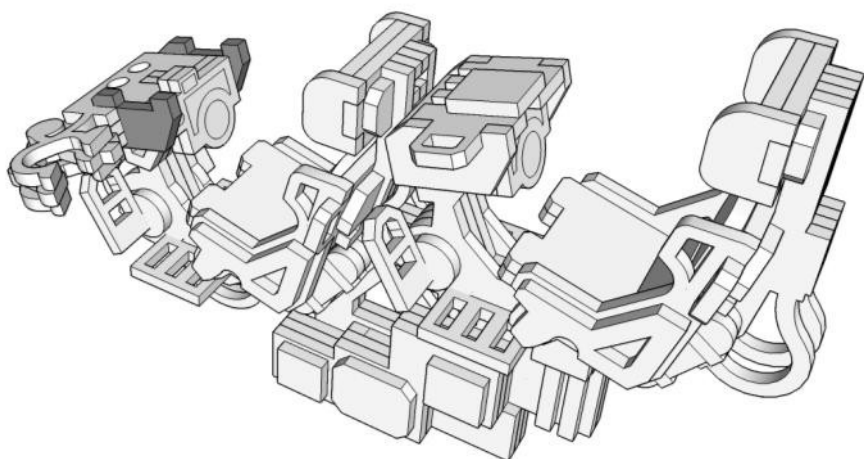


D79



D80

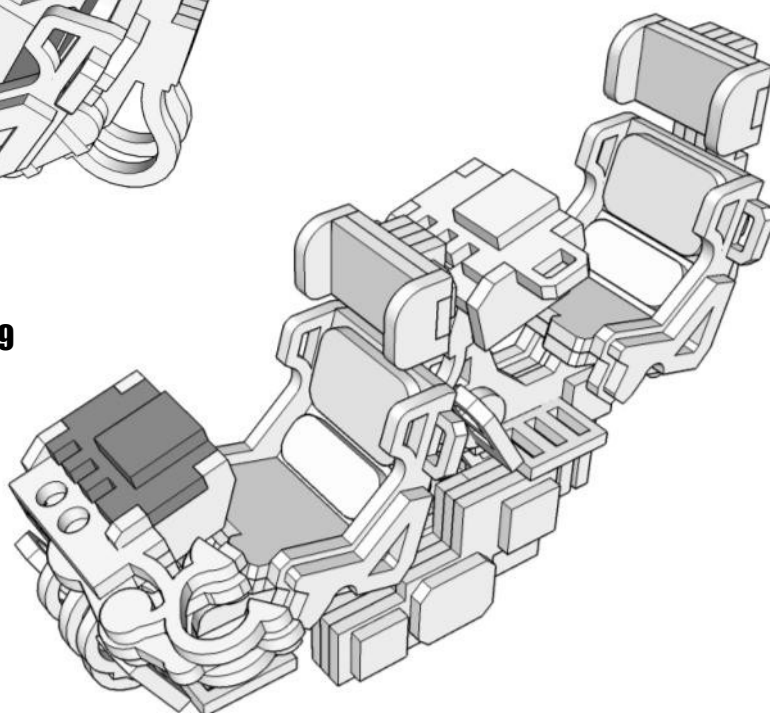

Detail parts. Deluxe Peregrine Interior.
Cockpit.

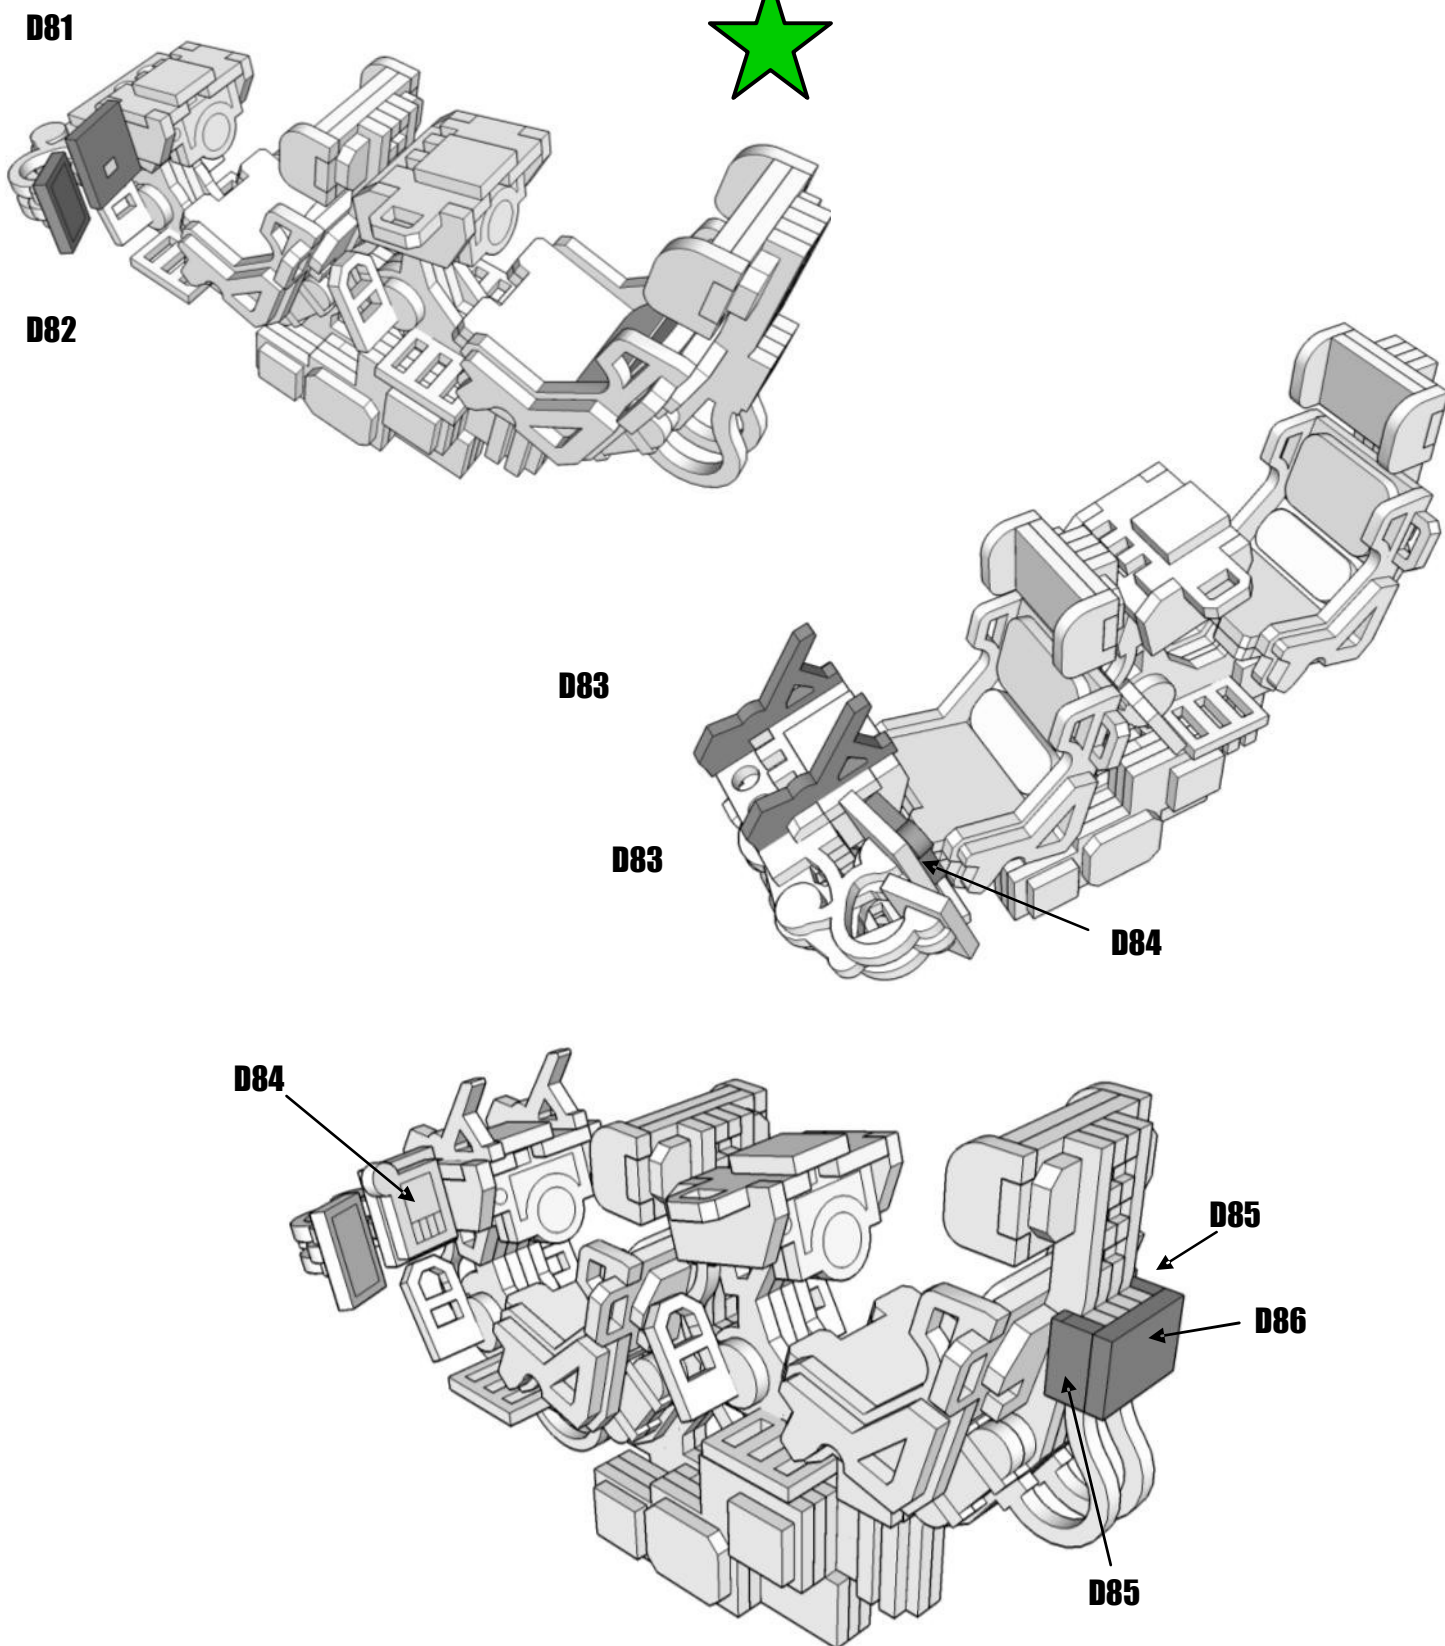


Detail parts. Deluxe Peregrine Interior.
Cockpit.

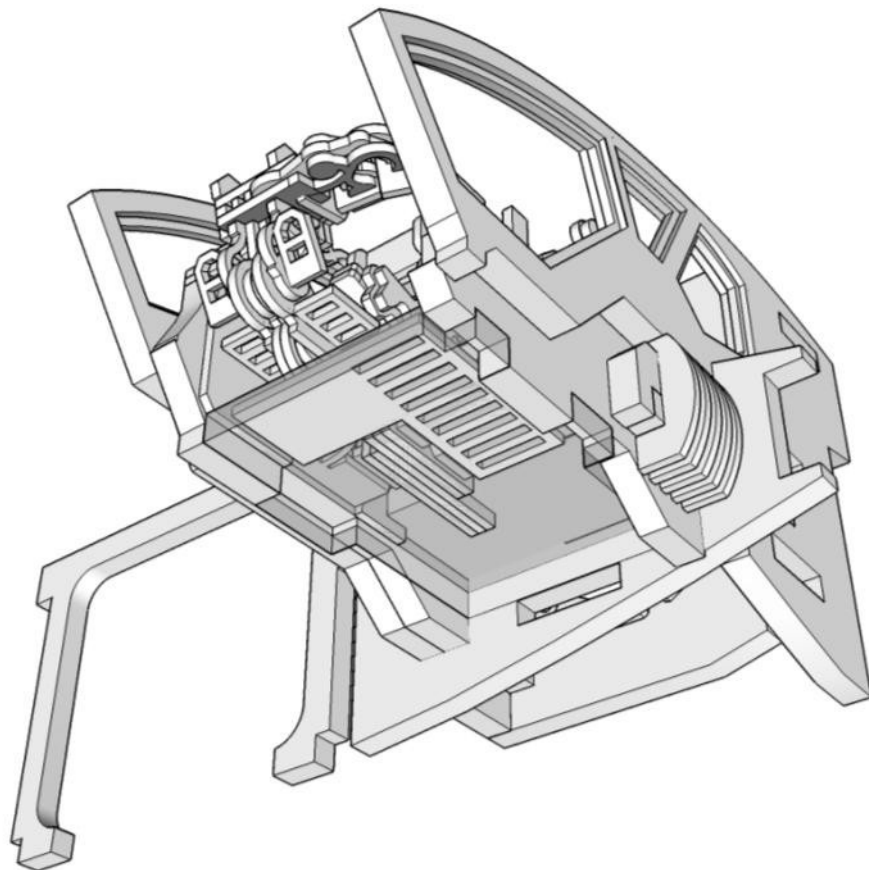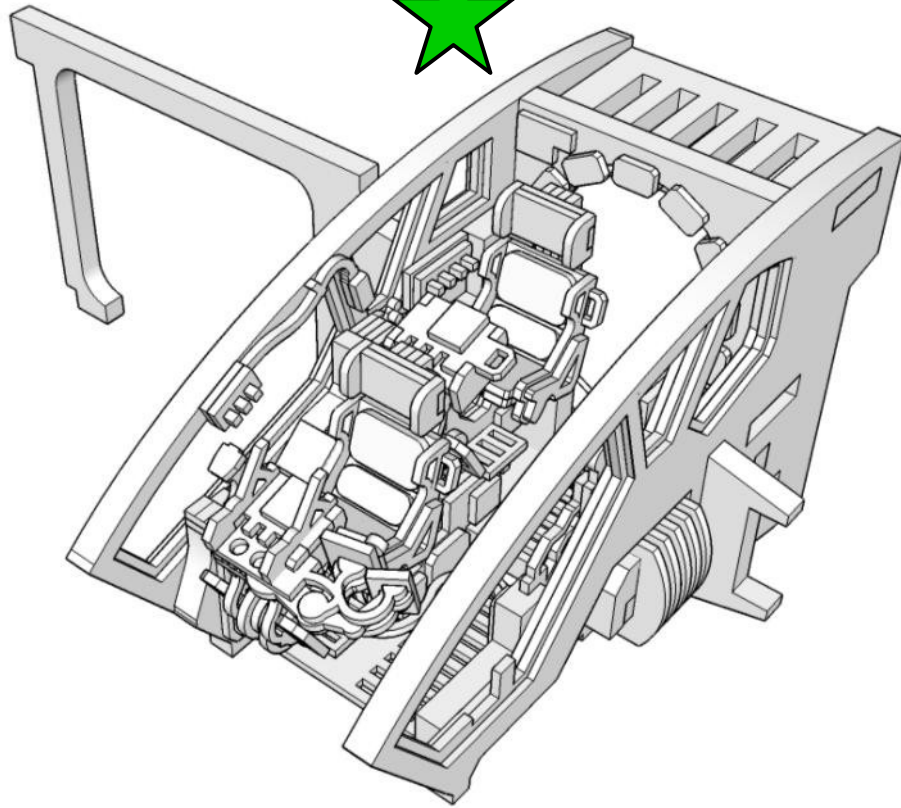


Detail parts. Deluxe Peregrine Interior.
Cockpit.




D86

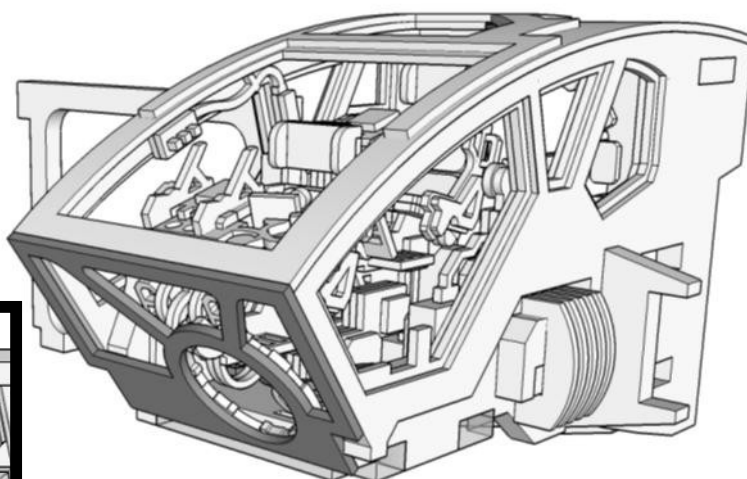


D89

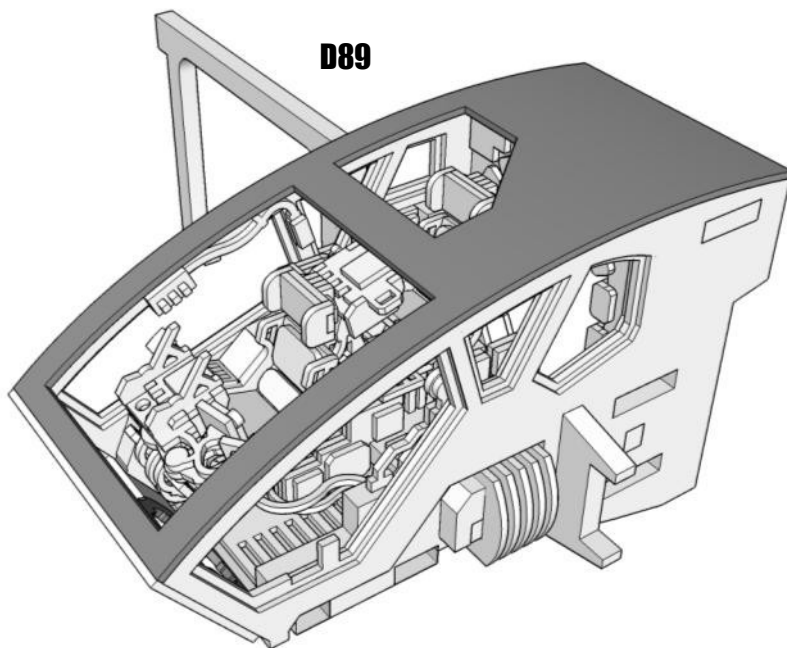



D90

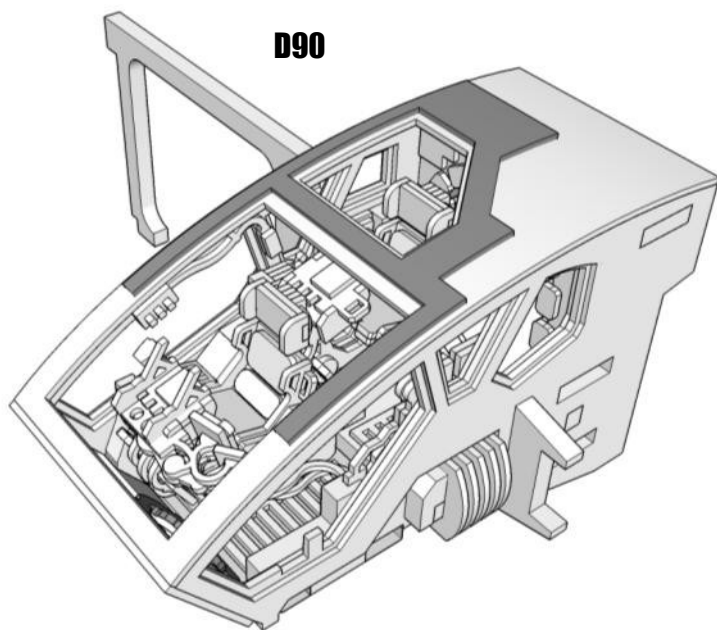

D88

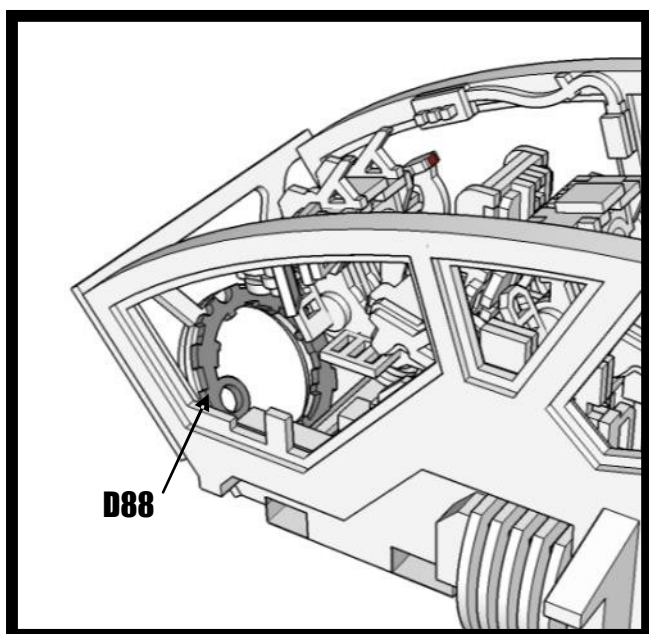




Detail parts. Deluxe Peregrine Interior.
Cockpit.

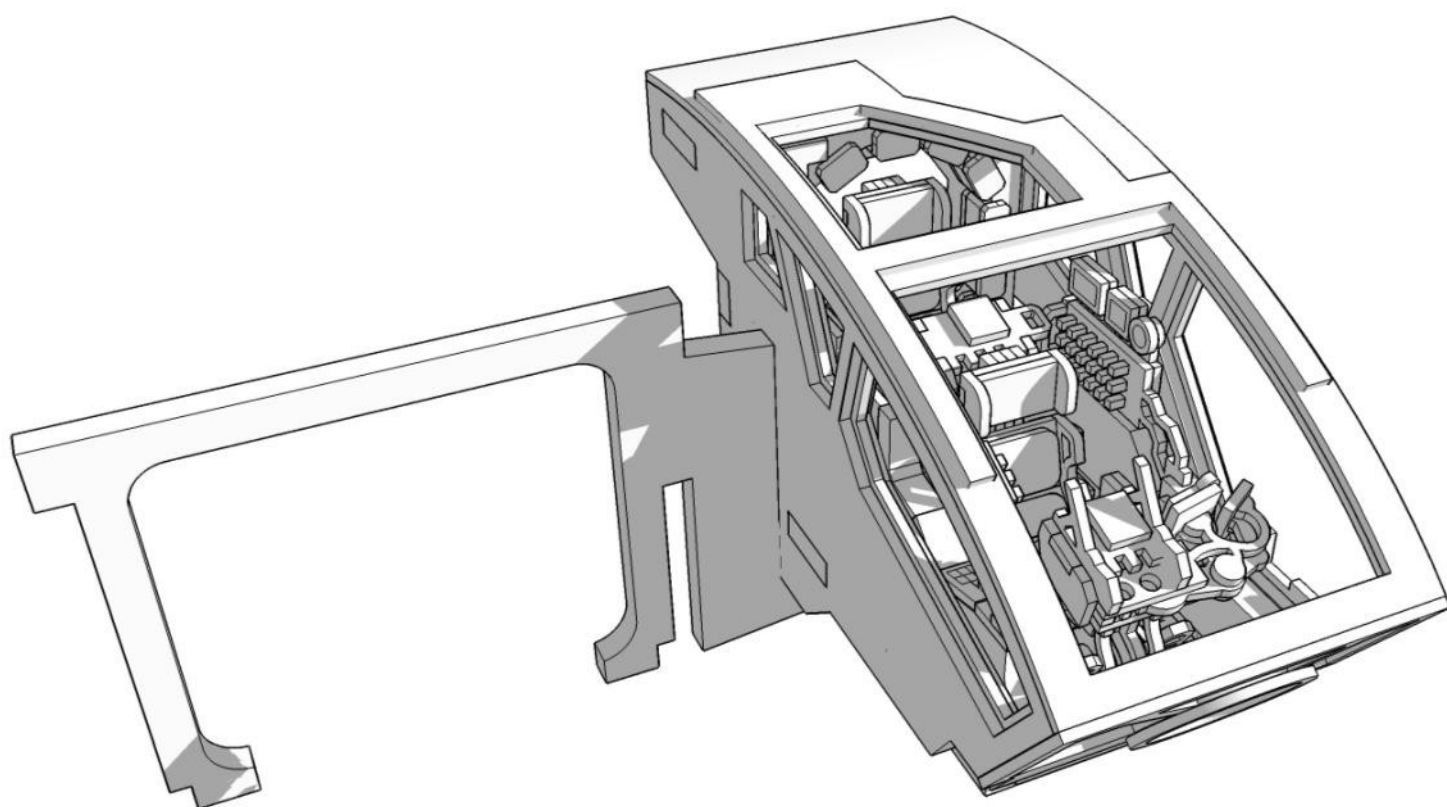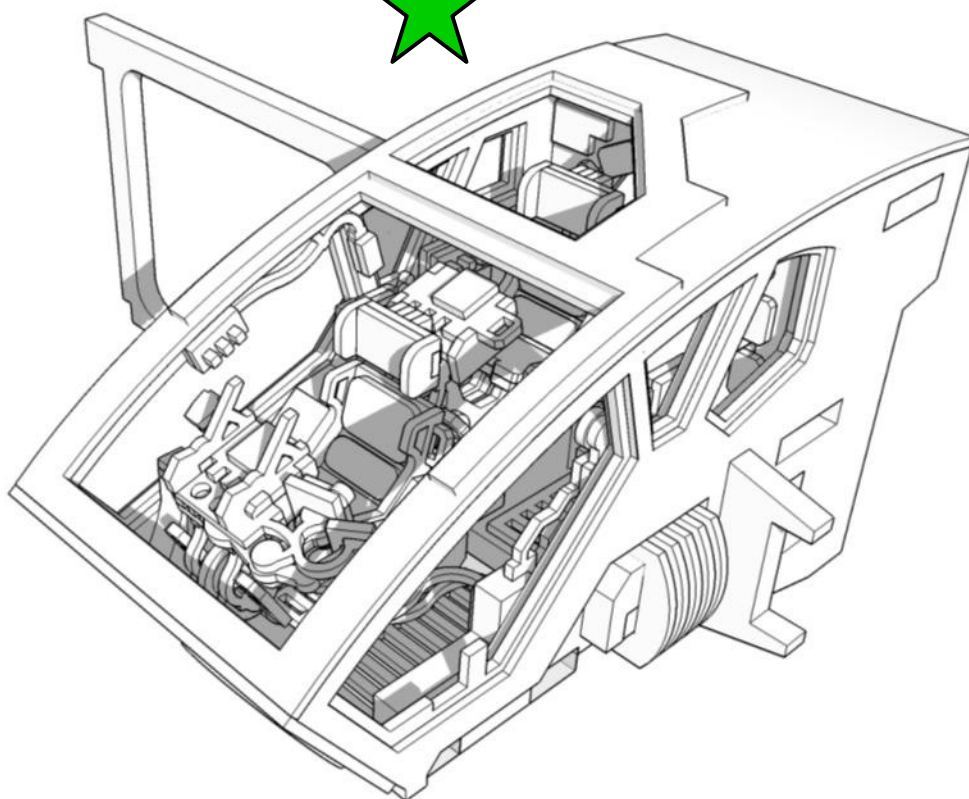



Detail parts. Deluxe Peregrine Interior.
Engines.




There are two engines. The following steps show both left and right handed versions.

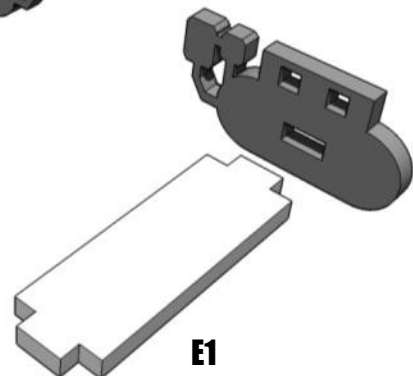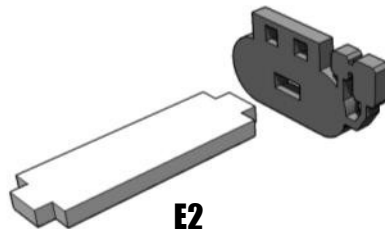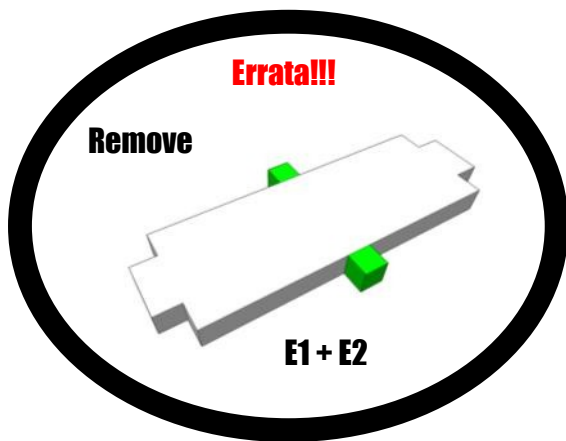



Bi-axial Plasma Splitter plates.

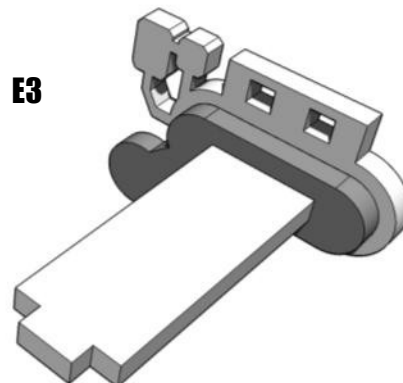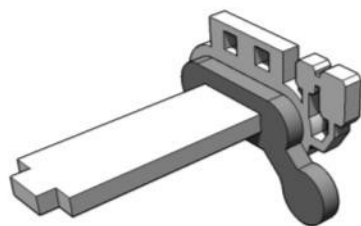


Detail parts. Deluxe Peregrine Interior.
Engines.

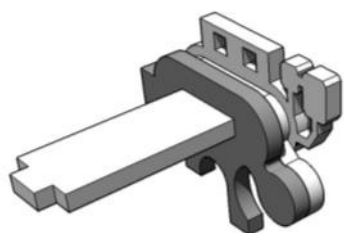




E4

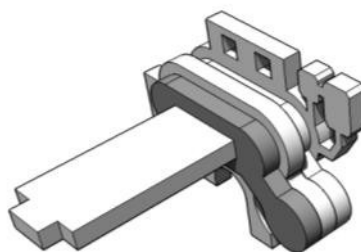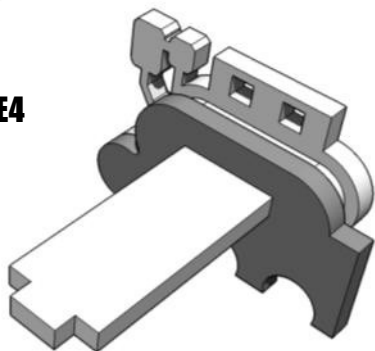

E5


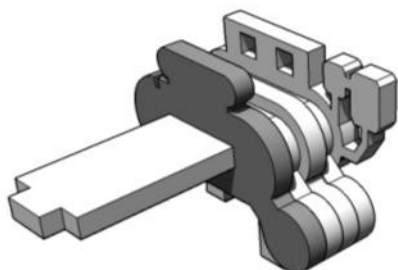


E6

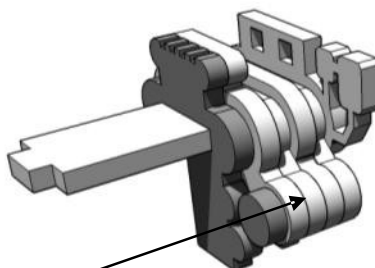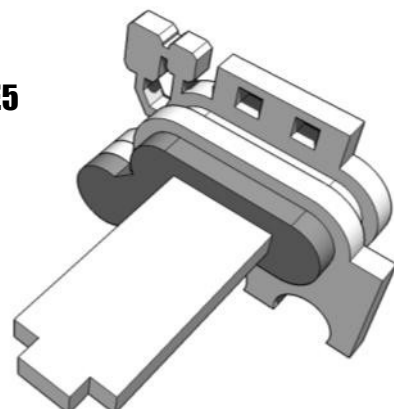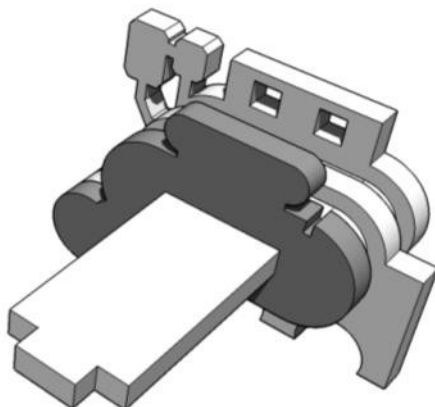


E7



Deptronic infuser tanks

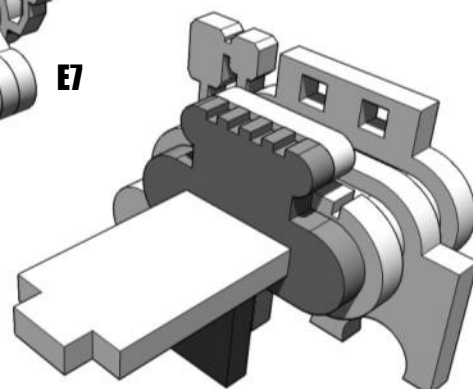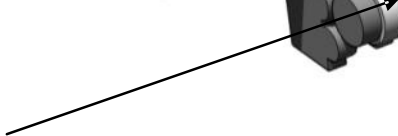


Detail parts. Deluxe Peregrine Interior.
Engines.

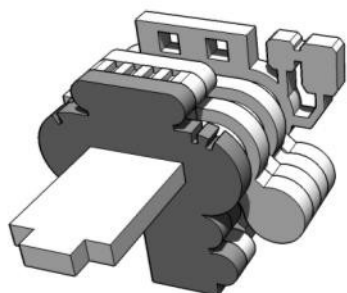


E8

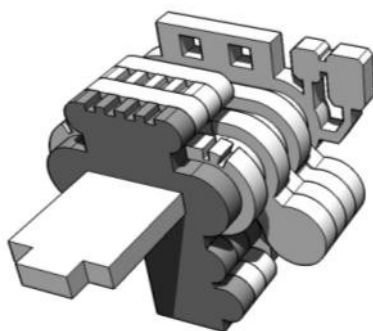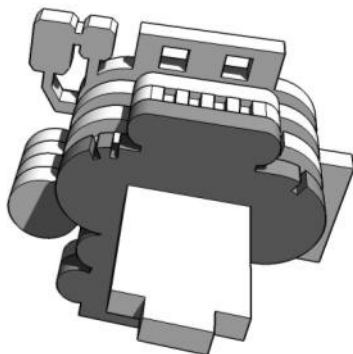



E9

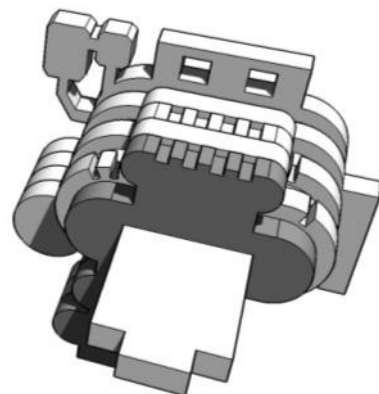


Molecular Particle Assembly.

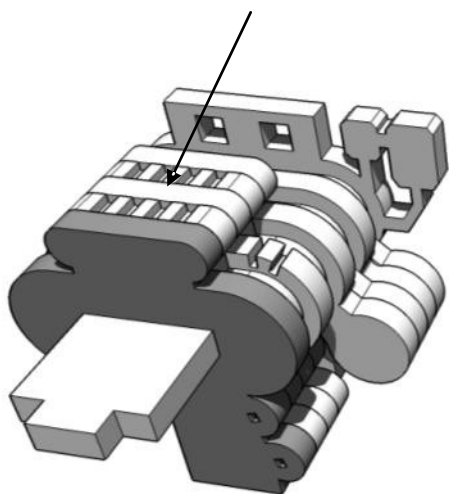


E10

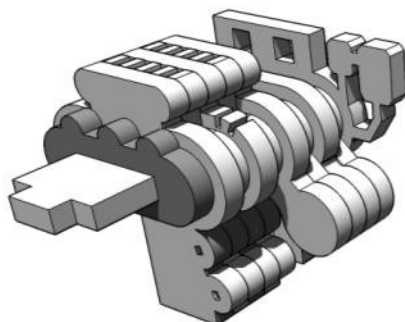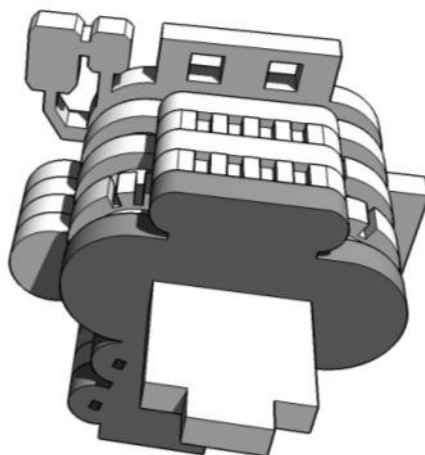



E11

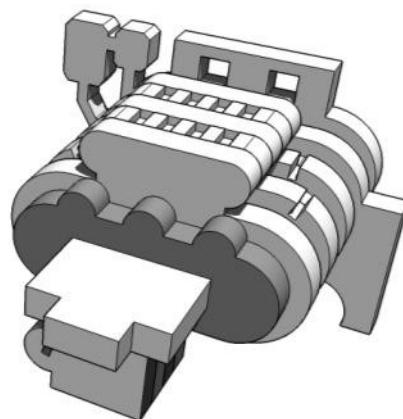


Detail parts. Deluxe Peregrine Interior.
Engines.

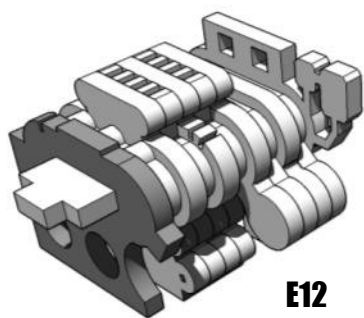


E12

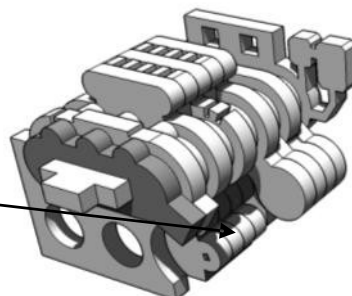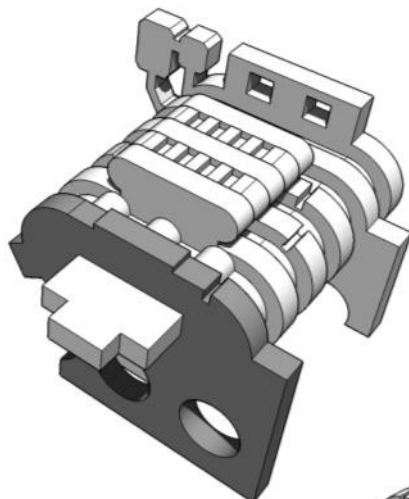



E13

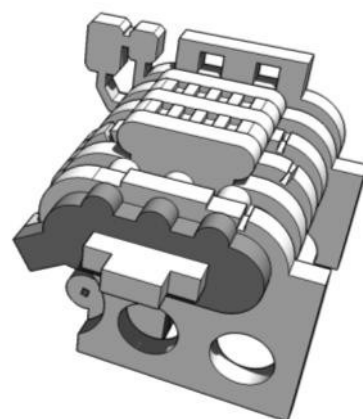


Phased Neutrino containment

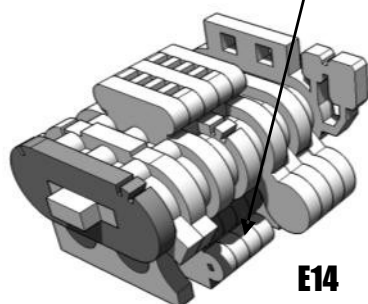


E14

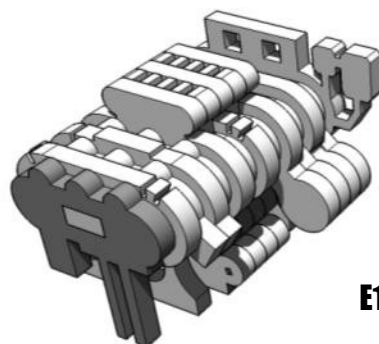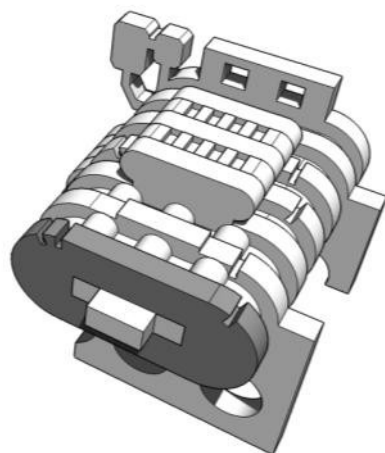





E15

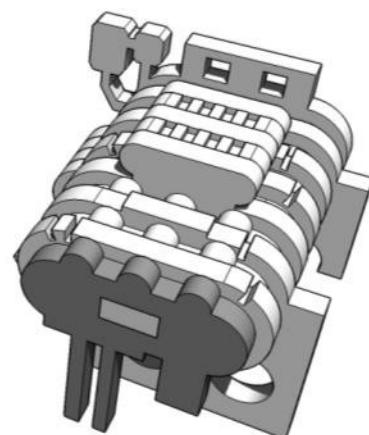



Detail parts. Deluxe Peregrine Interior.
Engines.

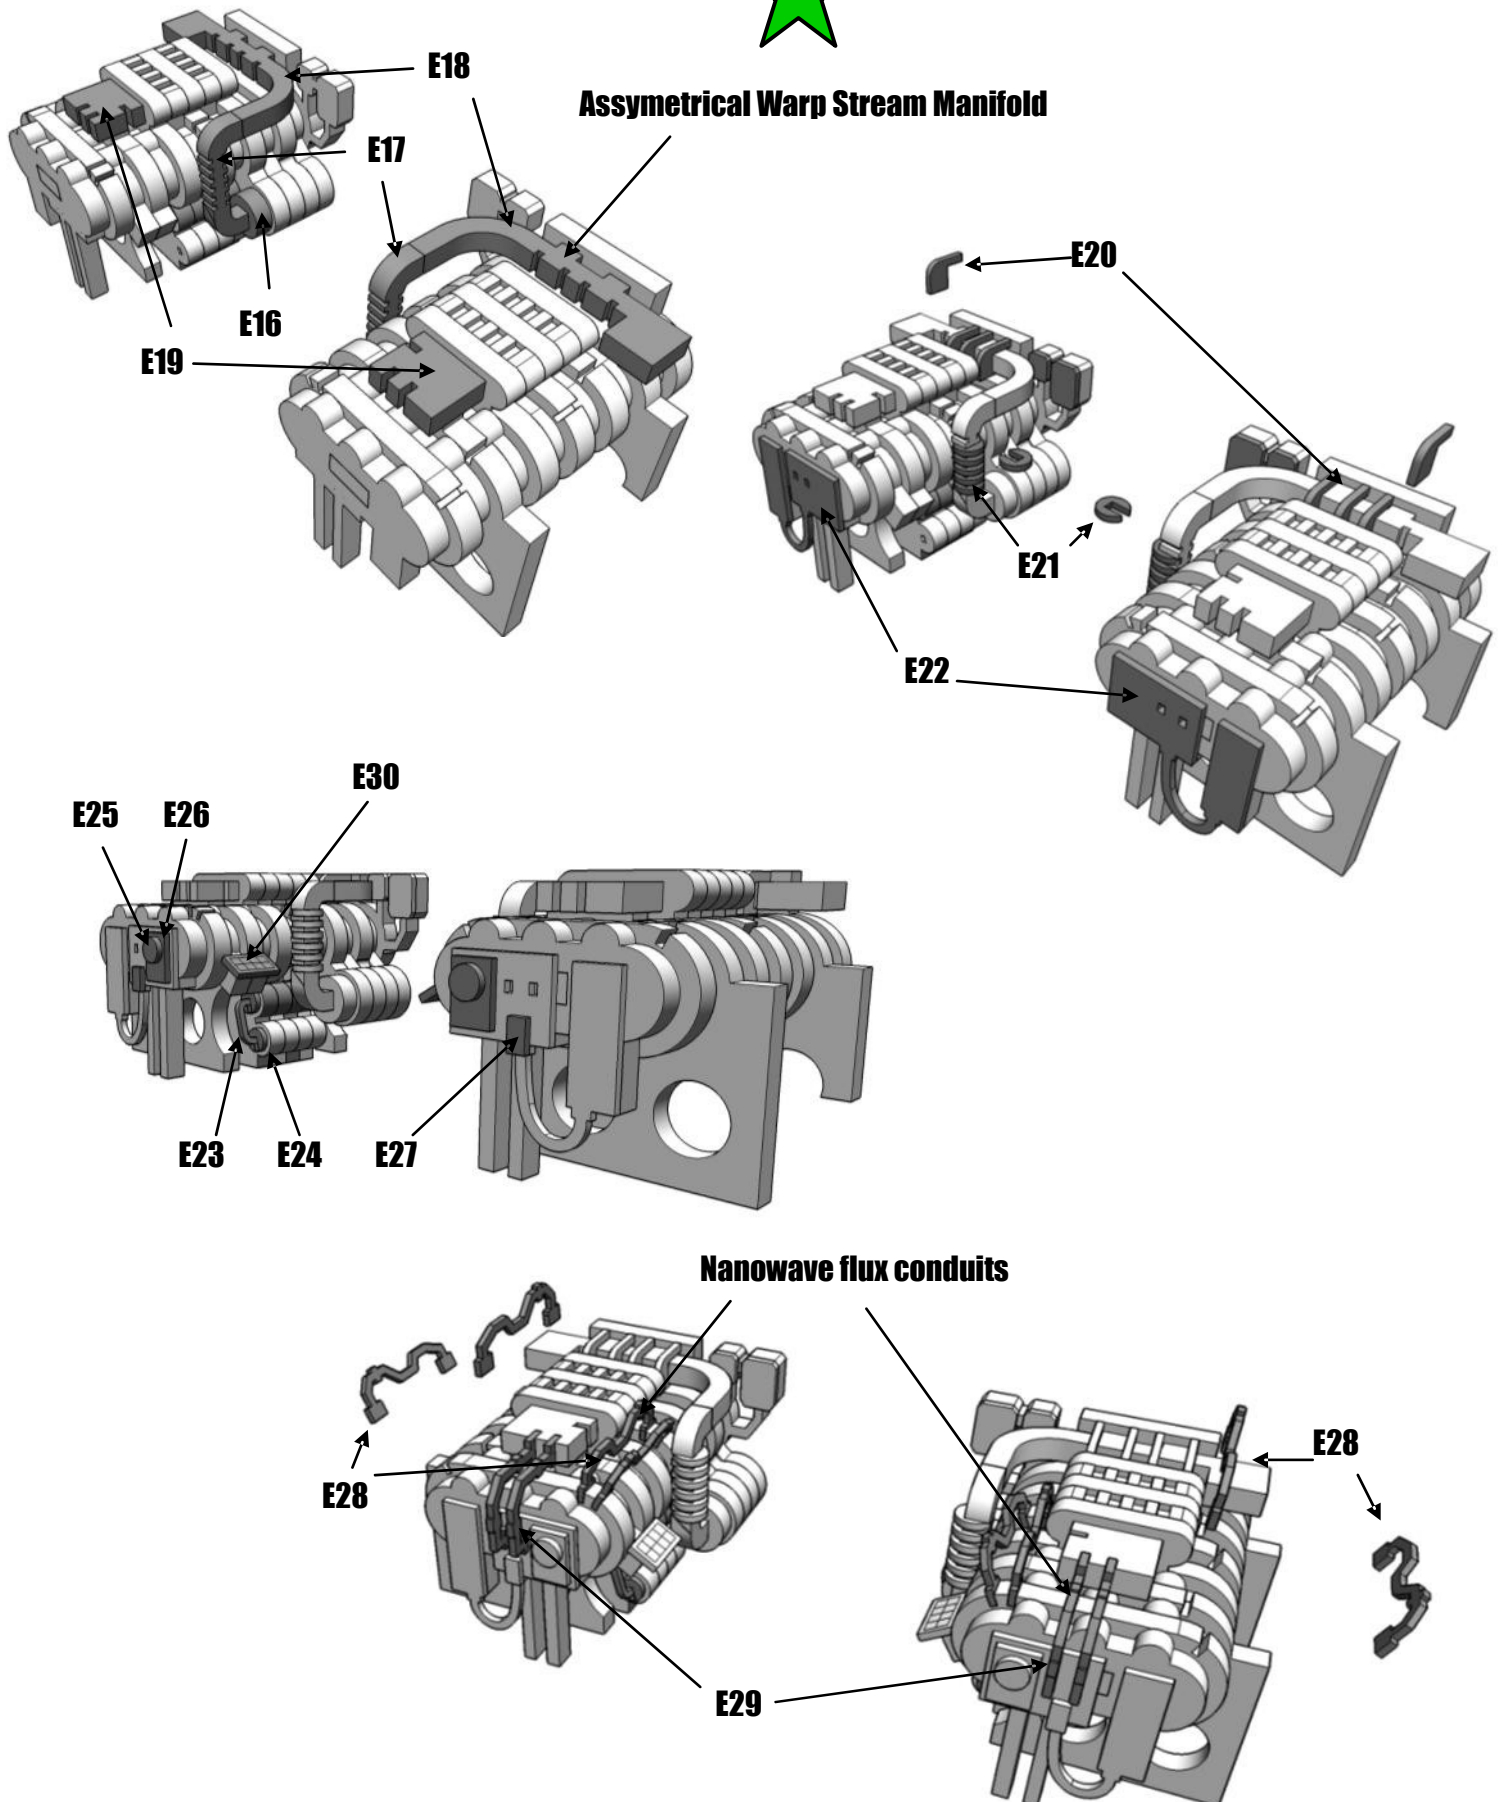


Detail parts. Deluxe Peregrine Interior.
Engines.

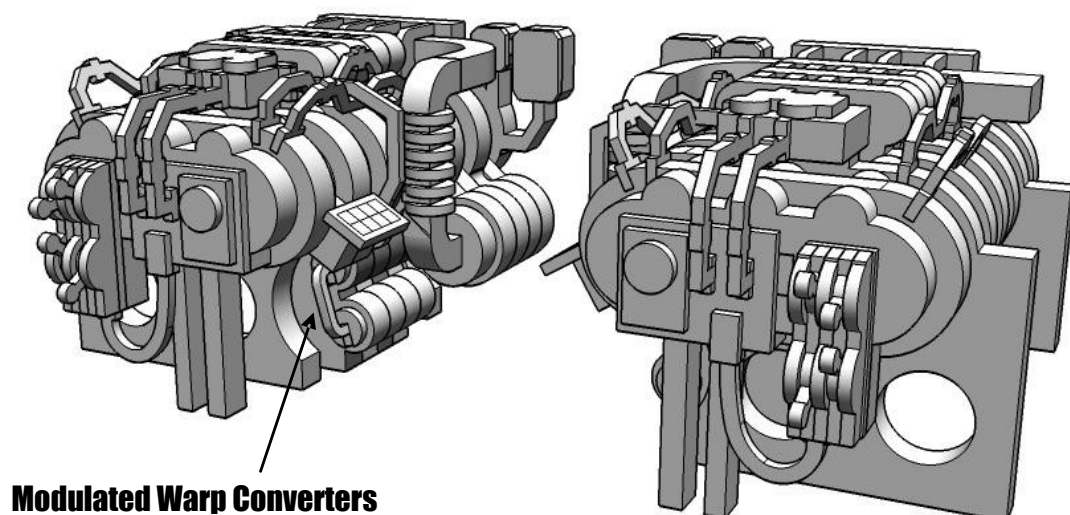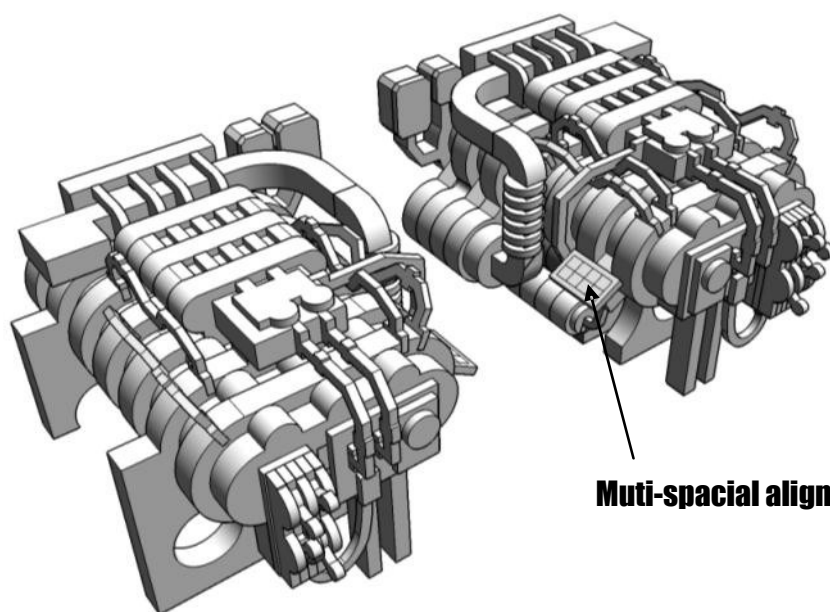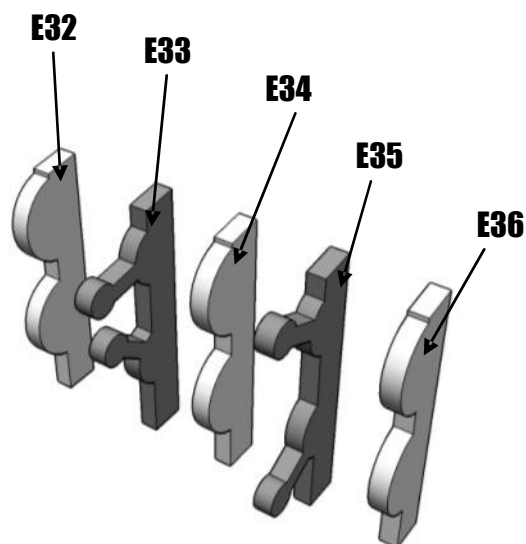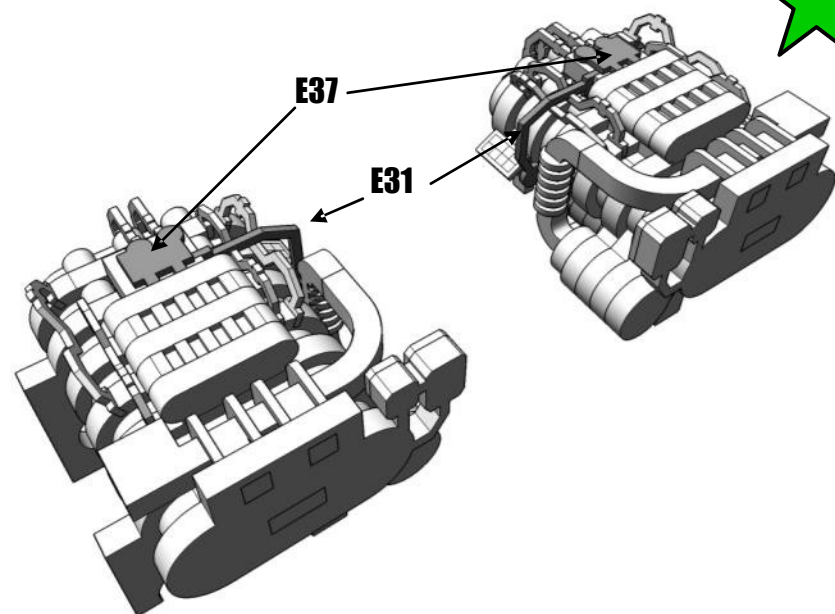


Detail parts. Deluxe Peregrine Interior.
General Interior.

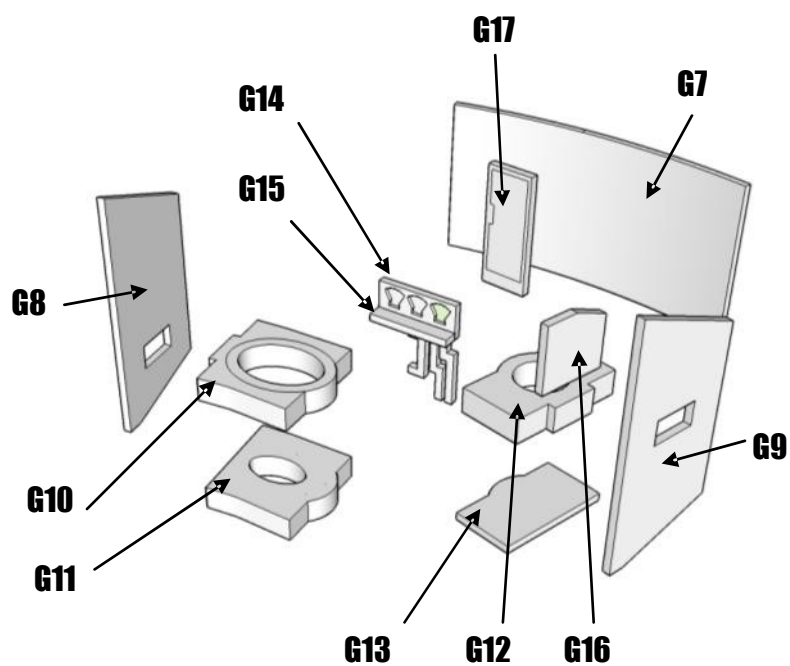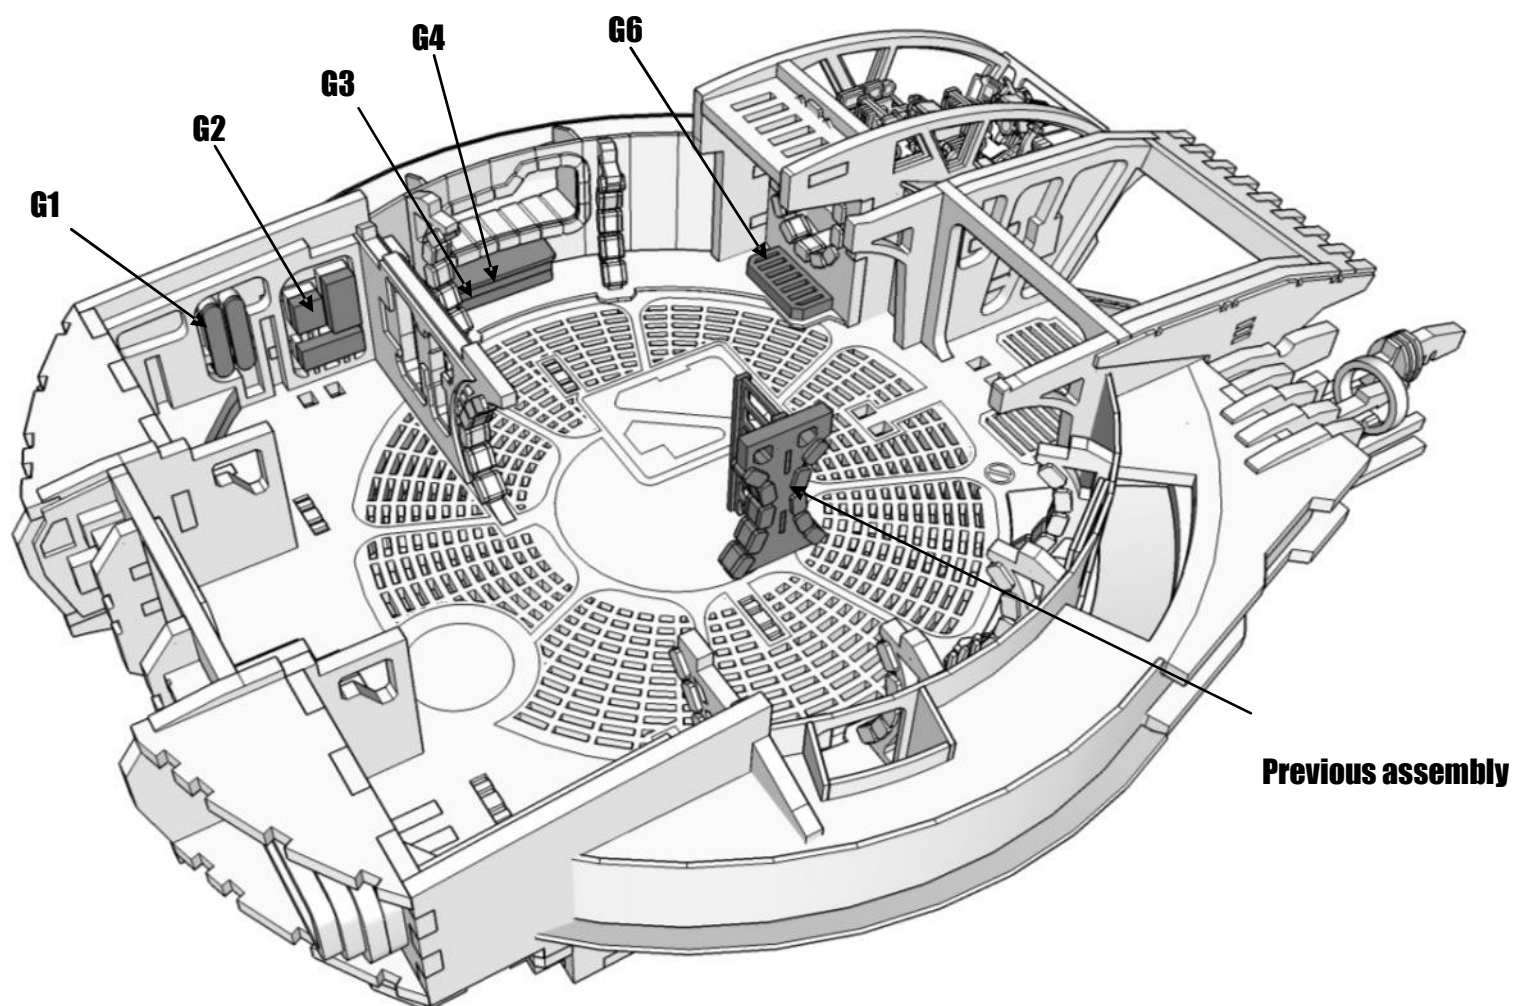

Detail parts. Deluxe Peregrine Interior.
General Interior.

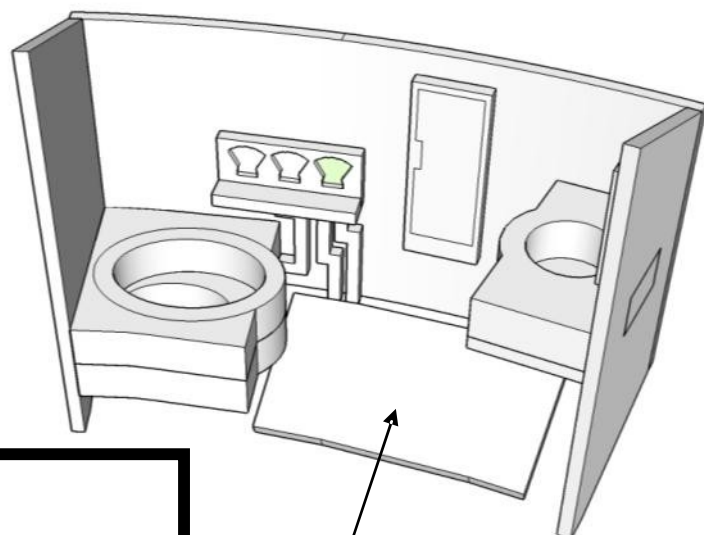


G18



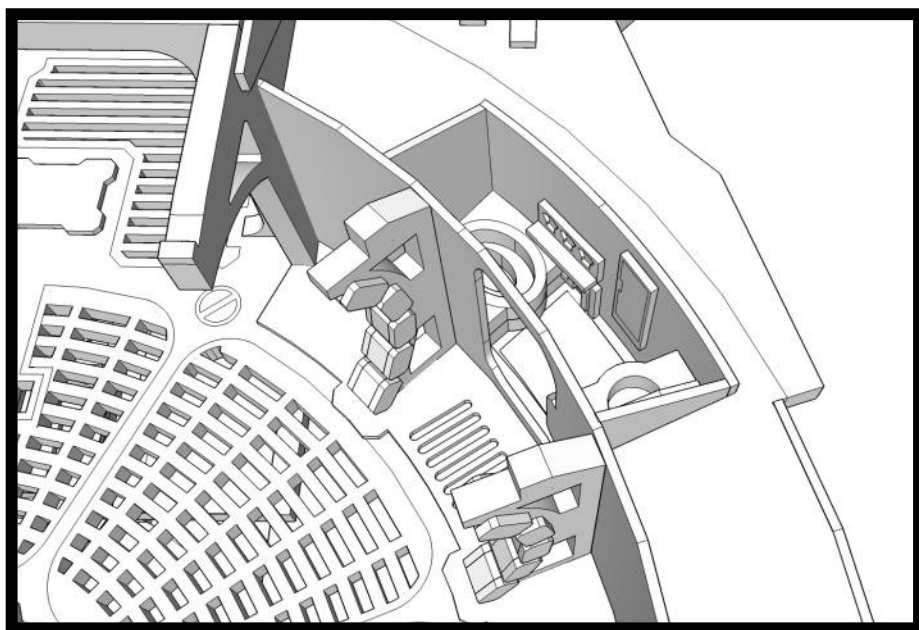


G20




G19

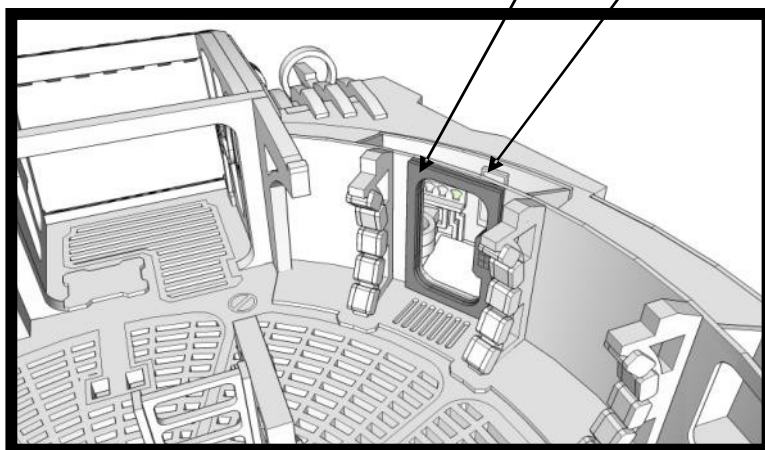


Detail parts. Deluxe Peregrine Interior.
General Interior.

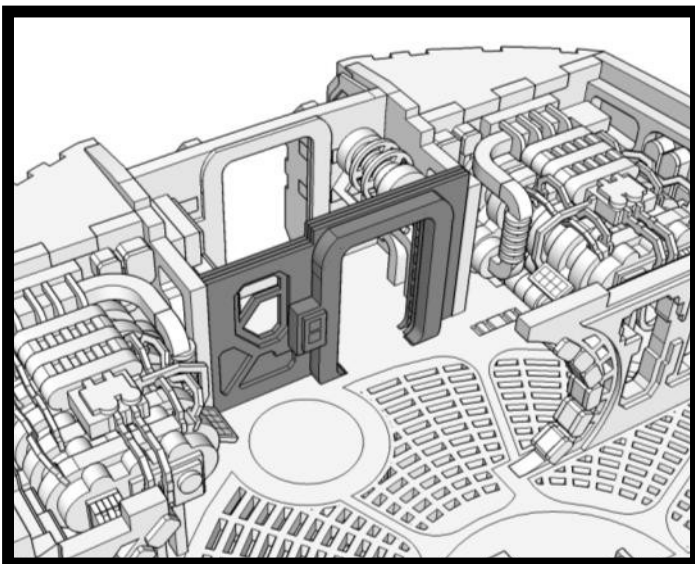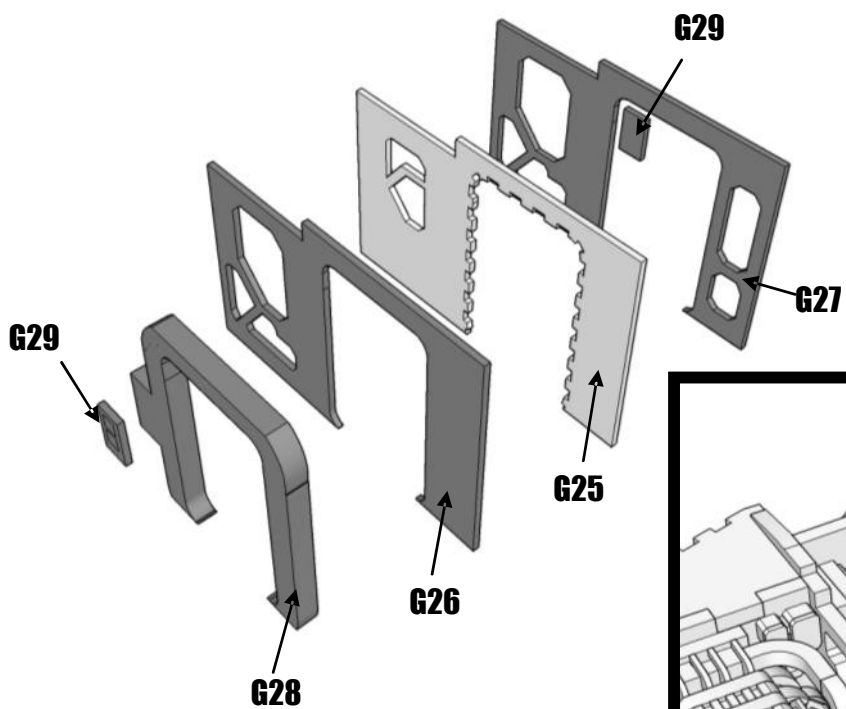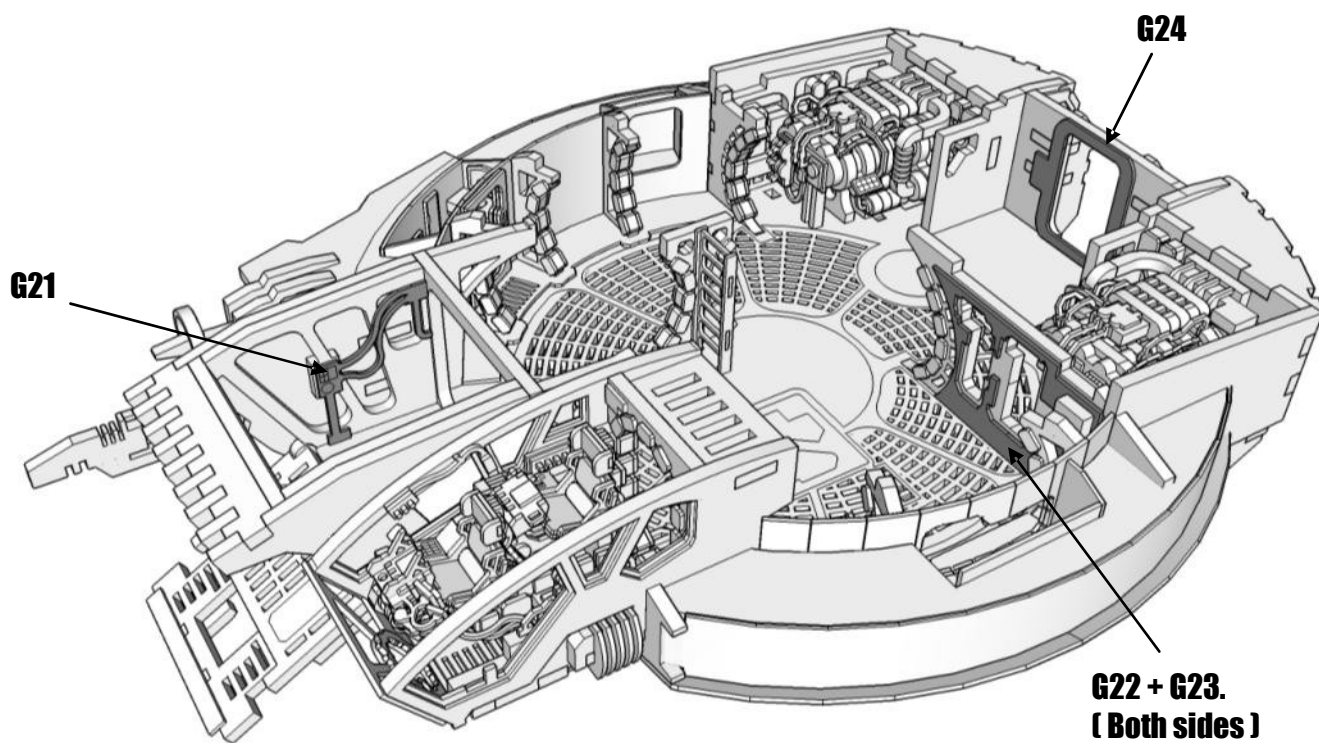


Detail parts. Deluxe Peregrine Interior.
General Interior.

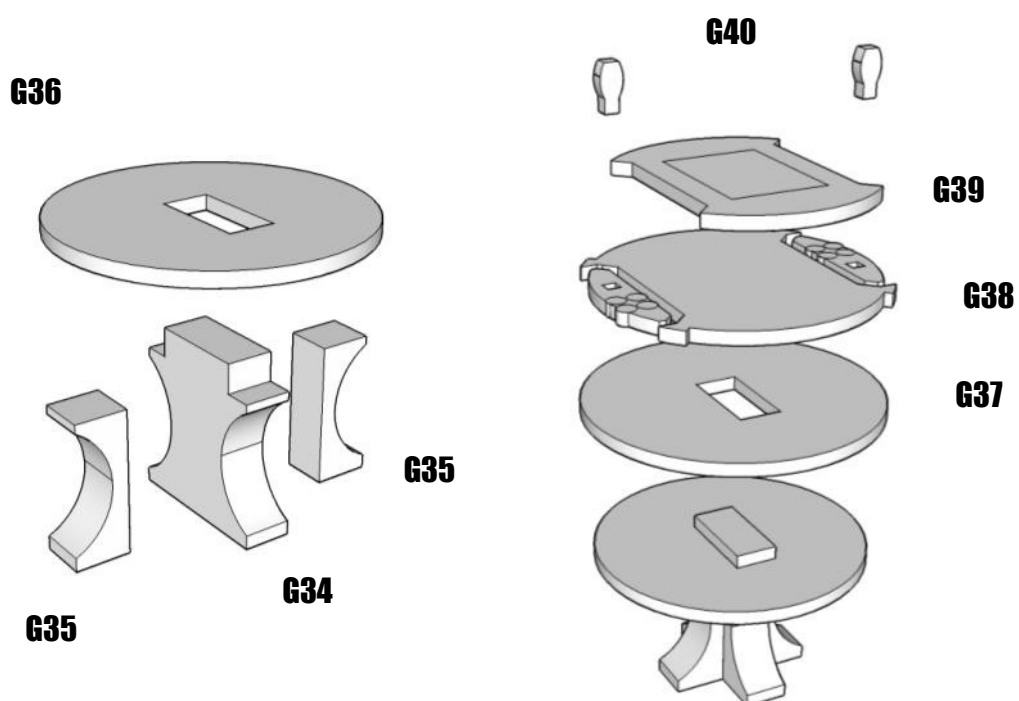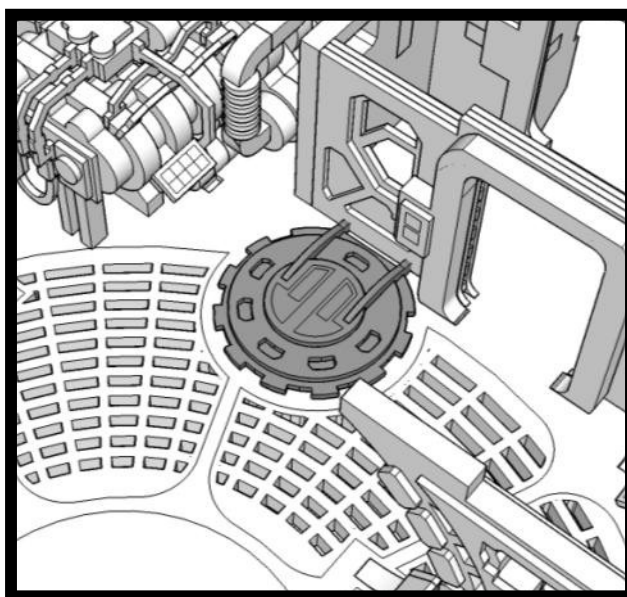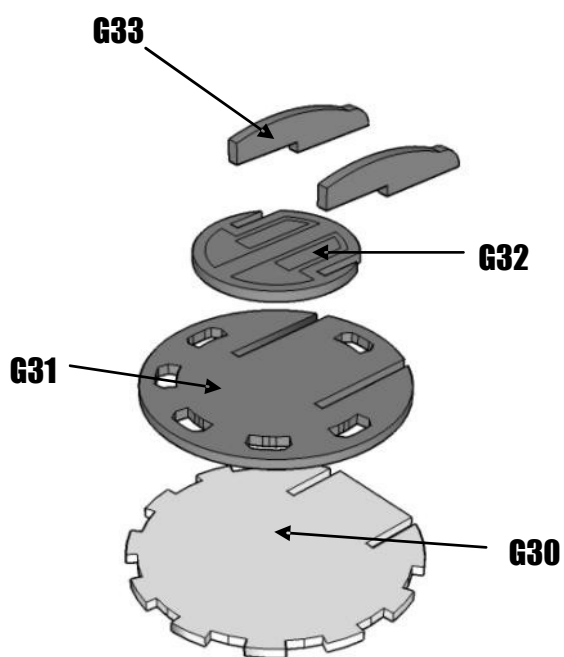


Detail parts. Deluxe Peregrine Interior.
General Interior.

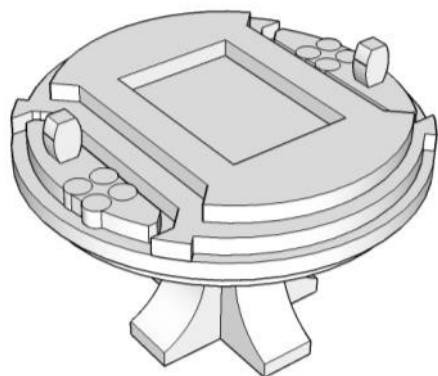



G42

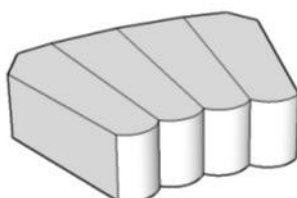


G41

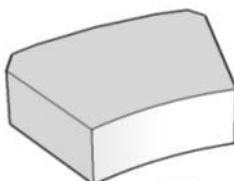




G41

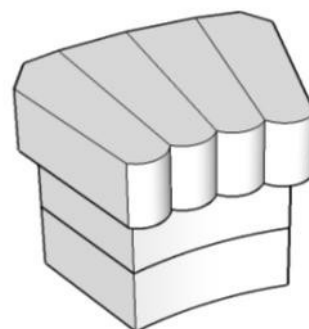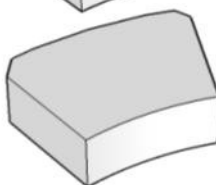

G43

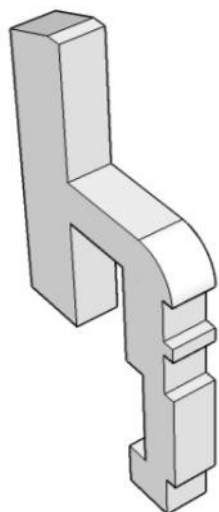


G44

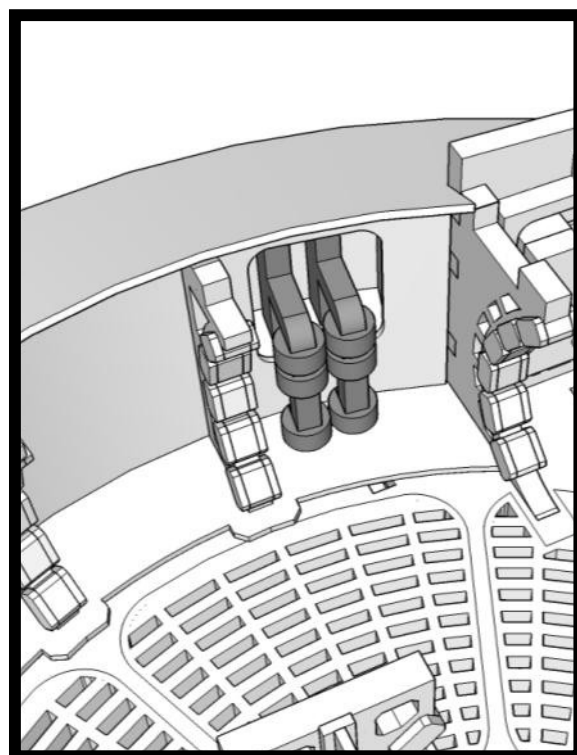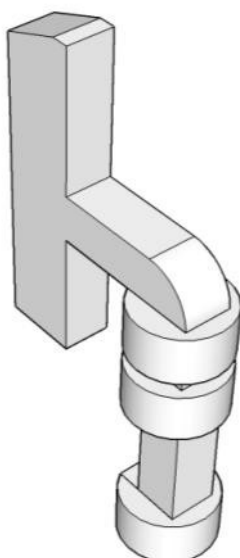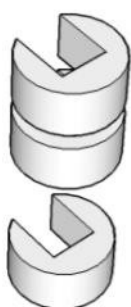


Detail parts. Deluxe Peregrine Interior.
General Interior.





G47

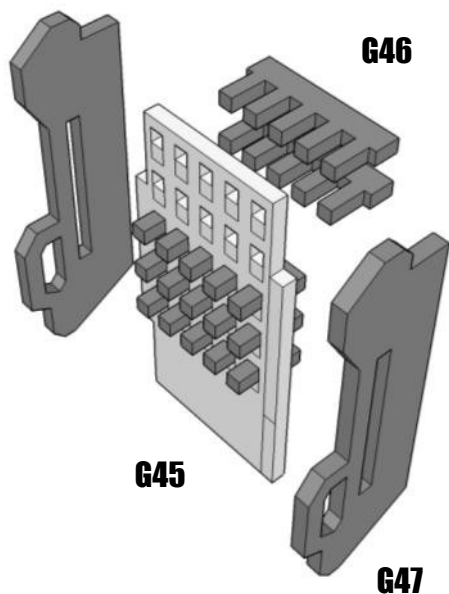

G48

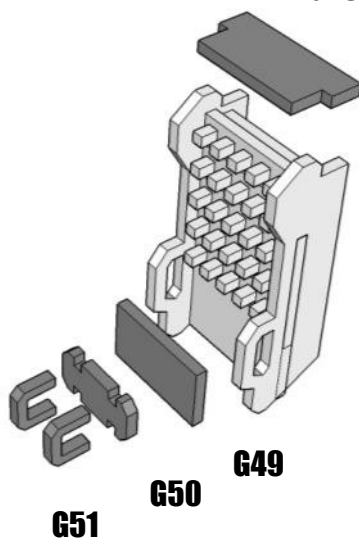


G52

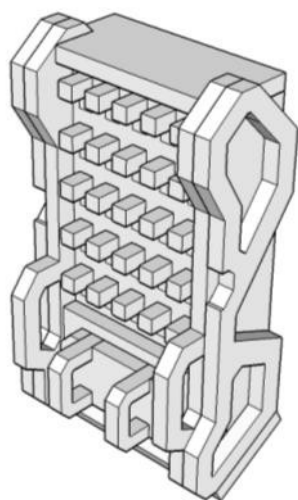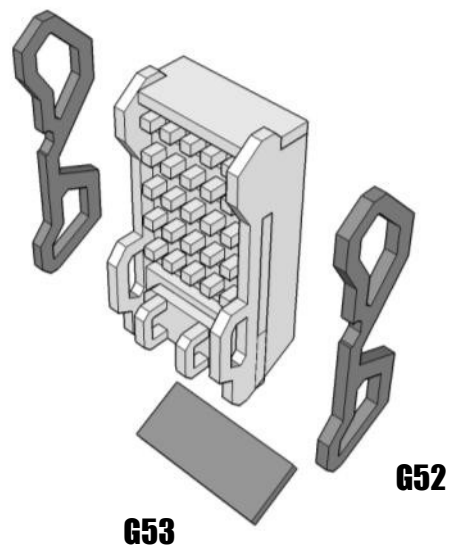


G47


G55

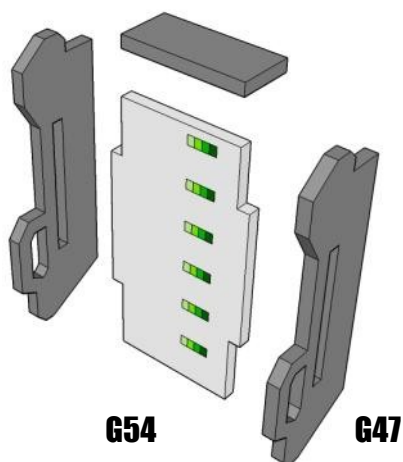

G52

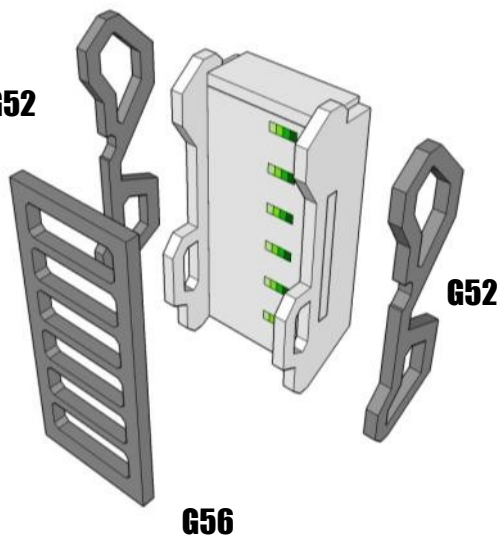

G52


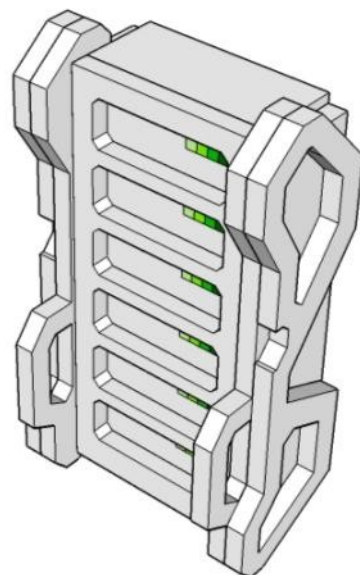


Detail parts. Deluxe Peregrine Interior.
General Interior.



G47



G58

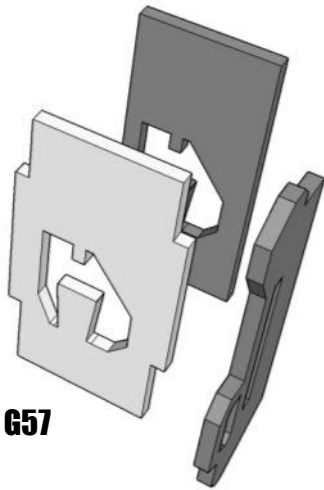

G57

G47


G59

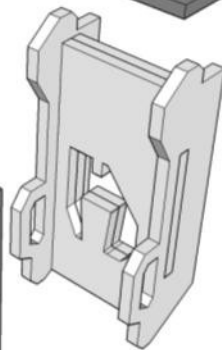

G60




G61

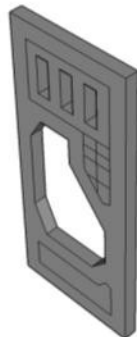

G52




G52

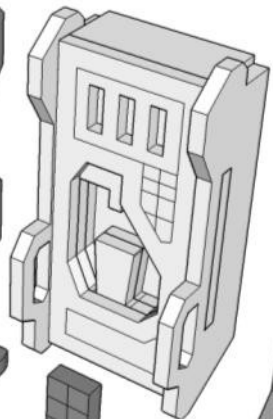


G62



G63

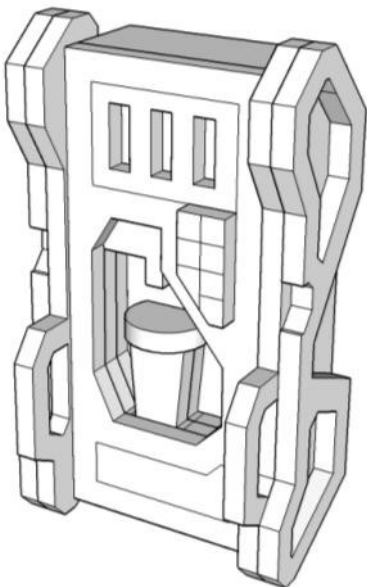

G64

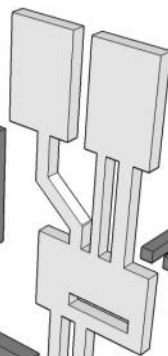



G67



G65



G66

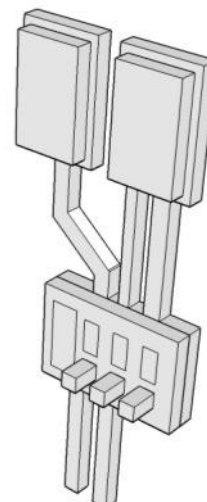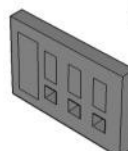

There are
enough parts
for Five of
these assem-
blies.


Detail parts. Deluxe Peregrine Interior.
General Interior.



G68

G69

G68

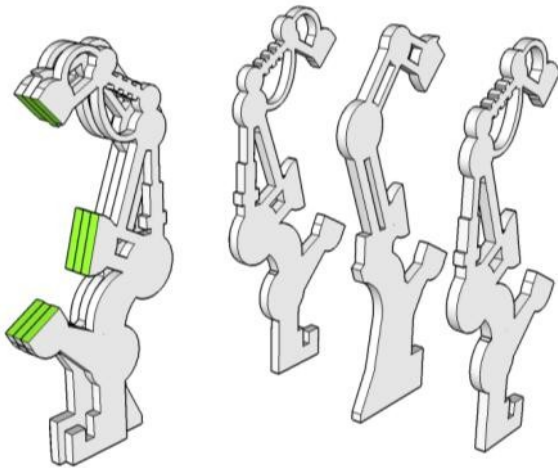


G74

G73

G72


G70

G71

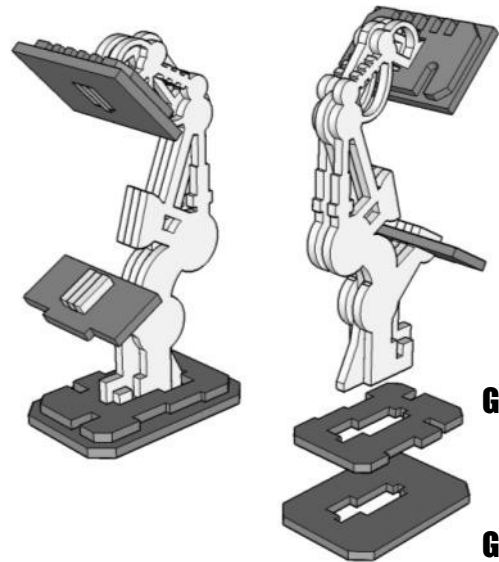


G75

G77

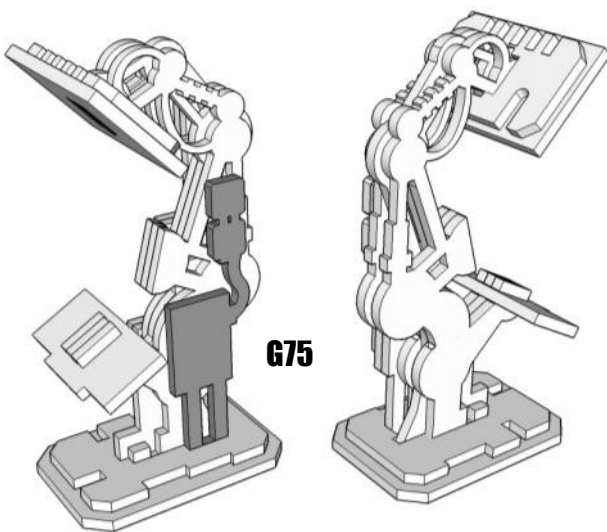

G76

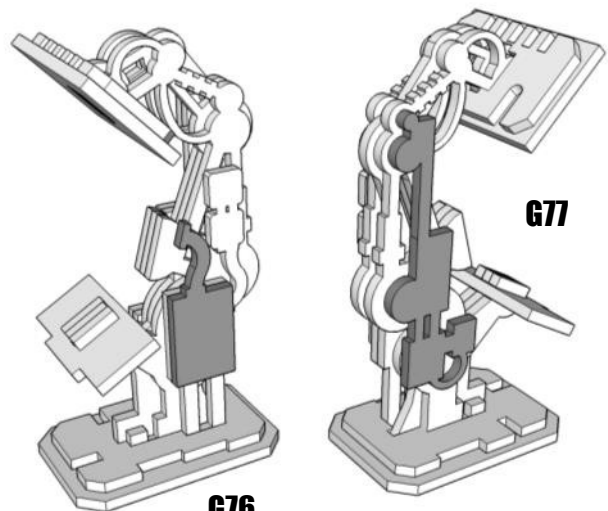

G79


G78

G80


G81

G82




G83

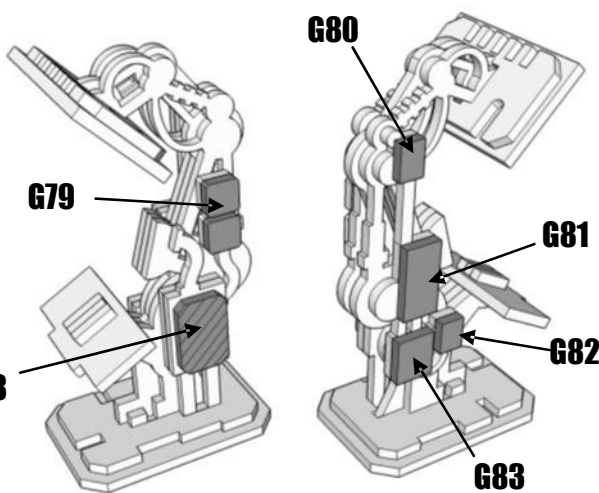





Detail parts. Deluxe Peregrine Interior.
General Interior.

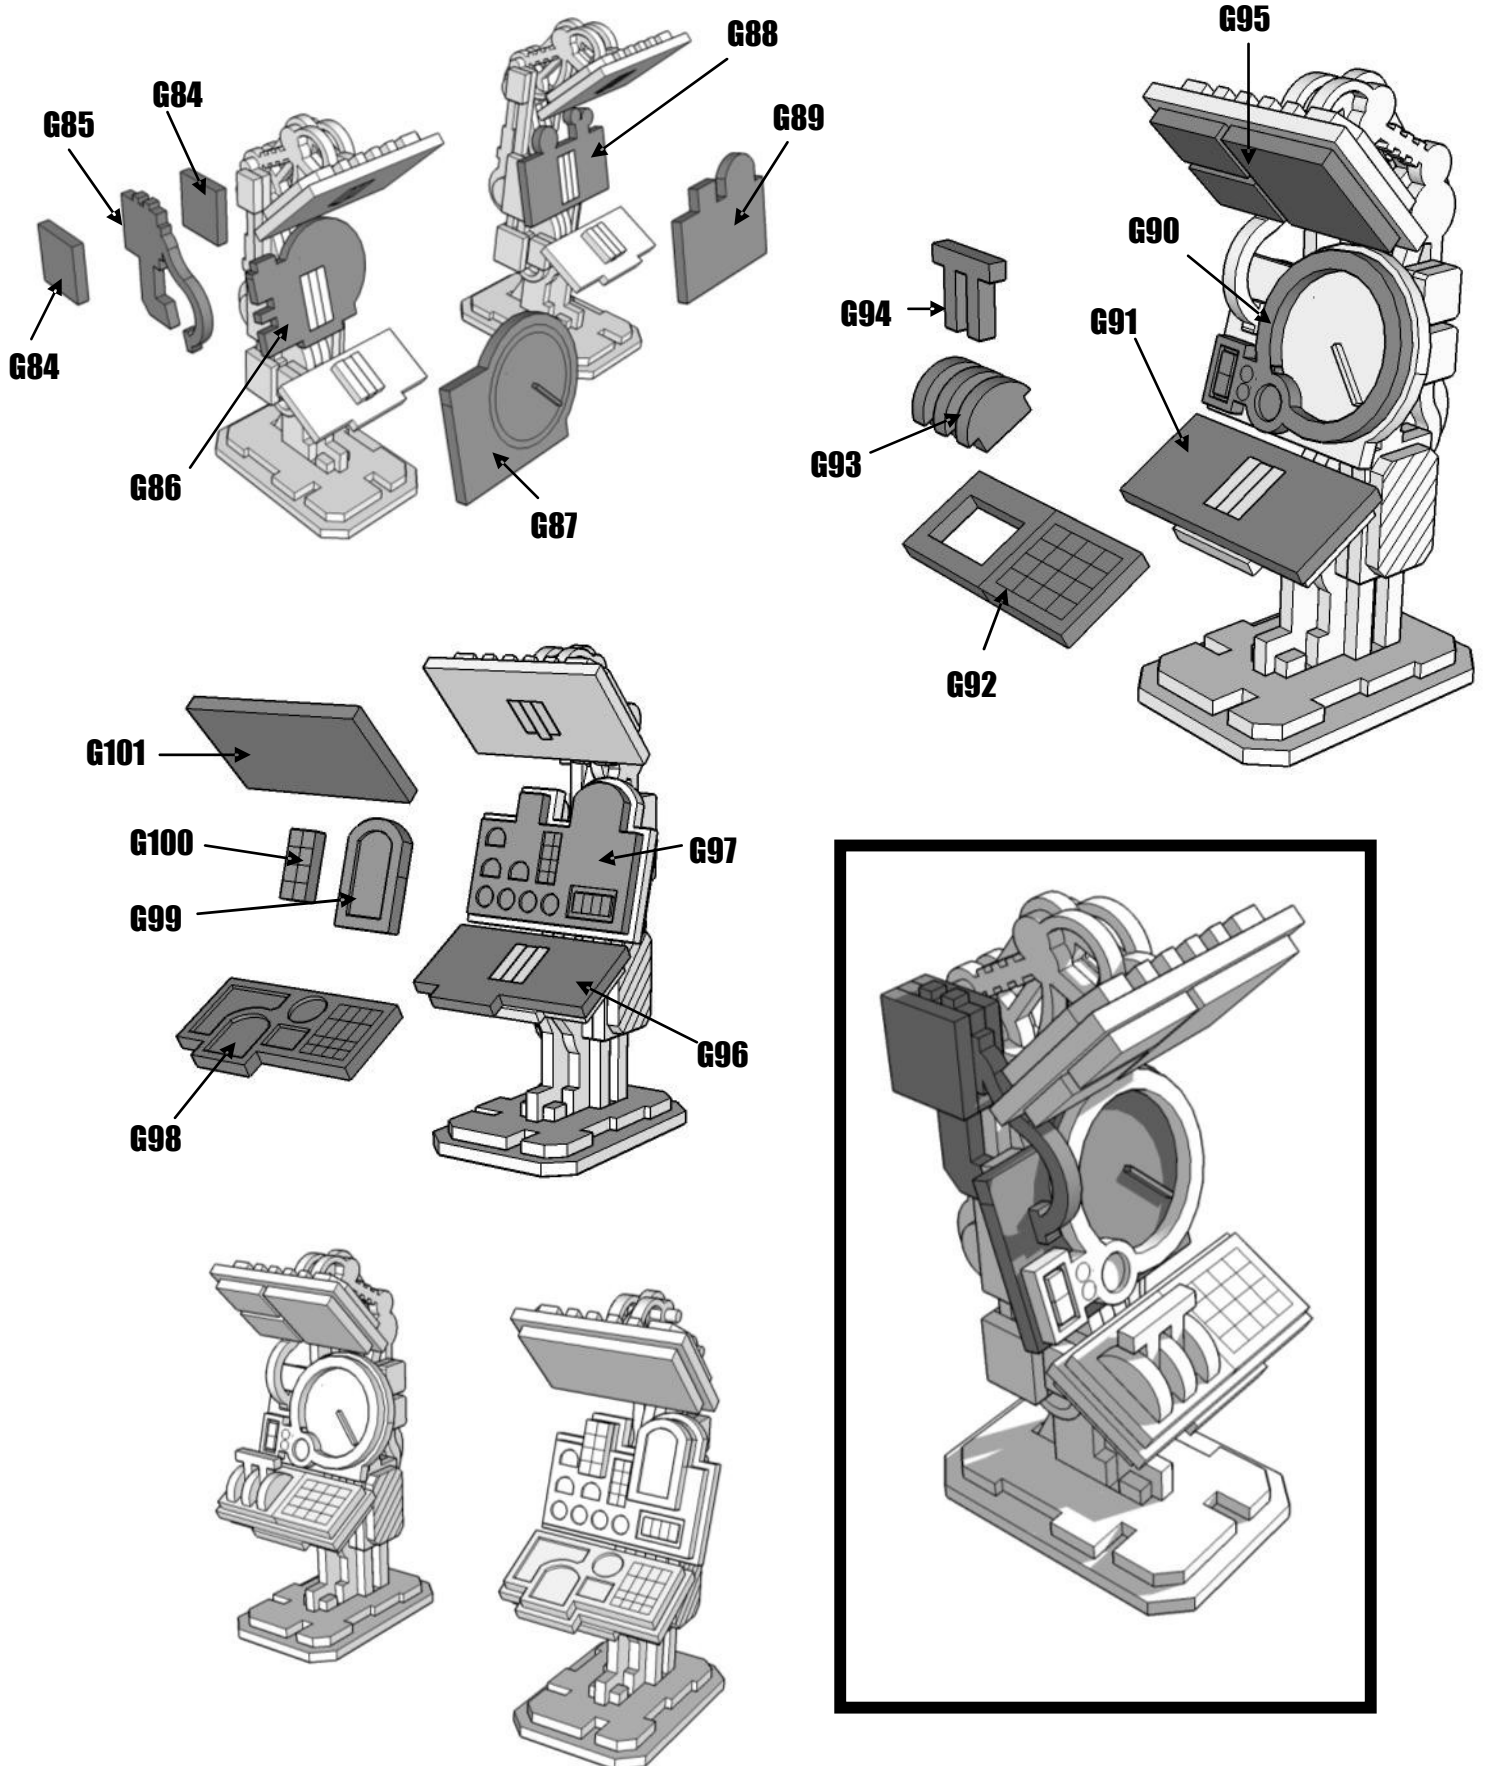

Detail parts. Deluxe Peregrine Interior.
General Interior.

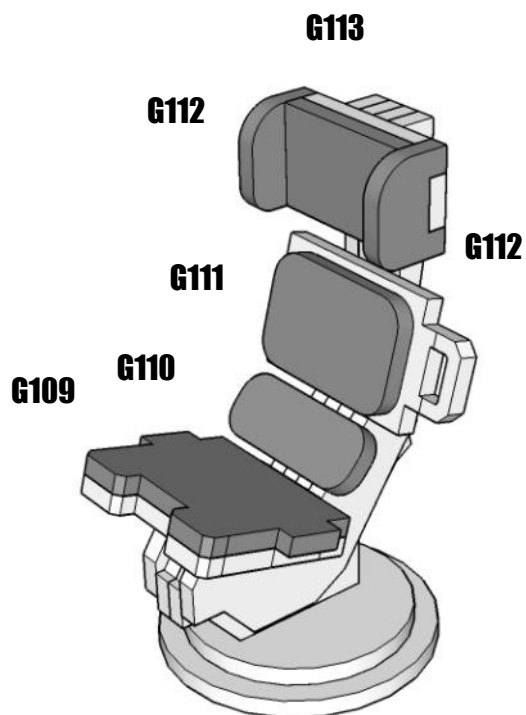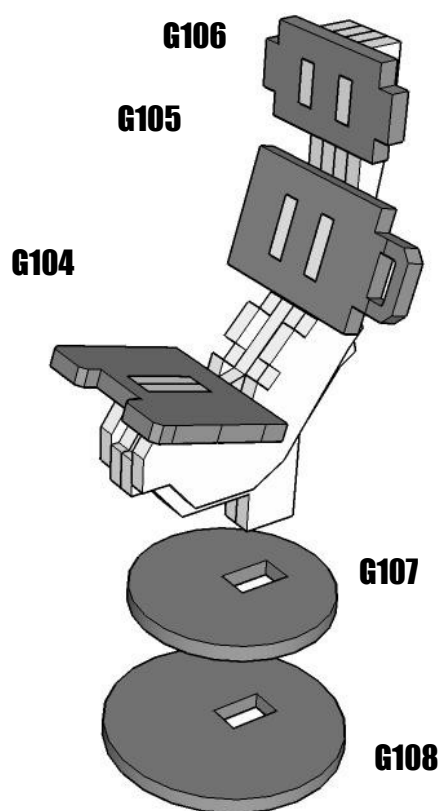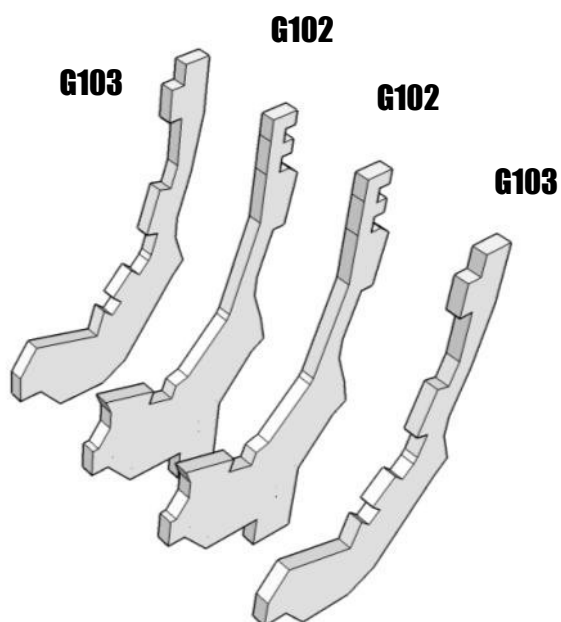


Detail parts. Deluxe Peregrine Interior.
General Interior.

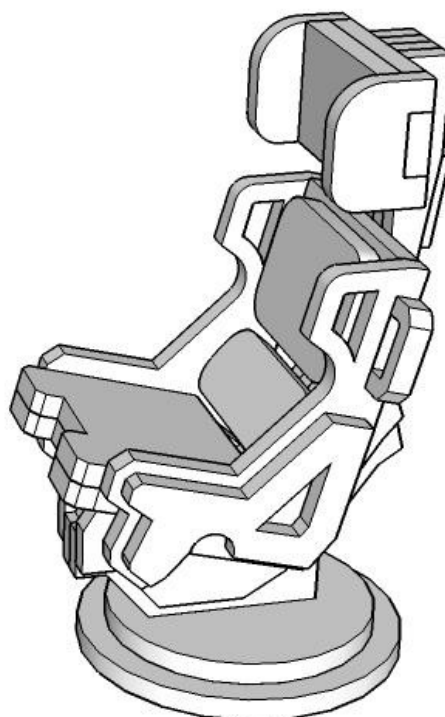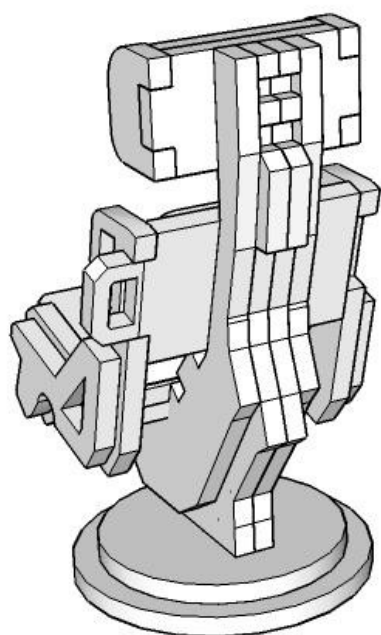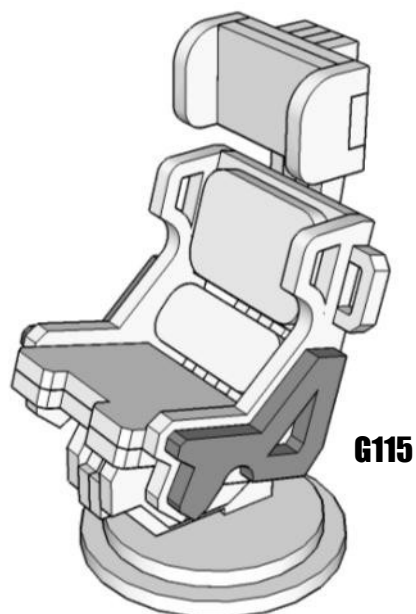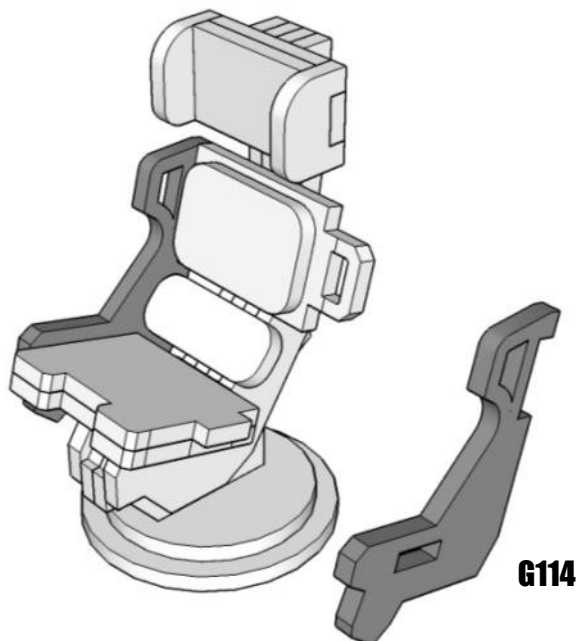

Detail parts. Deluxe Peregrine Interior.
General Interior.




2mm rod. 16mm +
20mm long

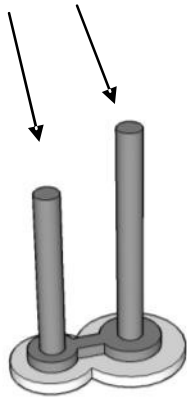


G116

20mm

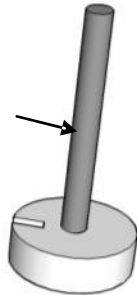

G117


G119



G118



G121




G120



G122




G119




G118




G117




G123

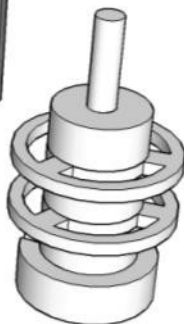


X2

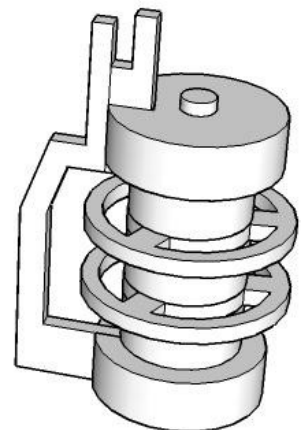

X4

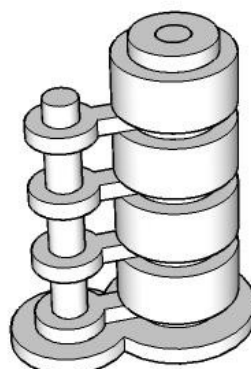


Detail parts. Deluxe Peregrine Interior.
General Interior.




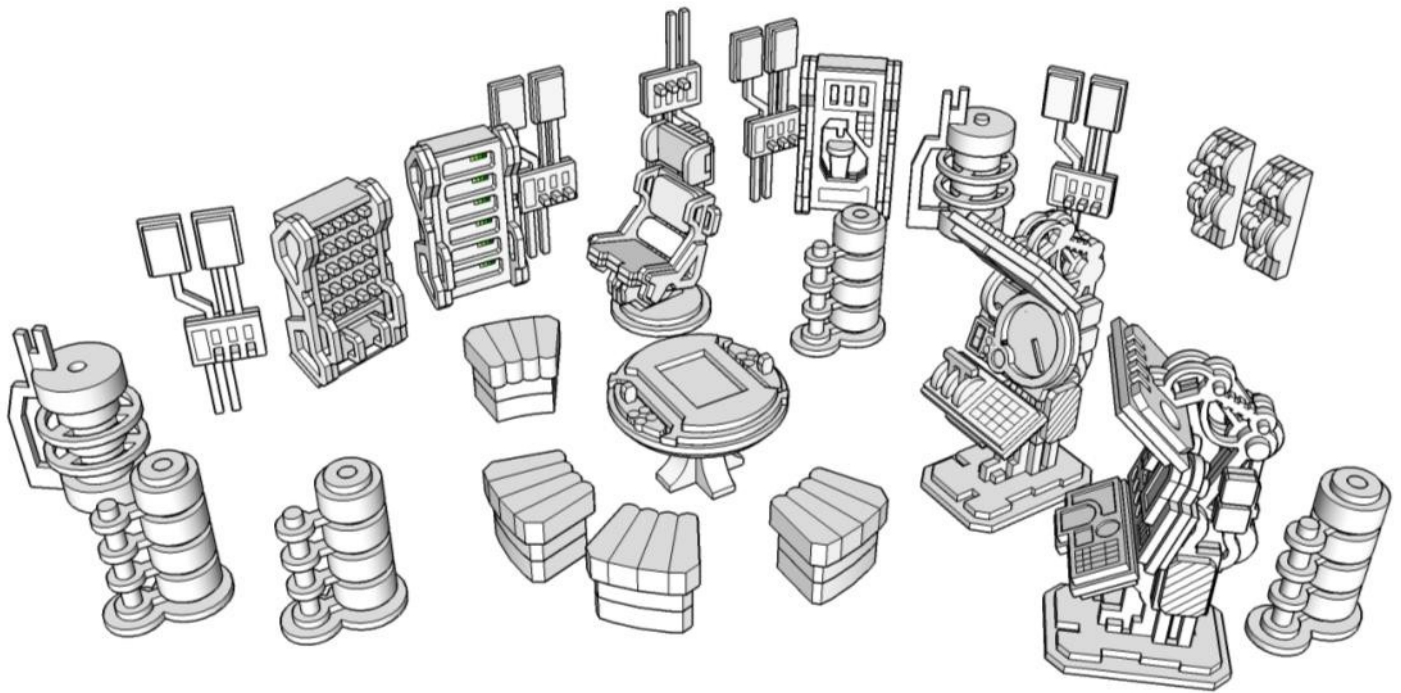


All of the items from the previous steps, as shown above, can be added to your Peregrine model as creatively as you wish.

Detail parts. Deluxe Peregrine Interior.
Rear Stairs.

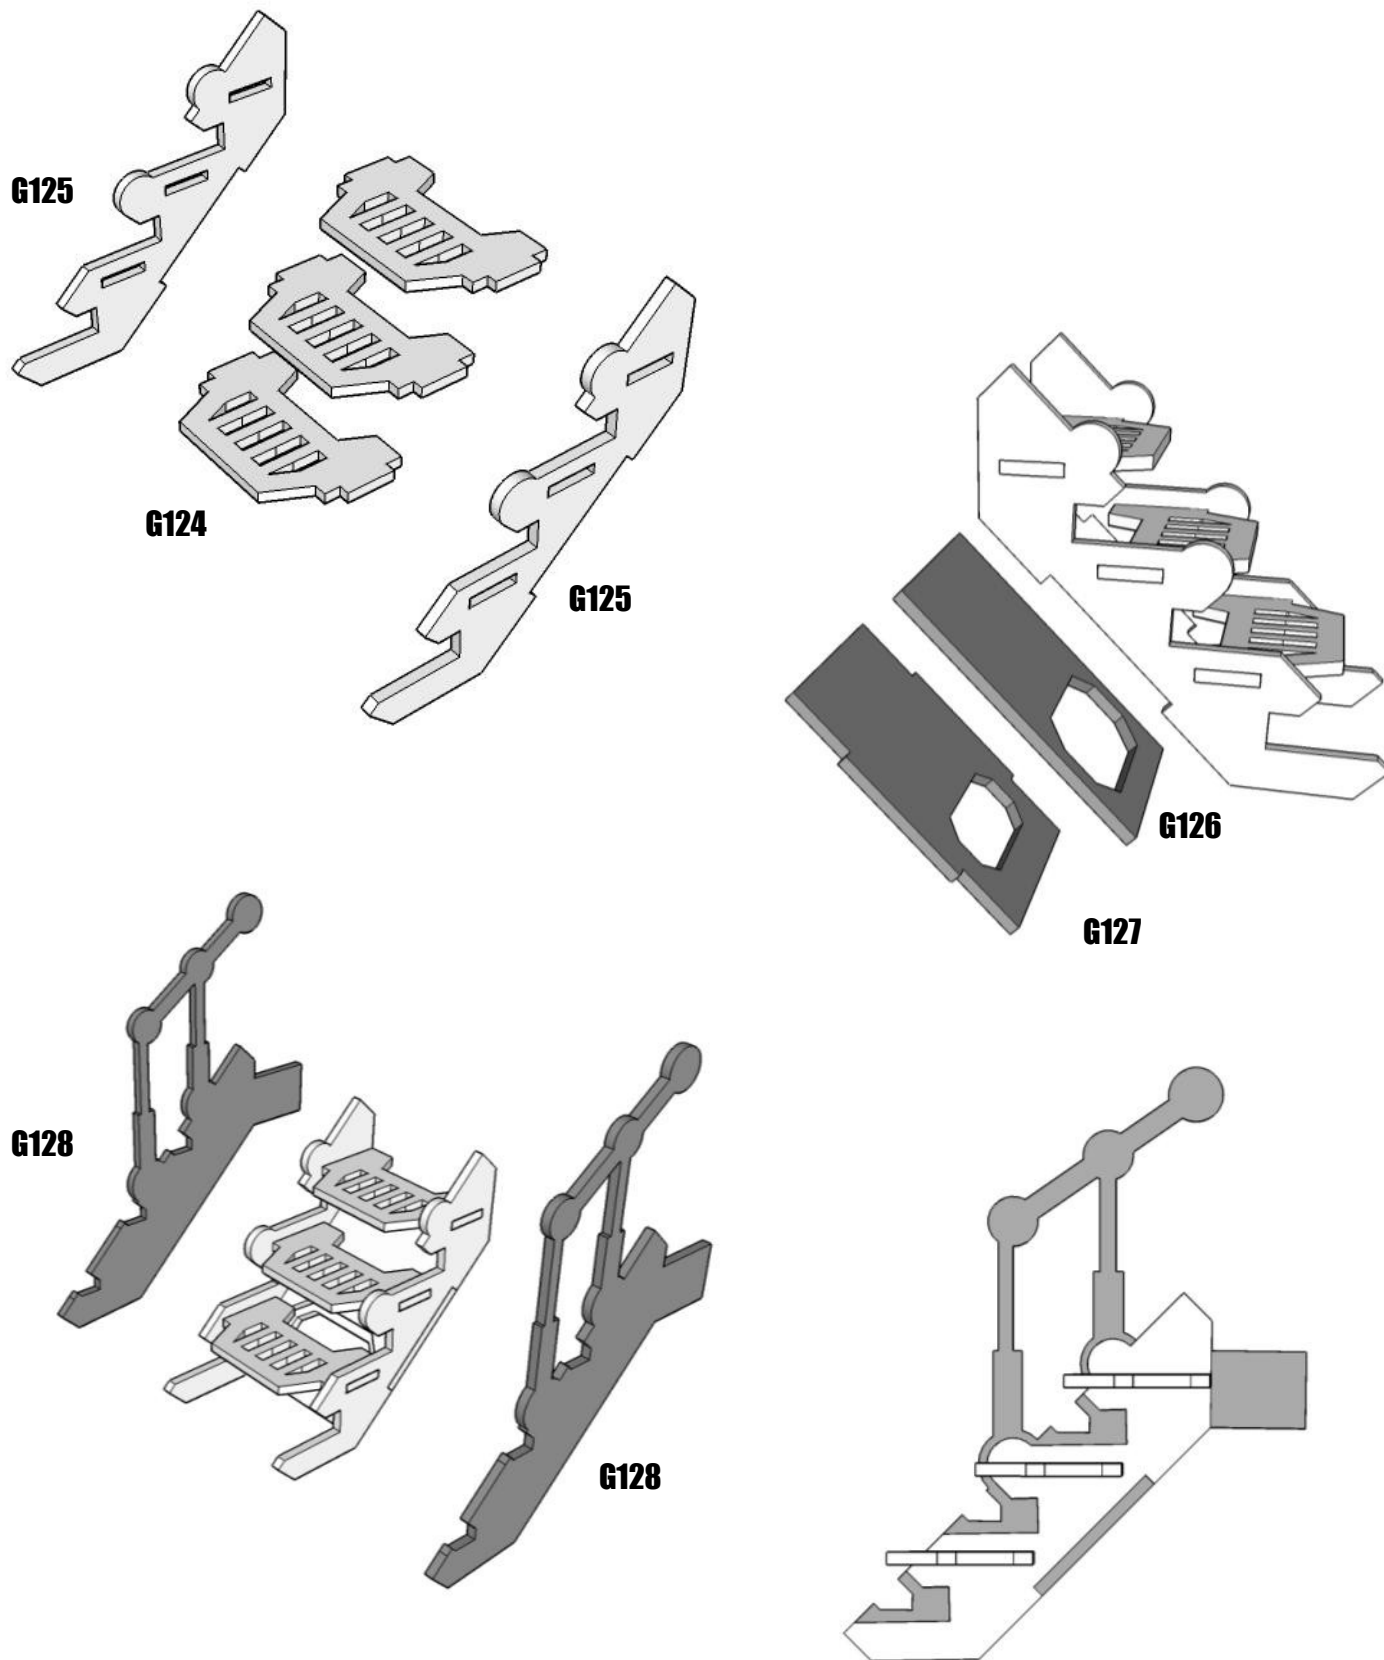


Detail parts. Deluxe Peregrine Interior.
Rear Stairs.

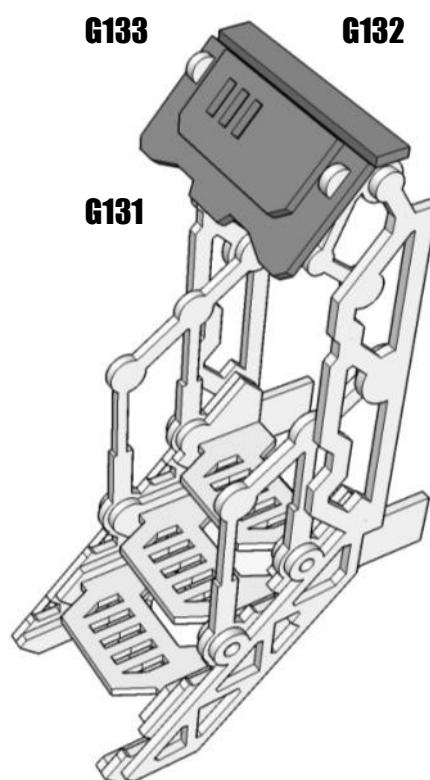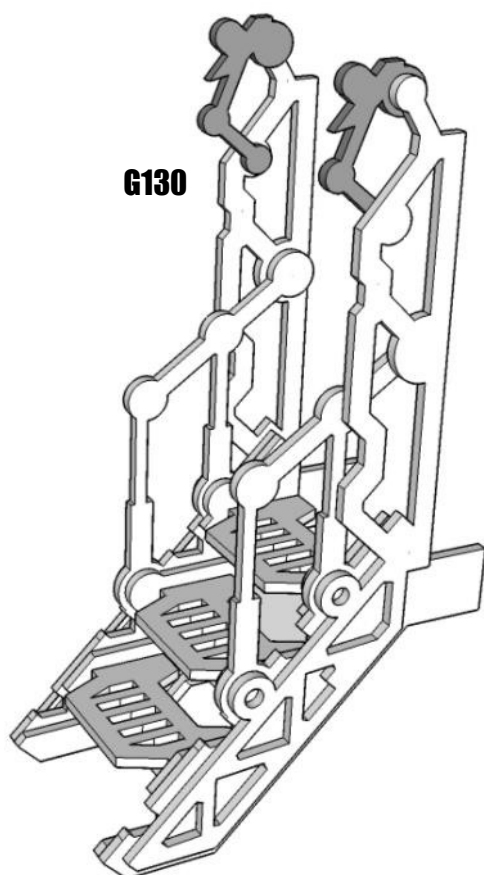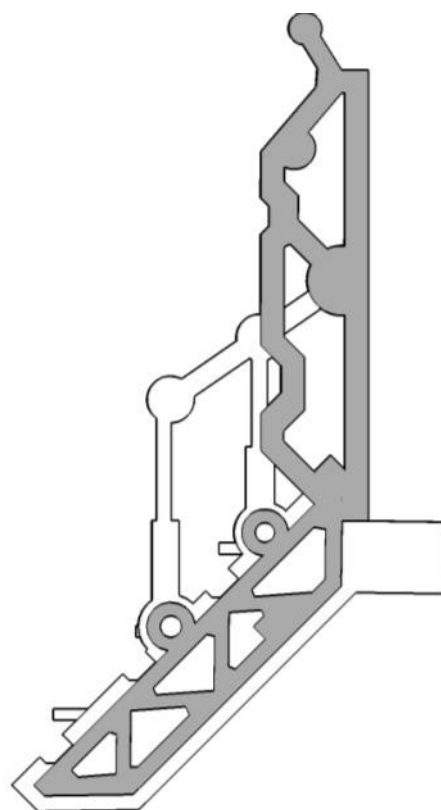
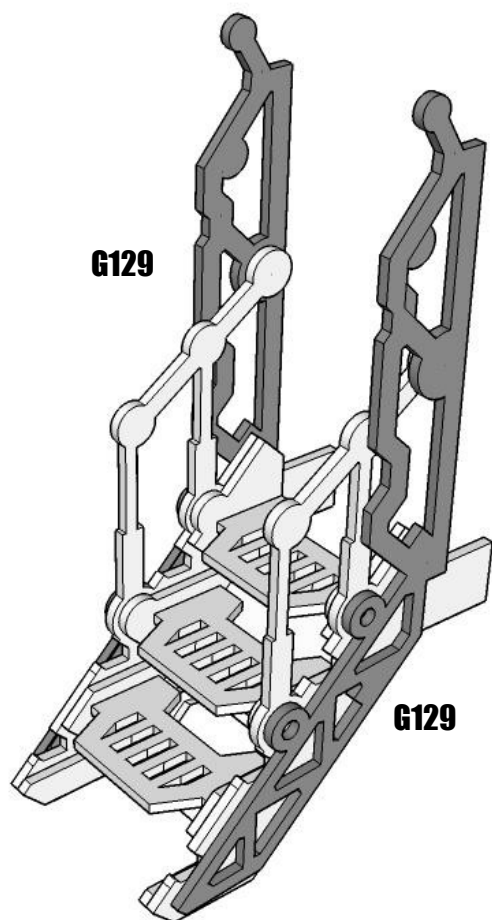


Detail parts. Deluxe Peregrine Interior.

Rear Stairs.

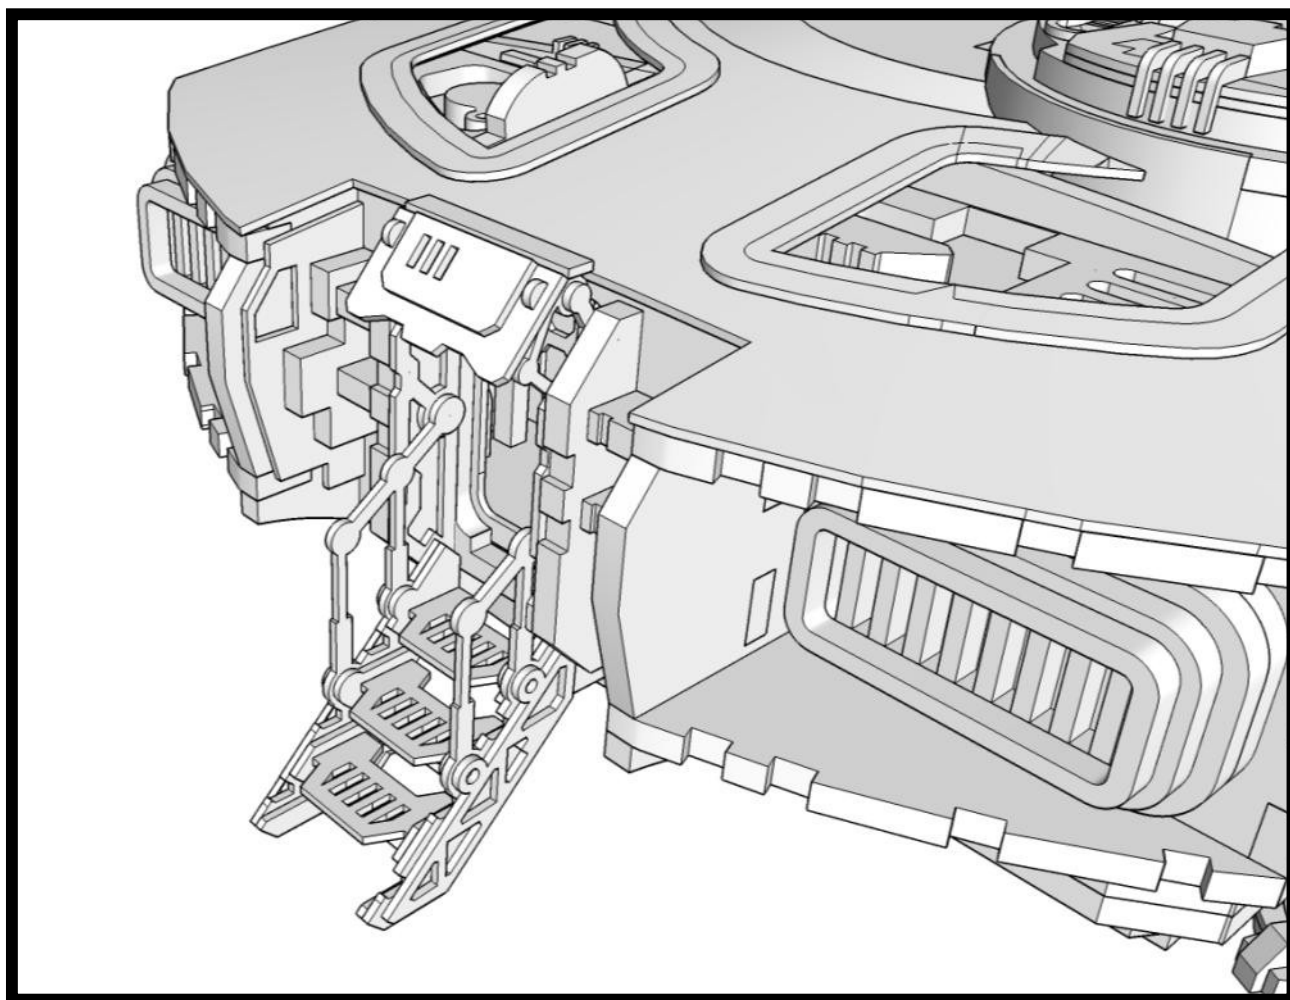


Exterior Panelling.

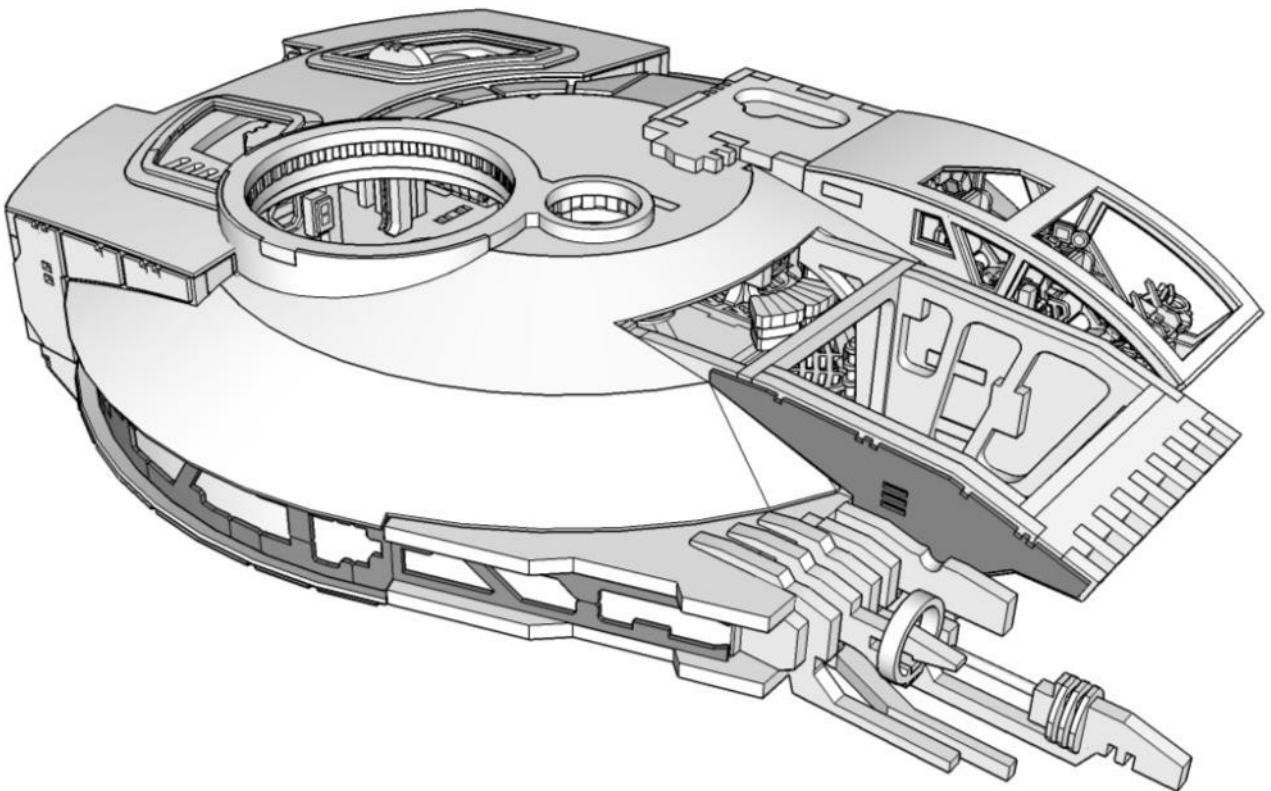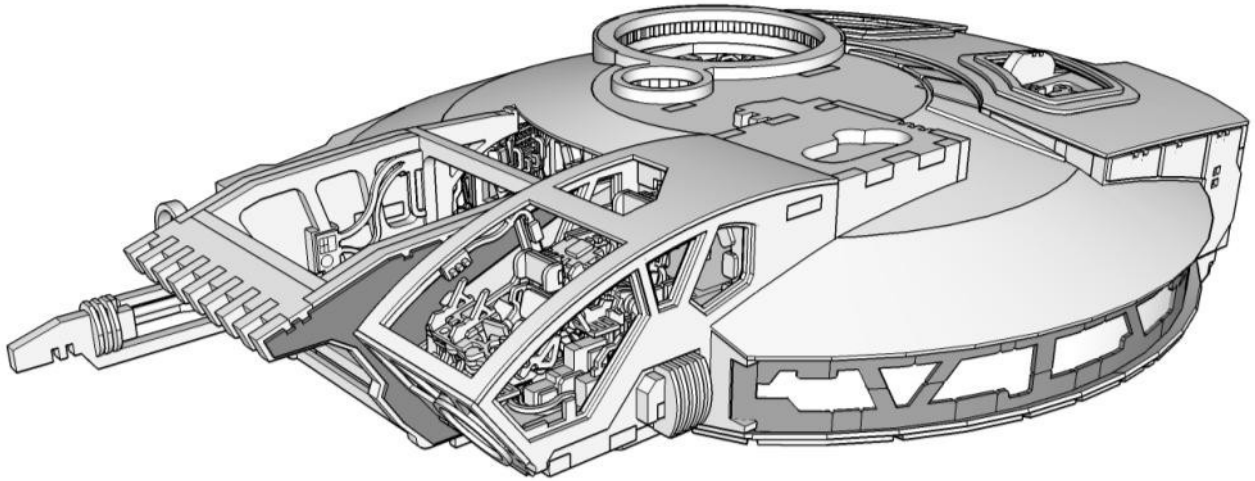


Exterior Panelling.


Much of the Panelling that makes up the outside plating of the hull is attached at this point. Take your time and use the following top and bottom plan views as a guide. The panels are spaced 2mm apart , so we have included a handy tool to assist.

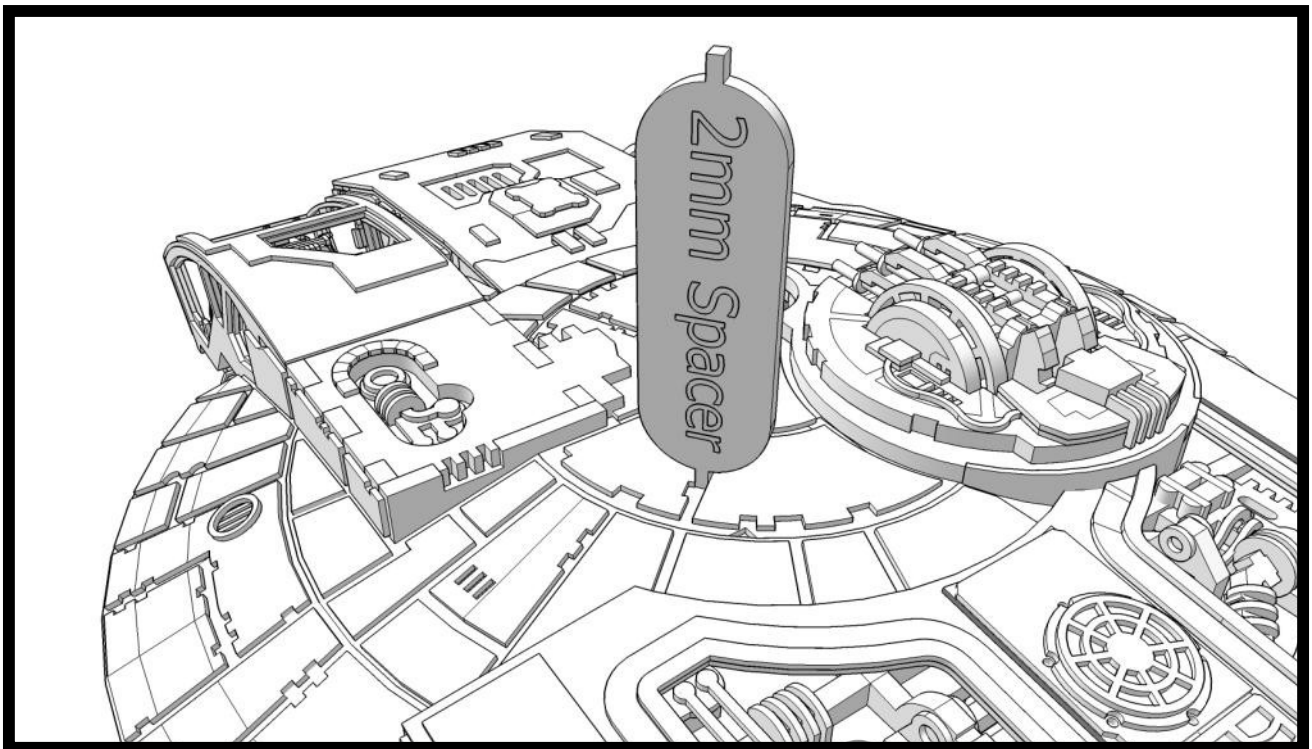





Exterior Panelling.

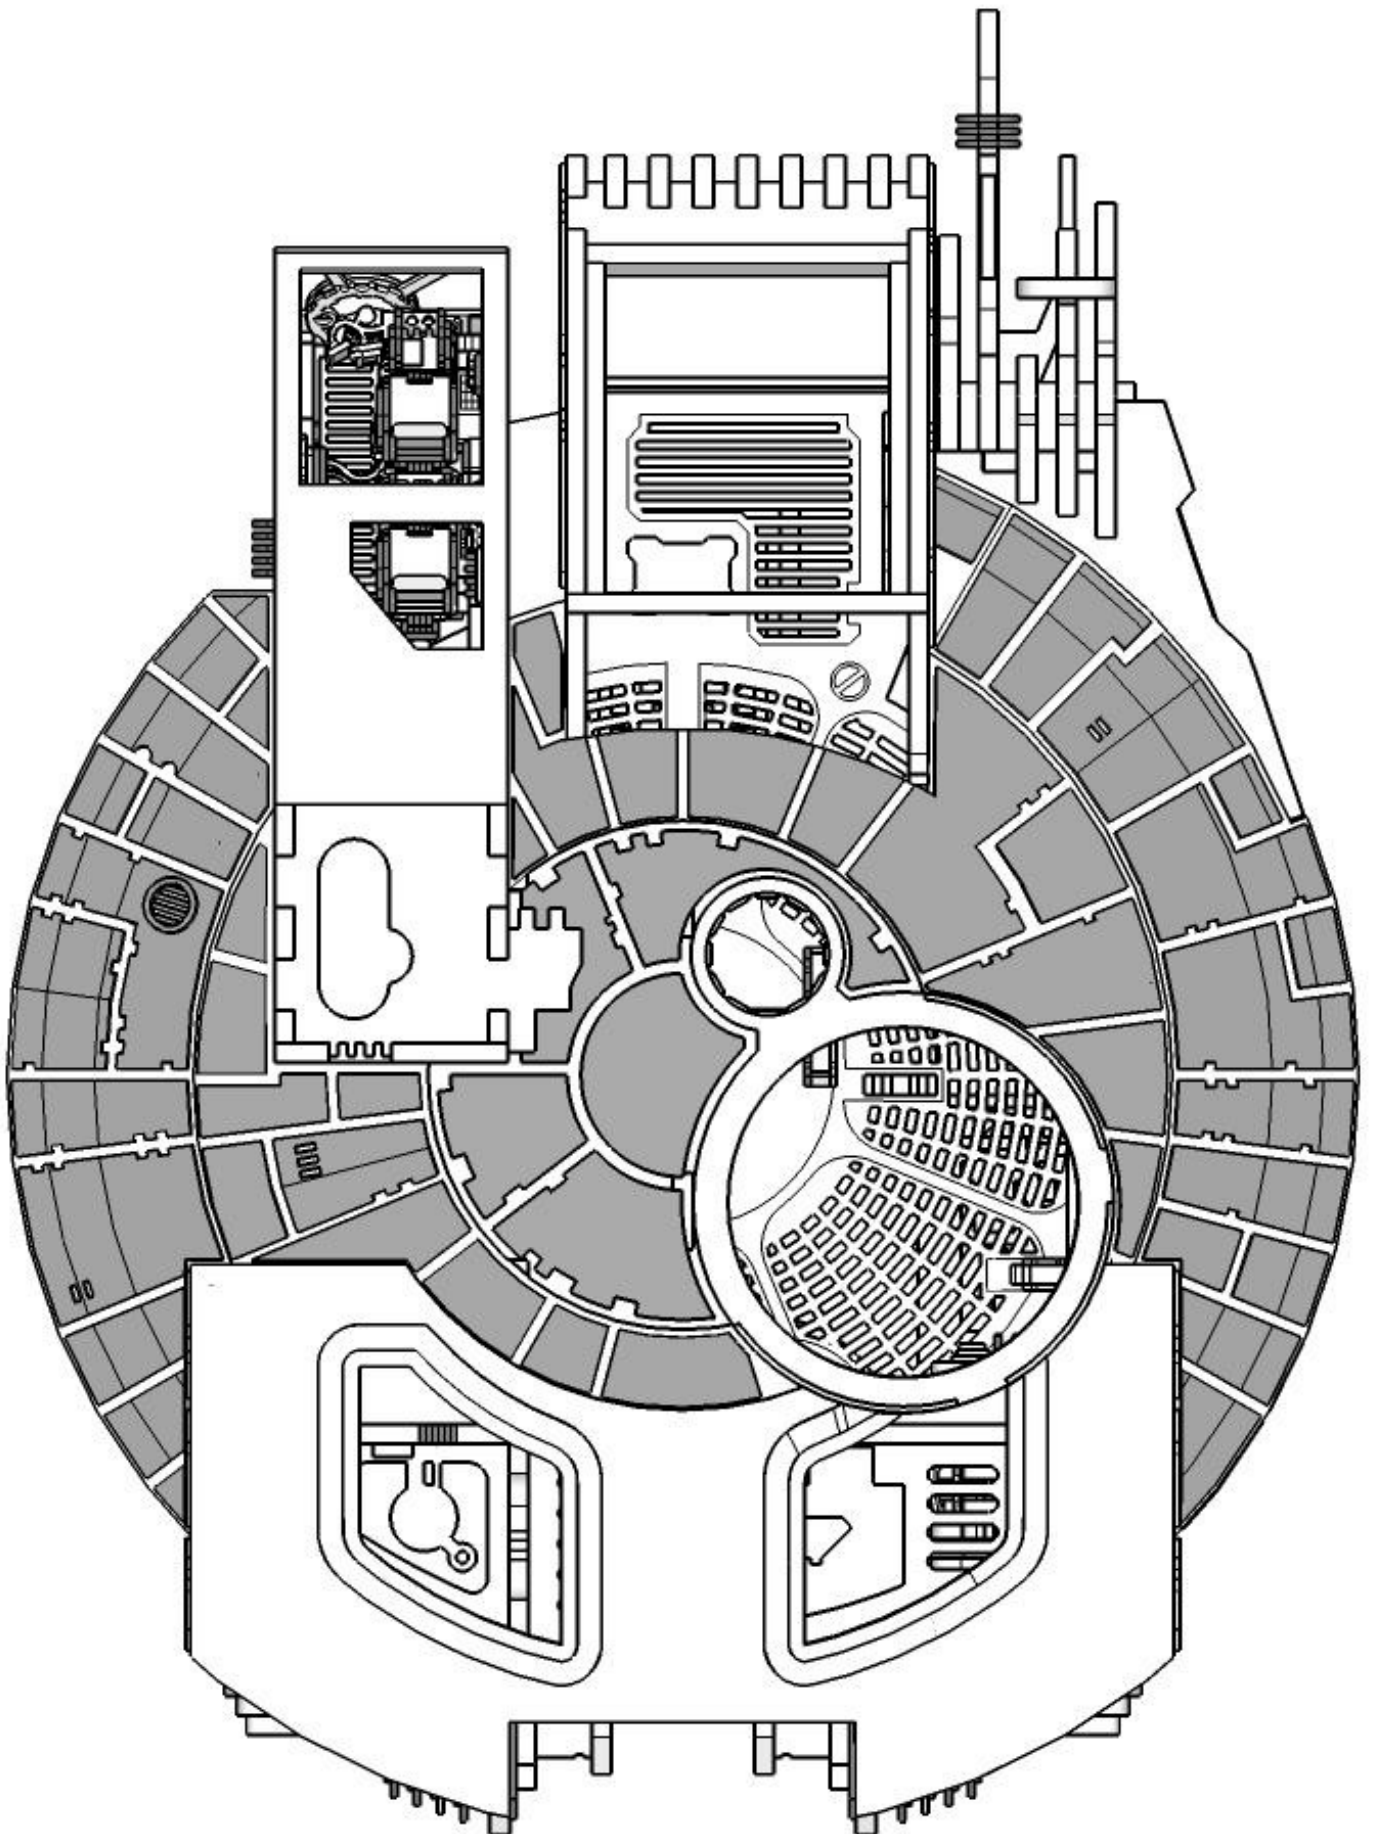




Exterior Panelling.

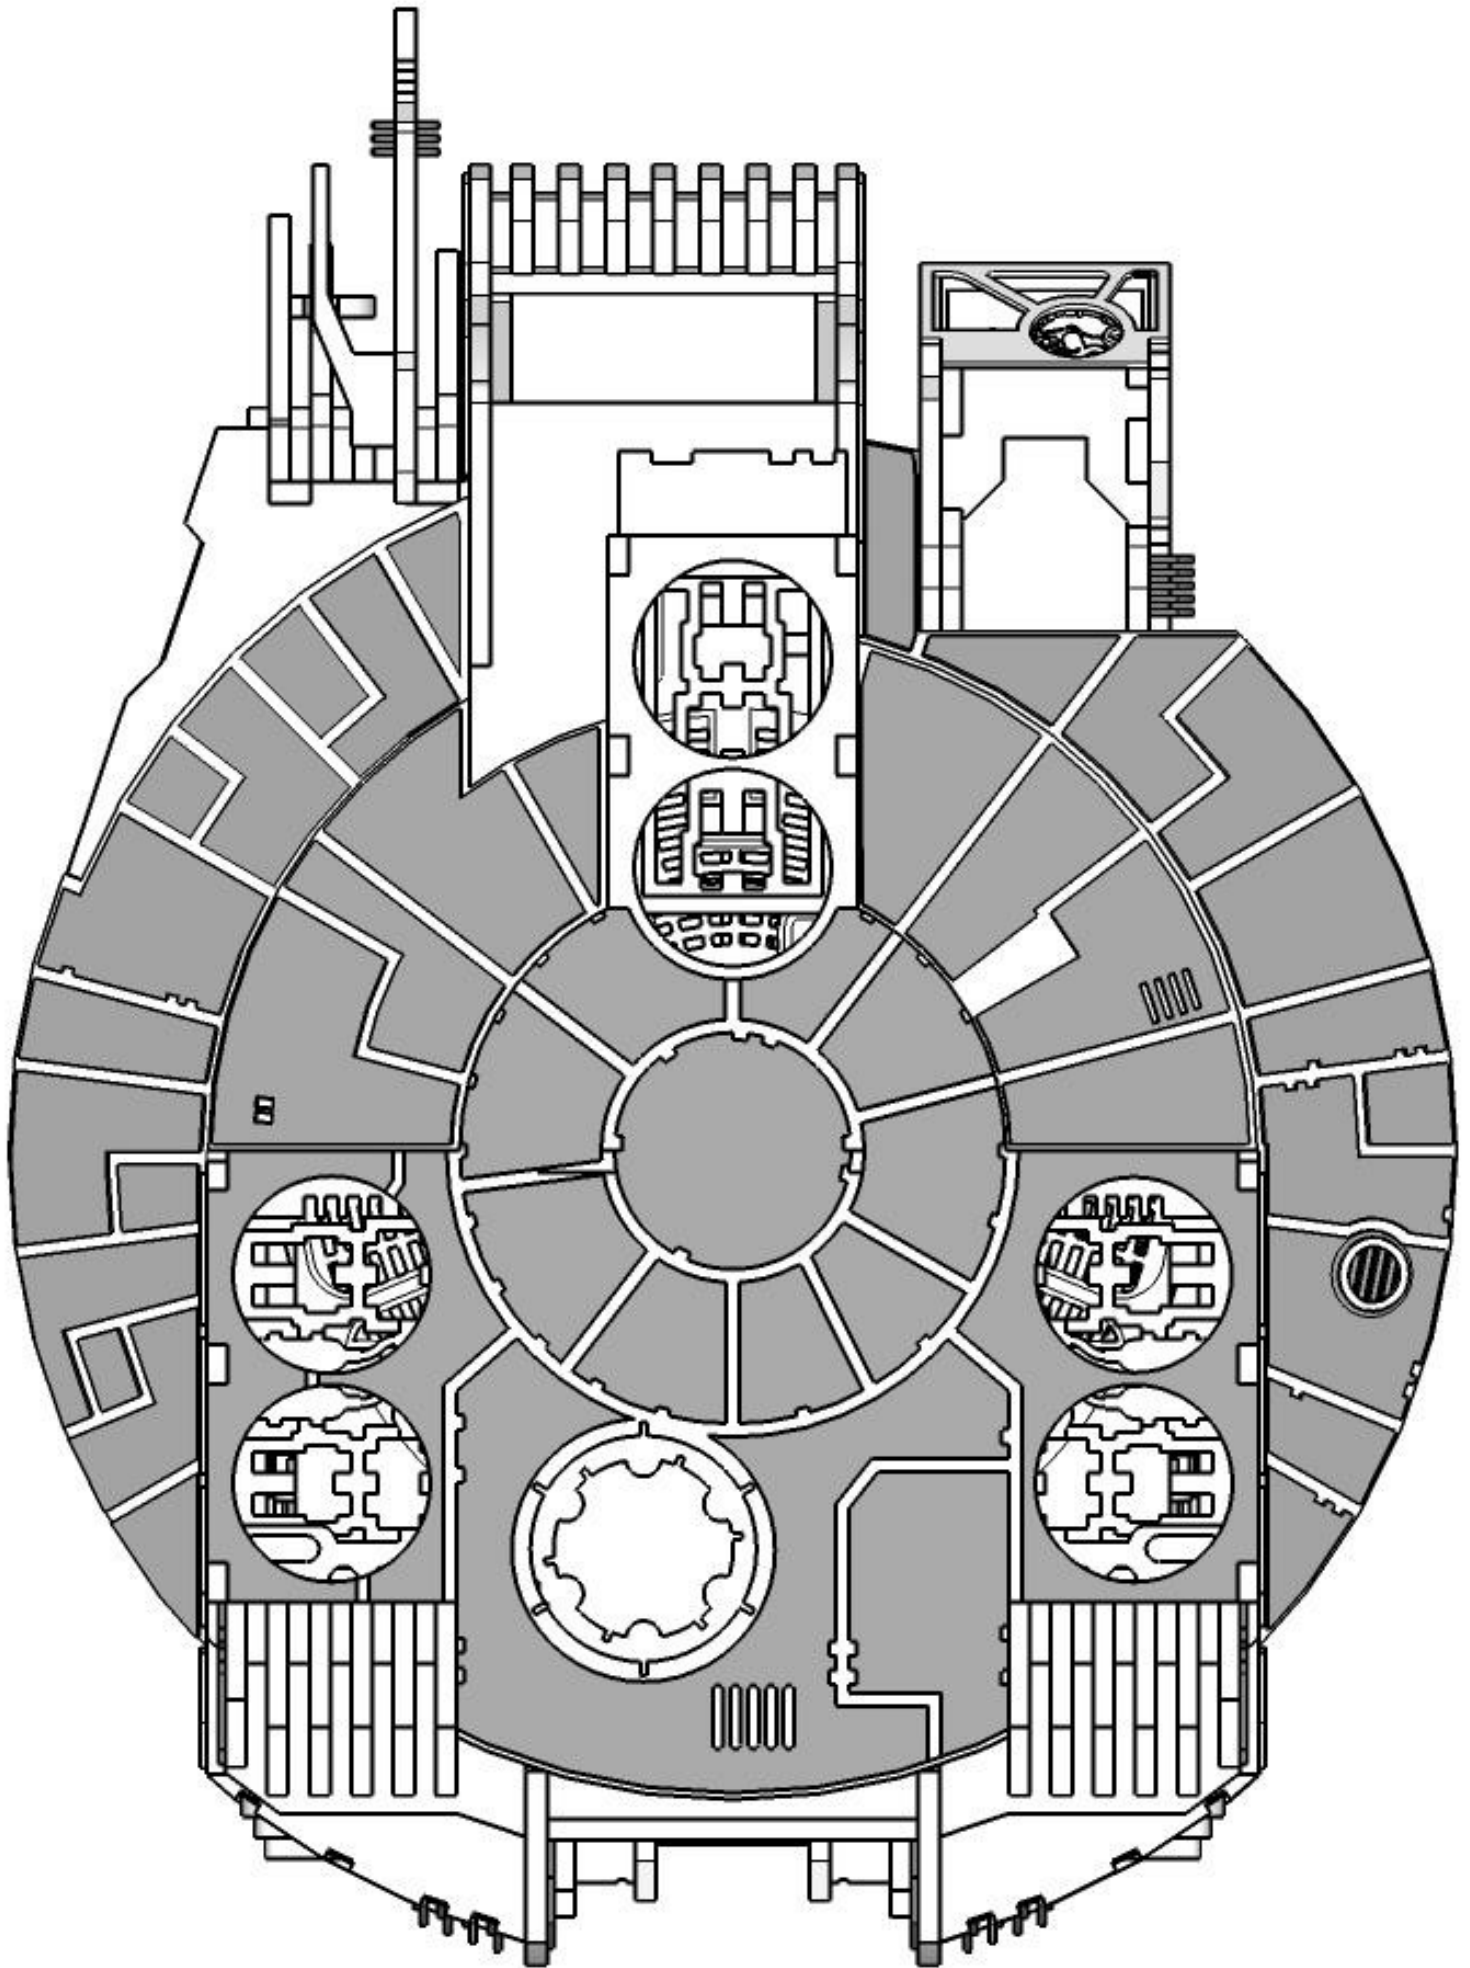




Exterior Panelling.

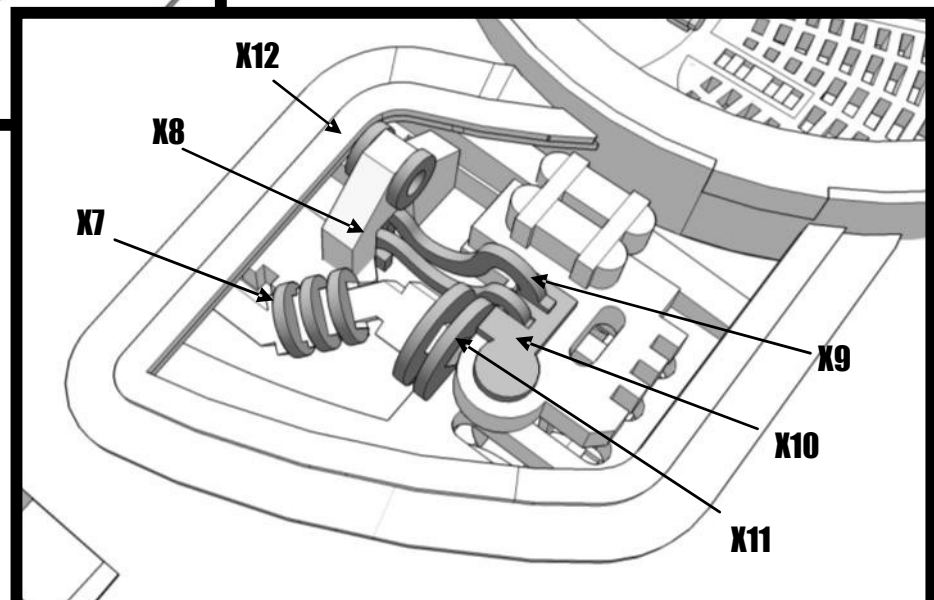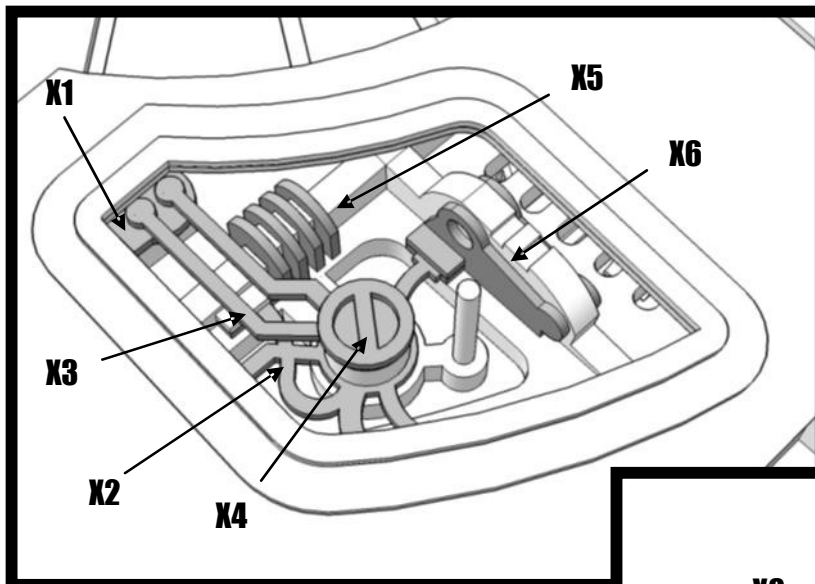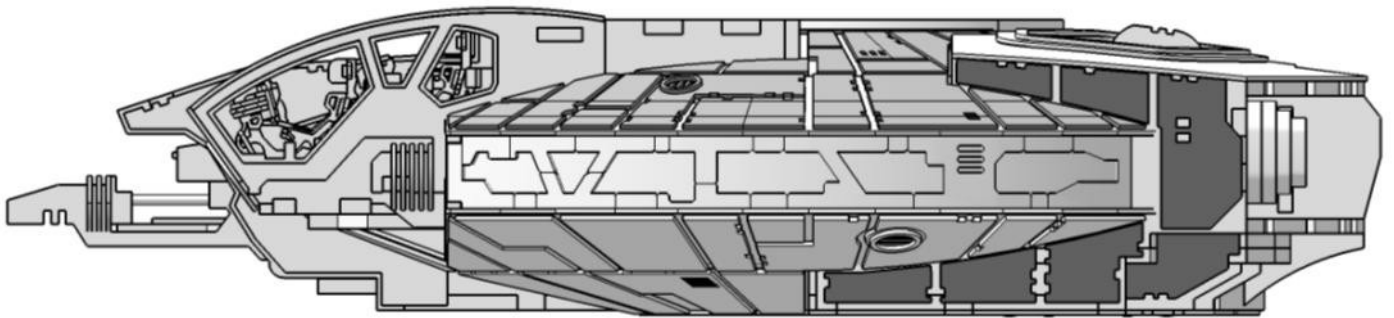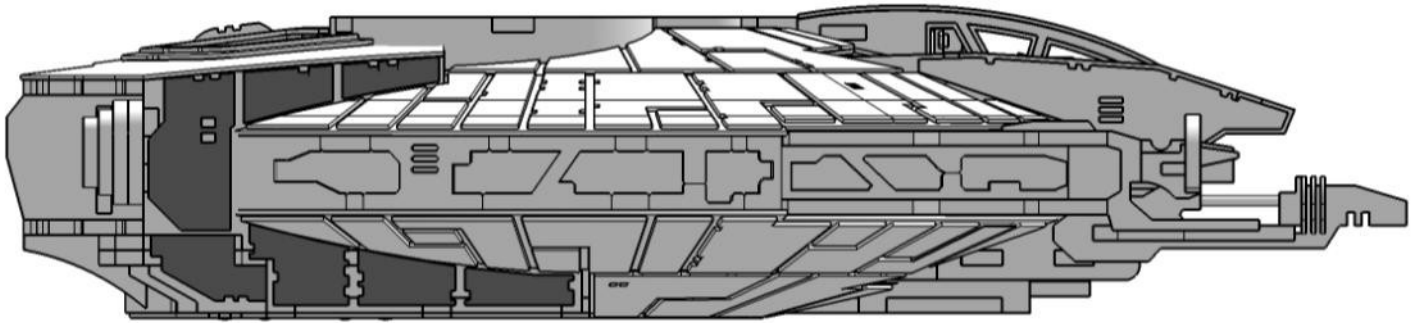





Exterior Panelling.

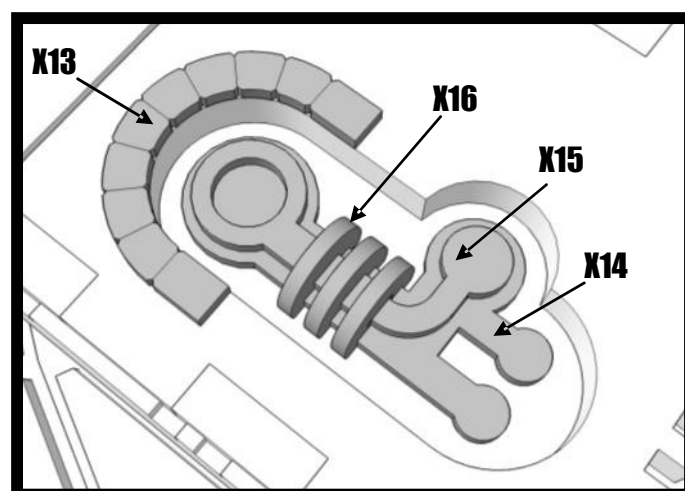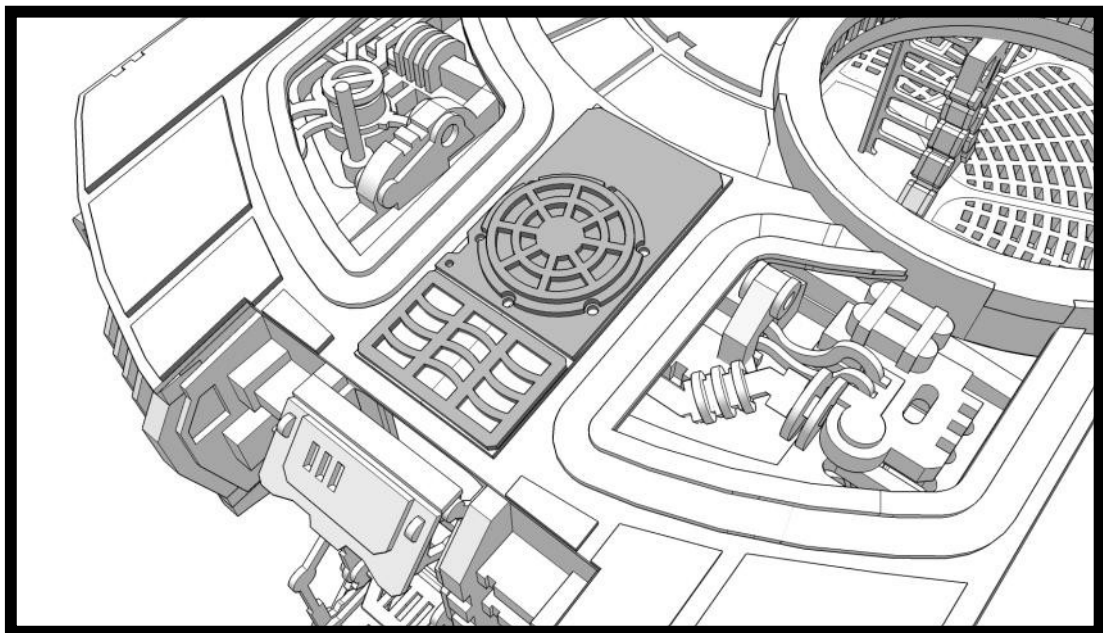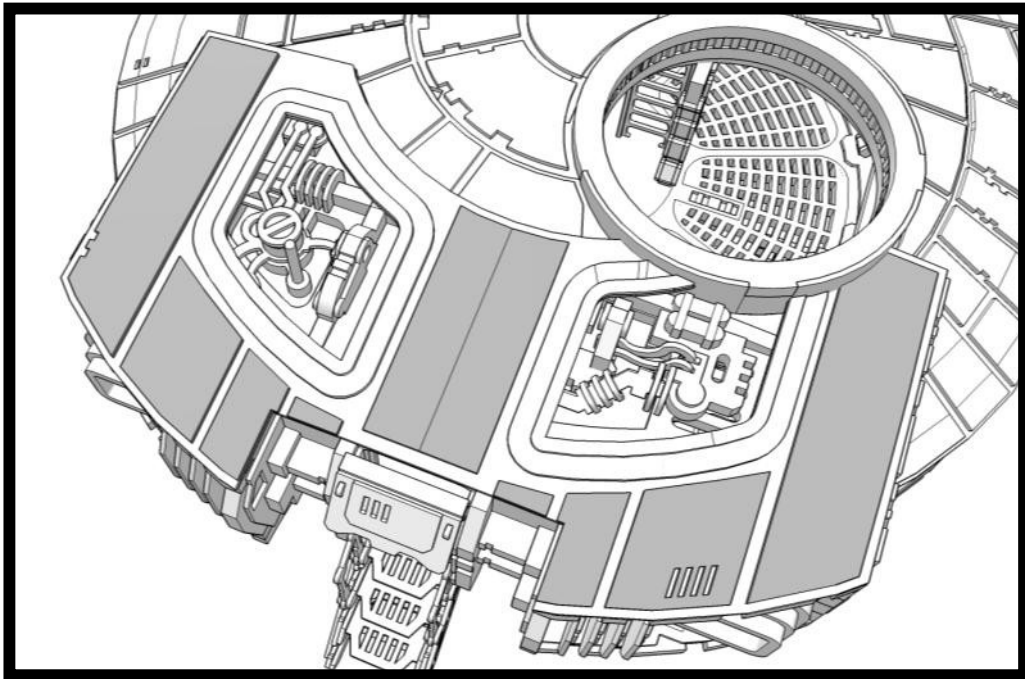




Exterior Panelling.

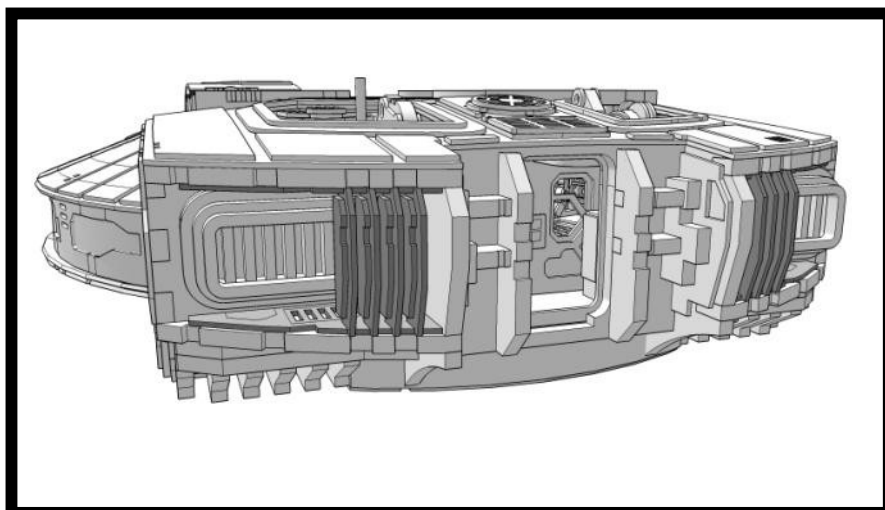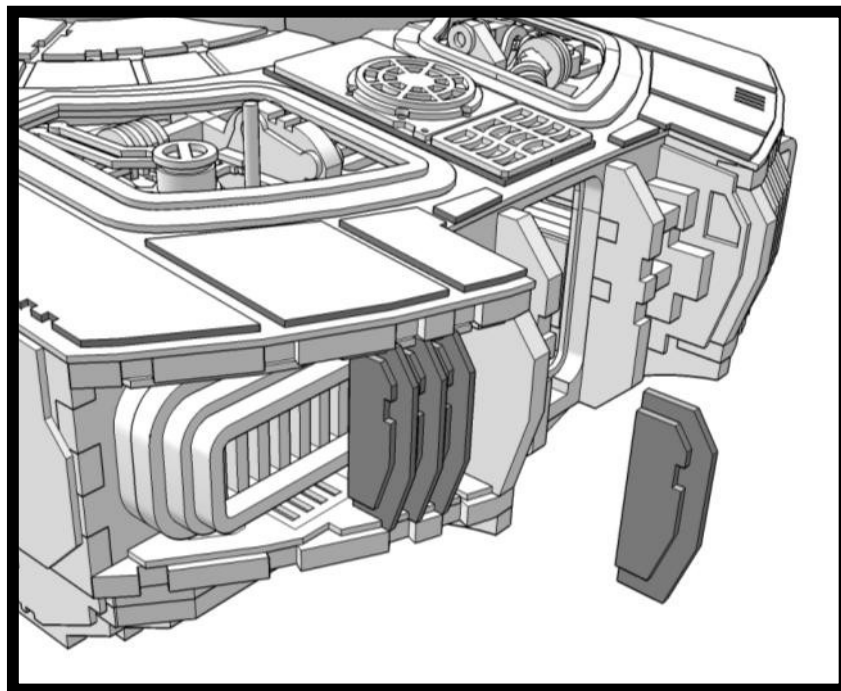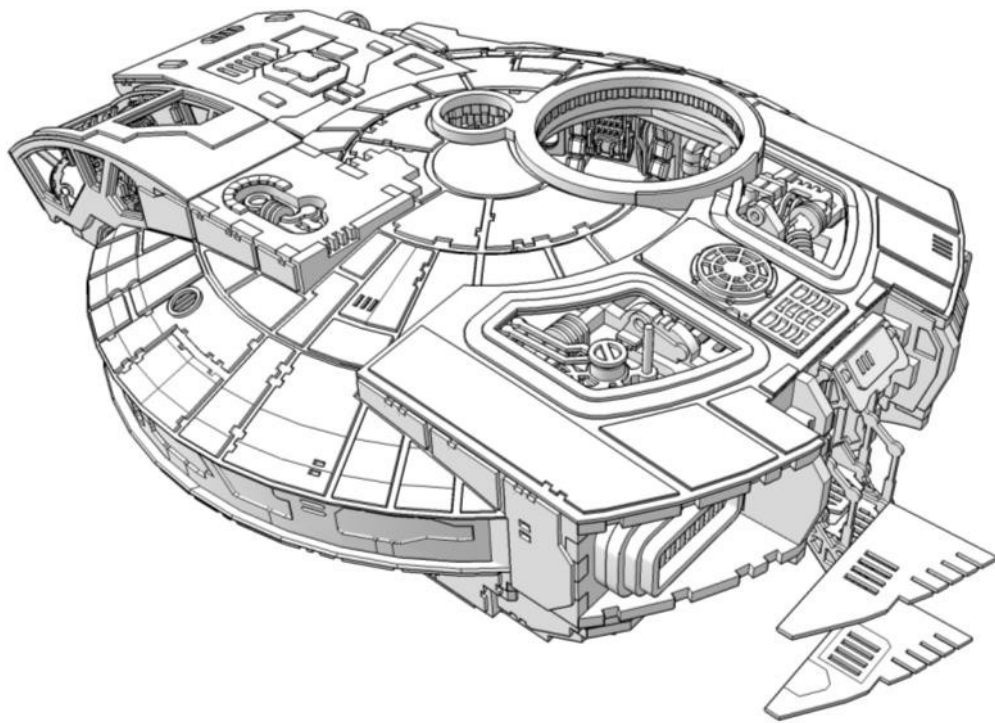

Exterior Panelling.

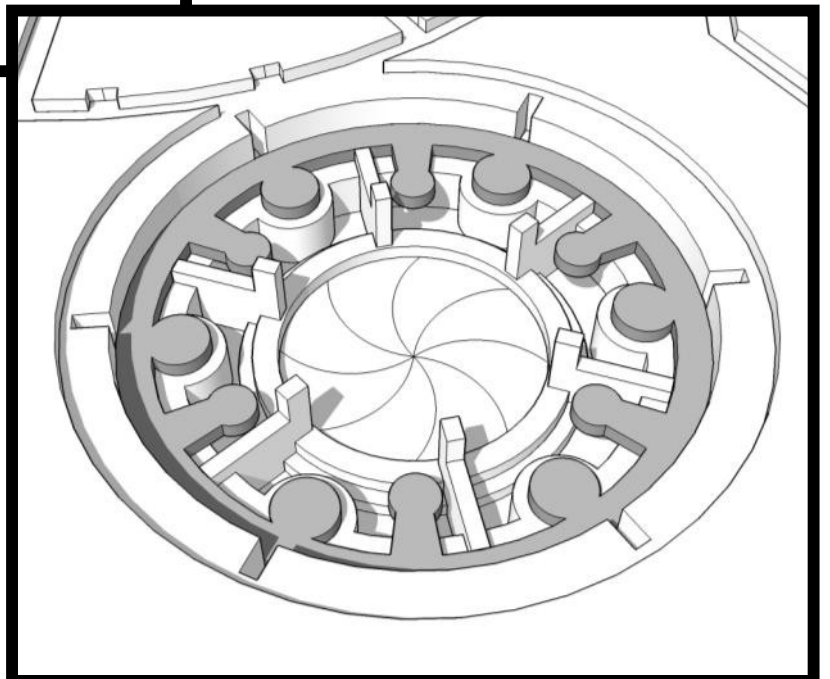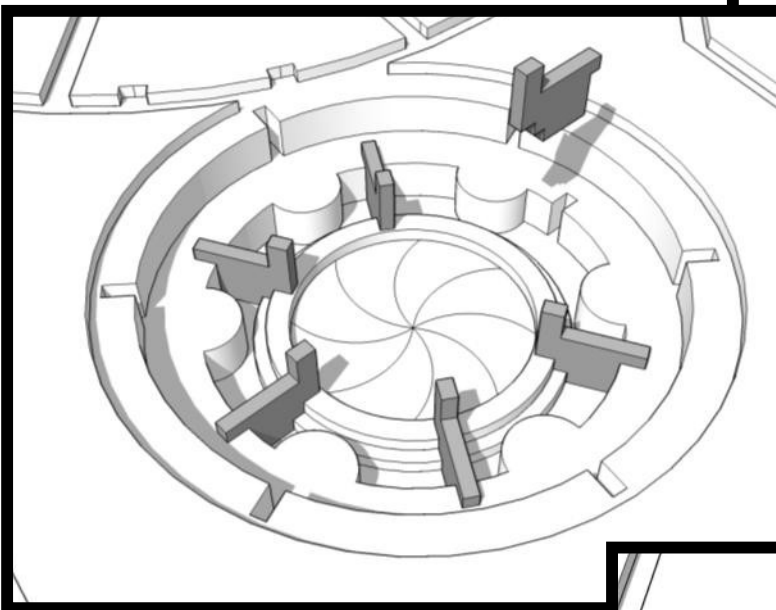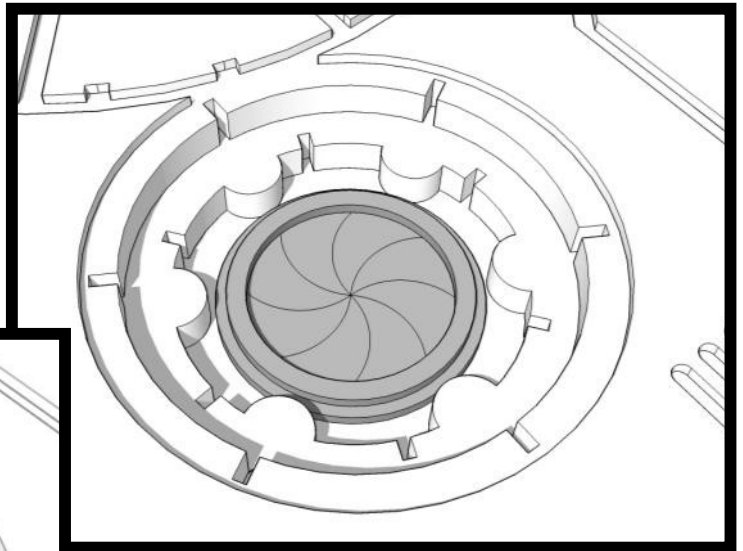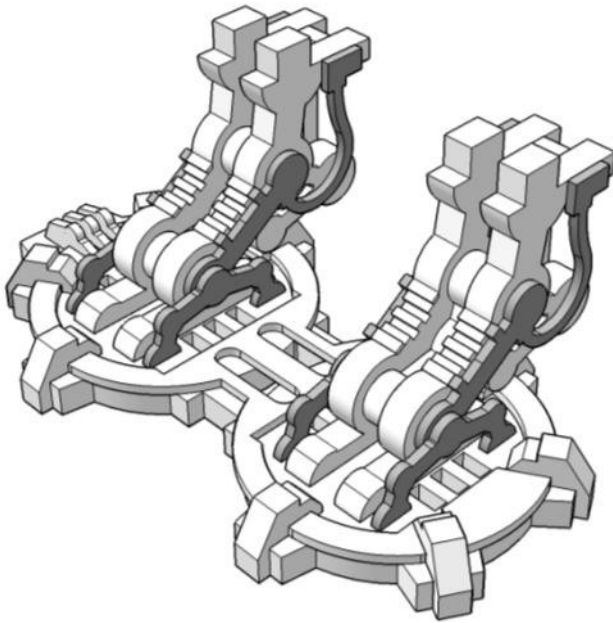

Exterior Panelling.

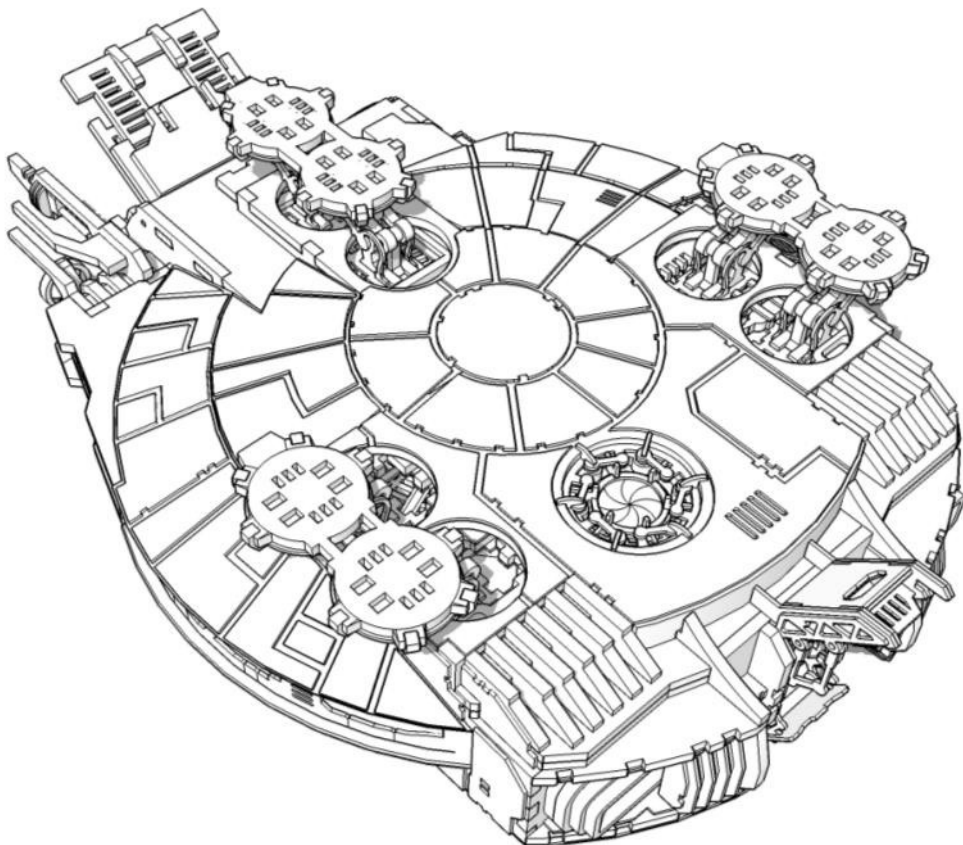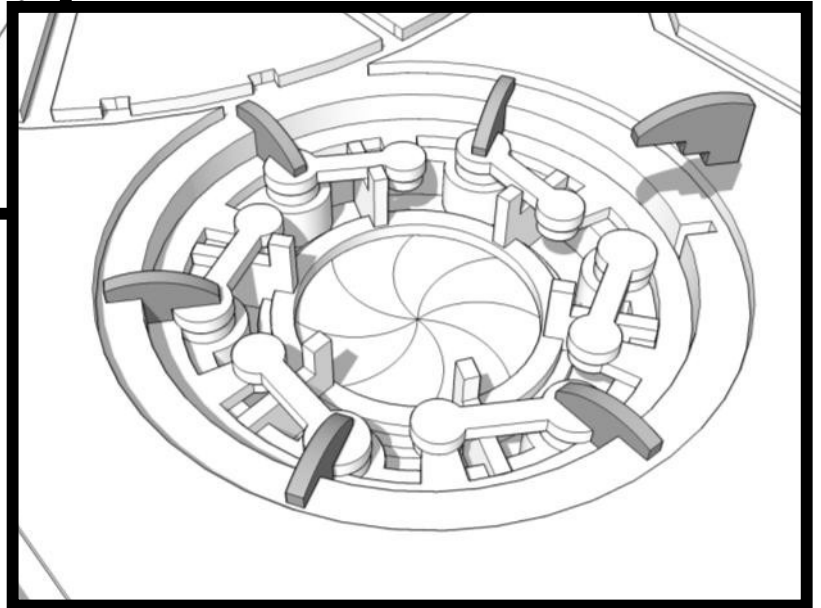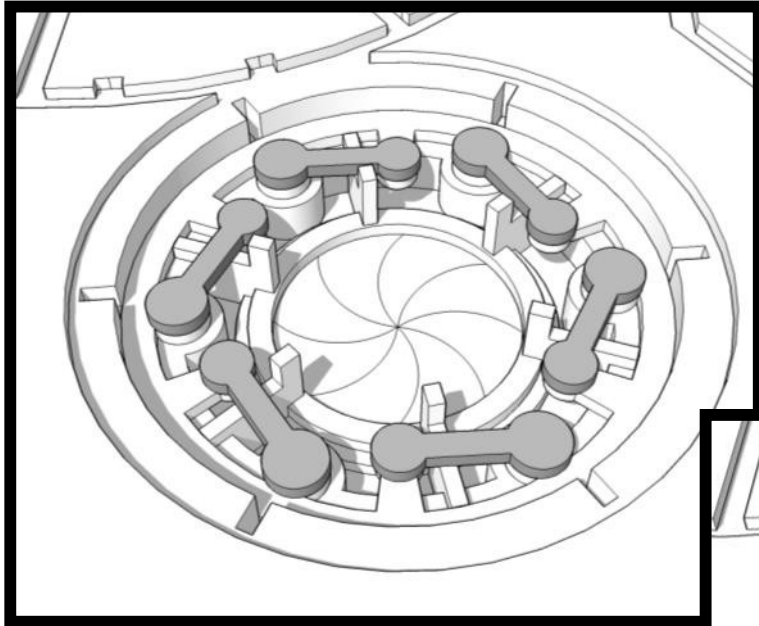

Wow. You're Finished!

Congratulations!

