

MINIATURE SCENERY

INSTRUCTIONS UP SHELF

PREPARATION


You will need:

- Cutting mat or something to protect your table.
- PVA/Wood glue or superglue if you prefer.
- Small file or sand paper.
- Small blade / hobby knife




GENERAL PROCESS

- Clear plenty of table space, you will need it.
- Parts should remove easily from the board by pressing through and popping them out. It's a good idea to cut through the tiny joins first though, and some parts (particularly smaller, more detailed parts) may need more careful persuasion.
- Use file or sand paper to remove the small bur caused by the connection to the frame.
- It's a good idea to familiarise yourself with how the pieces fit together before gluing.
- Slot the parts together as shown by the pictures below, applying glue wherever there is a connection. (unless shown otherwise)
- Parts may be a very tight fit, slight trimming or sanding of parts may be needed for ease of assembly.

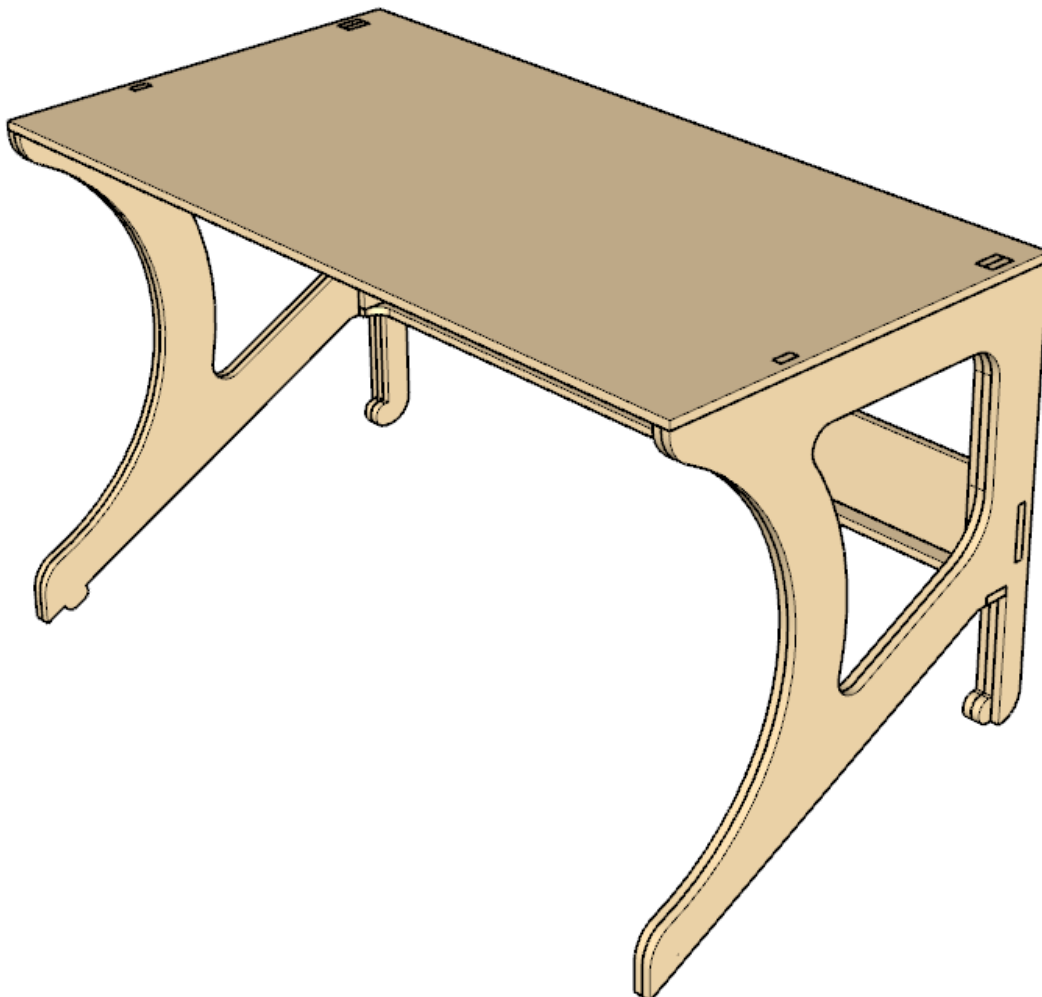


L

Left Side


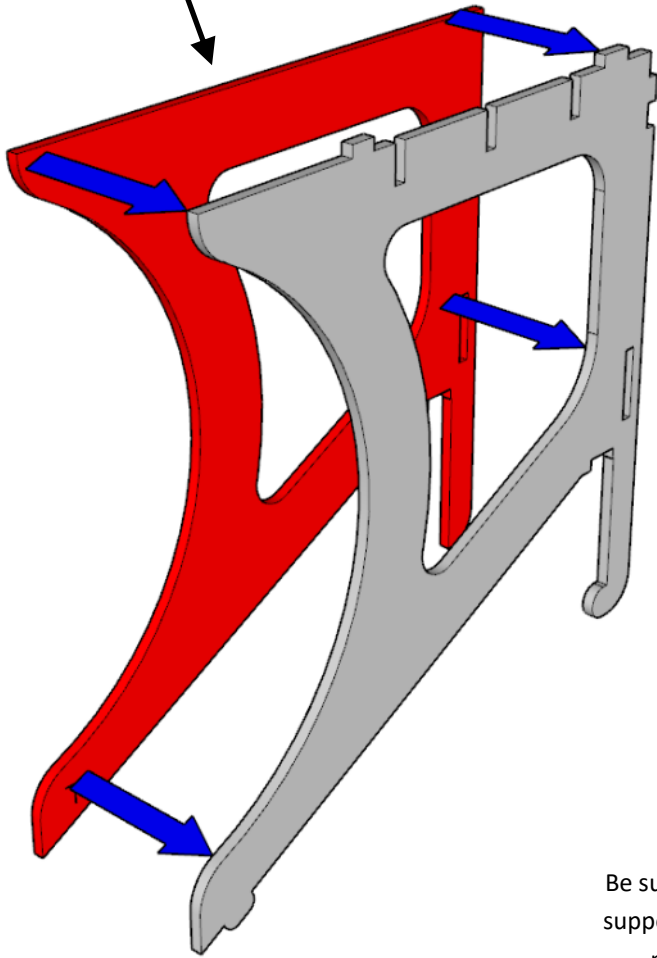





R



Right Side

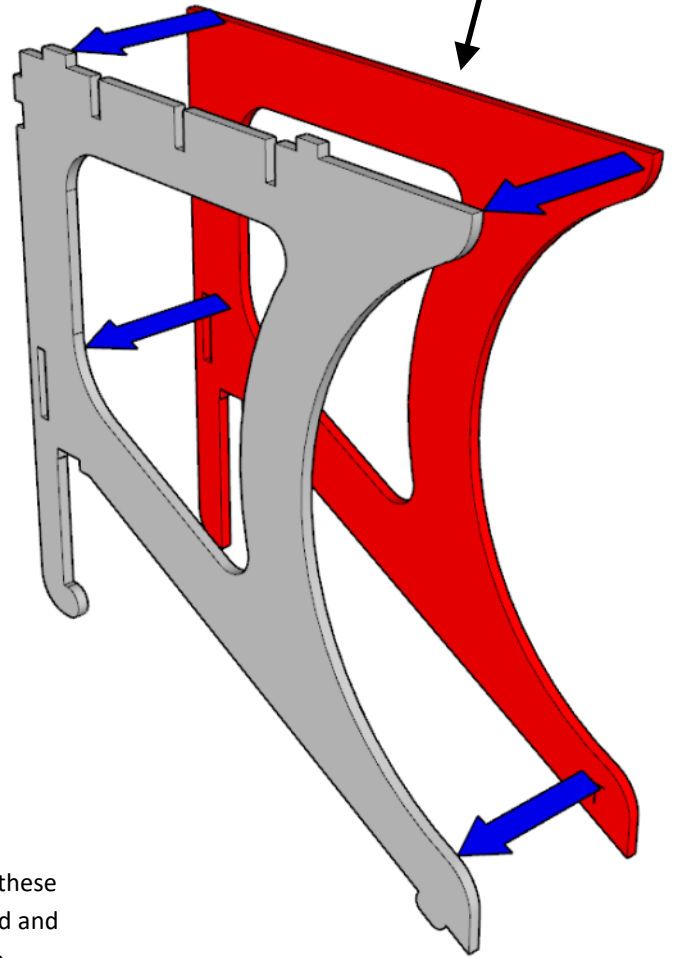


Be sure to make these supports mirrored and not the same.

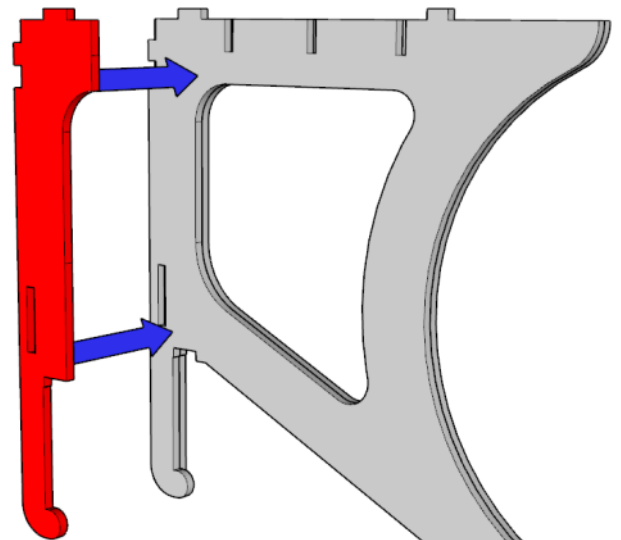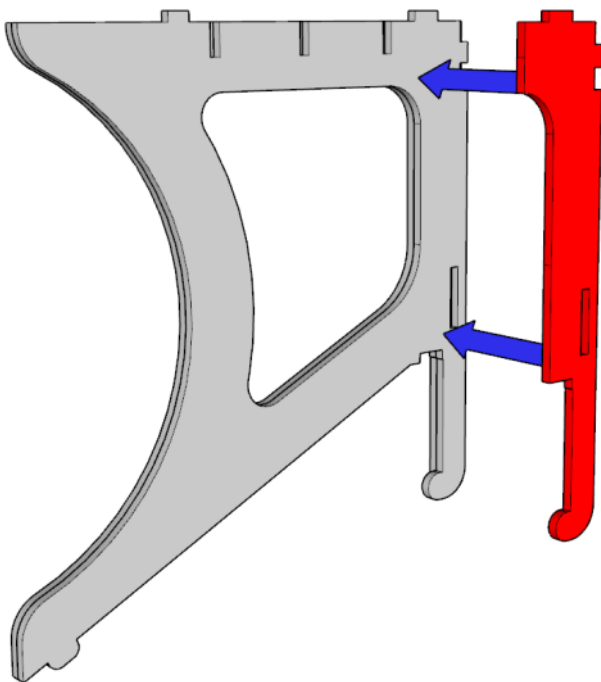

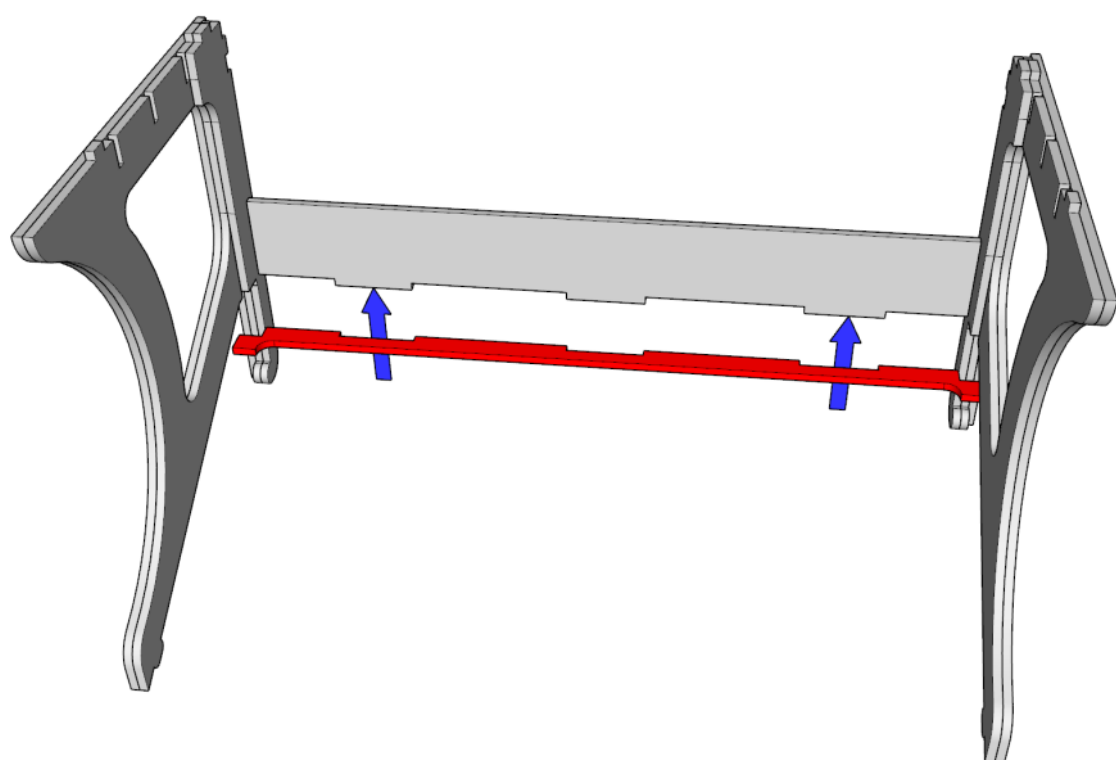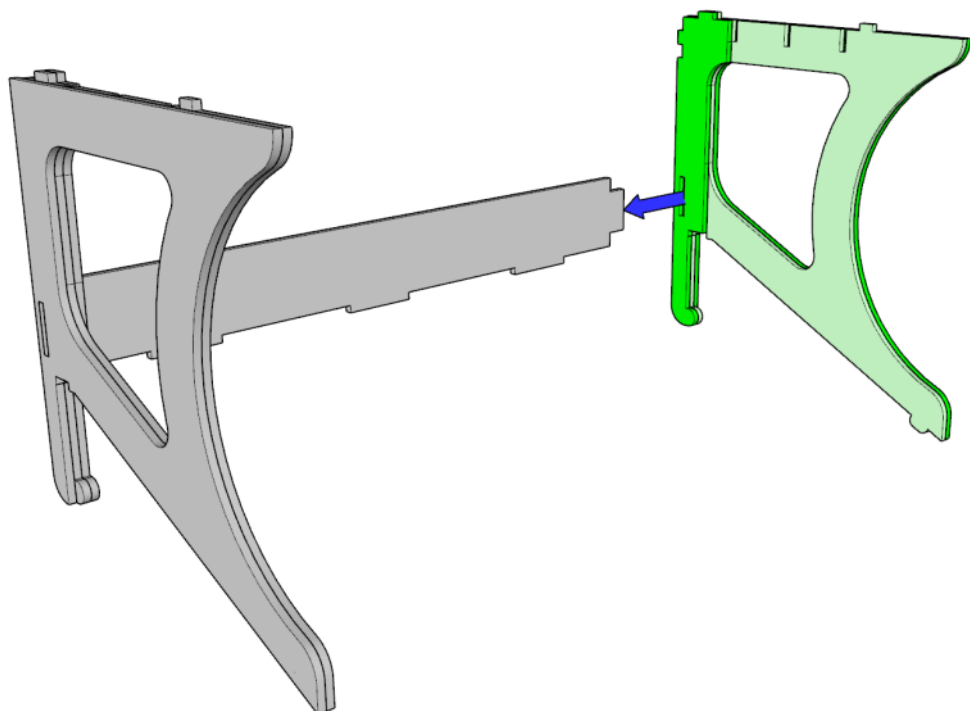
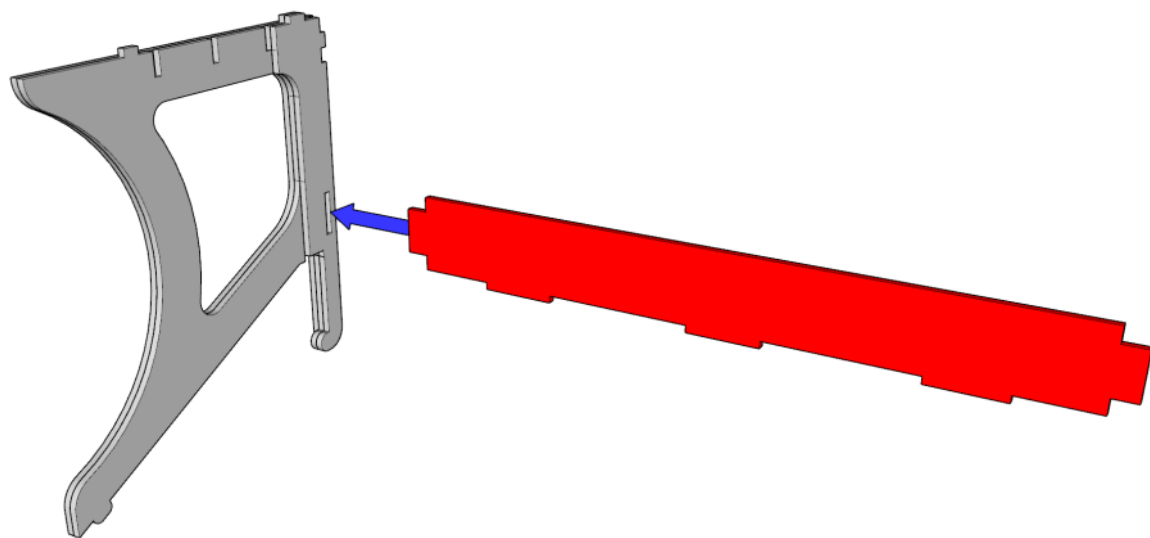


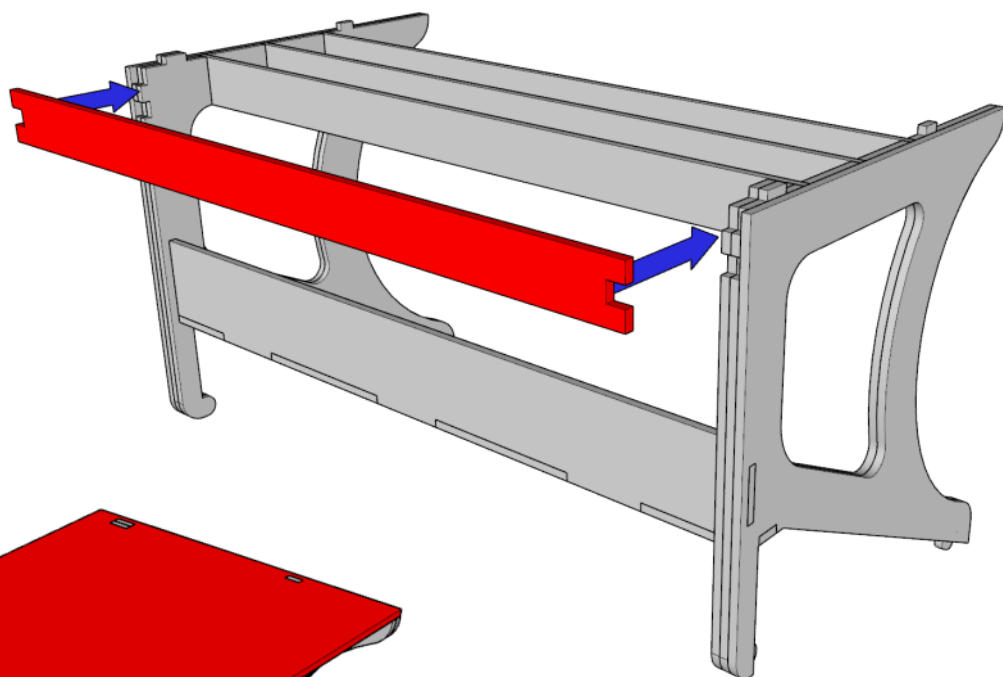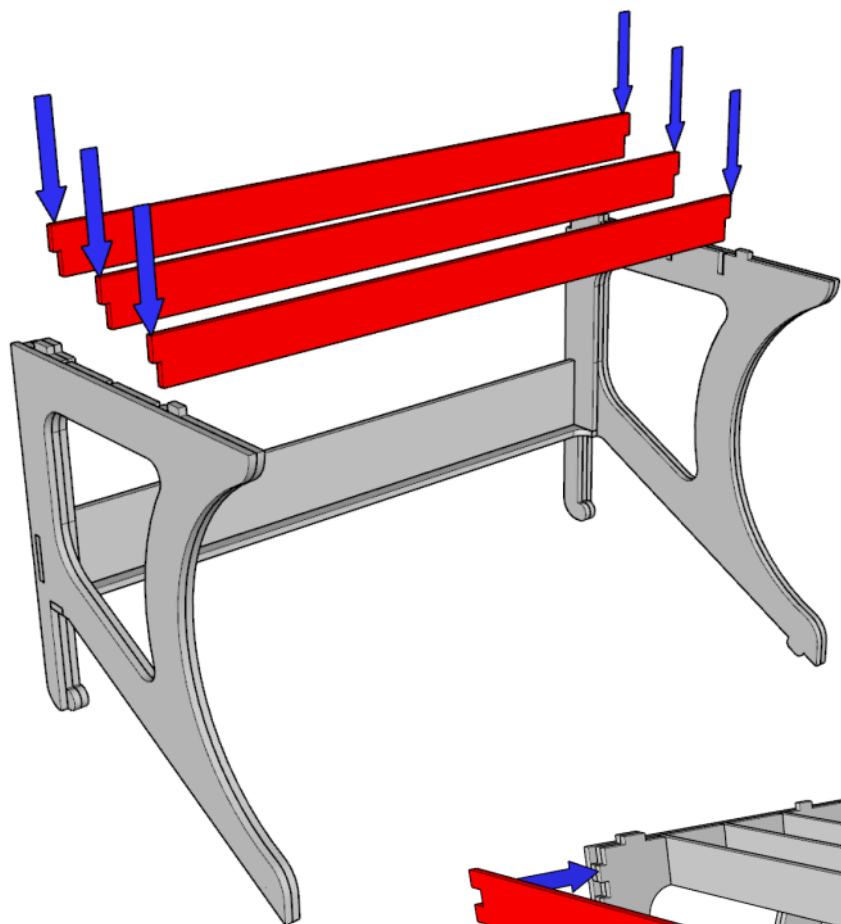

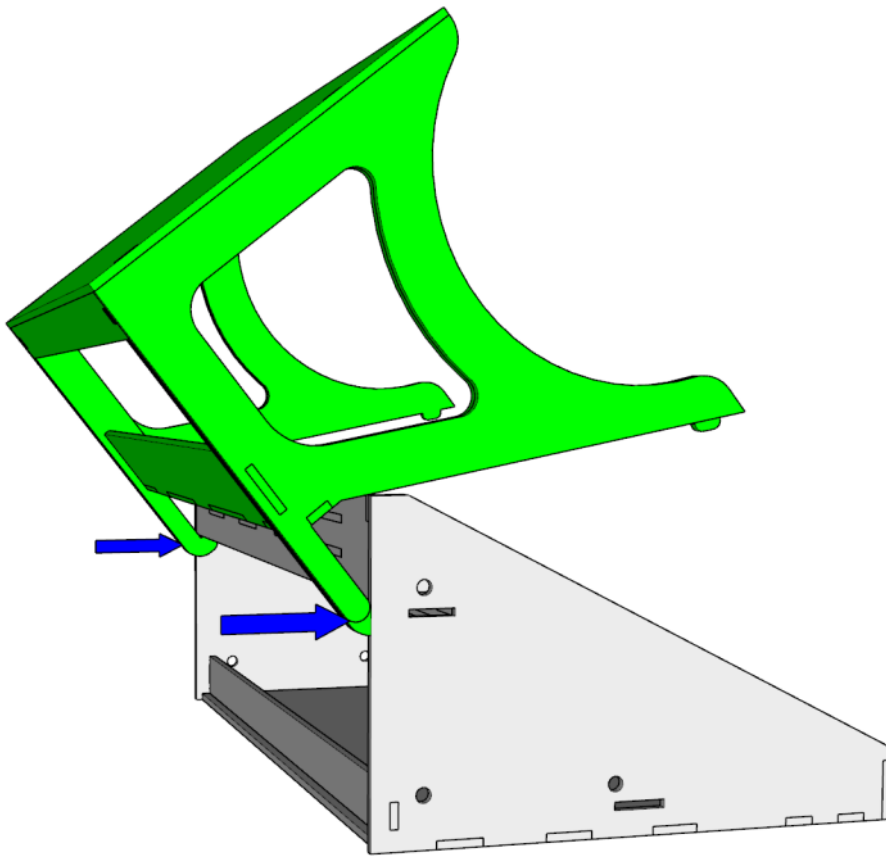

Some force may be needed

- Make sure the rear claws are holding in the correct place.
- Rotate forward making sure the rear claws do not step out.

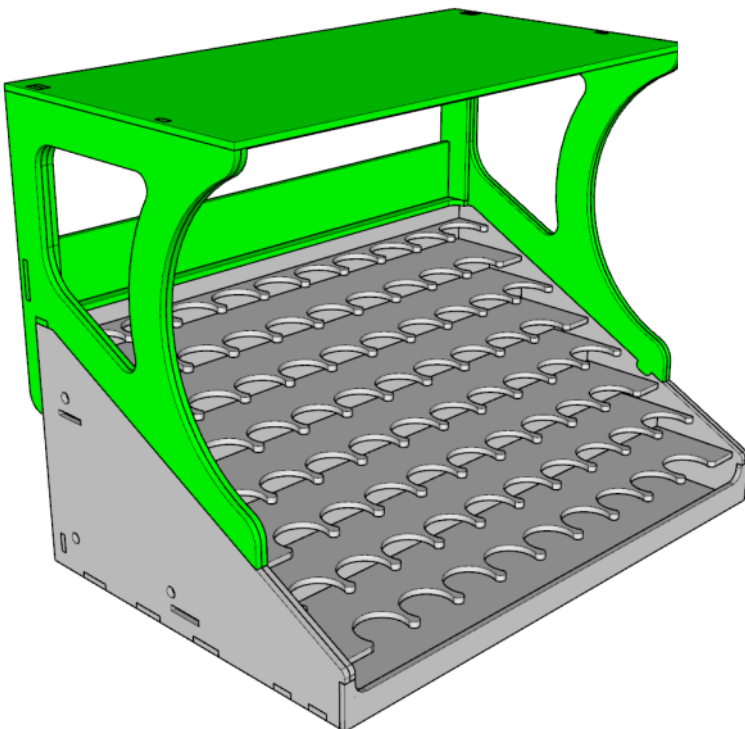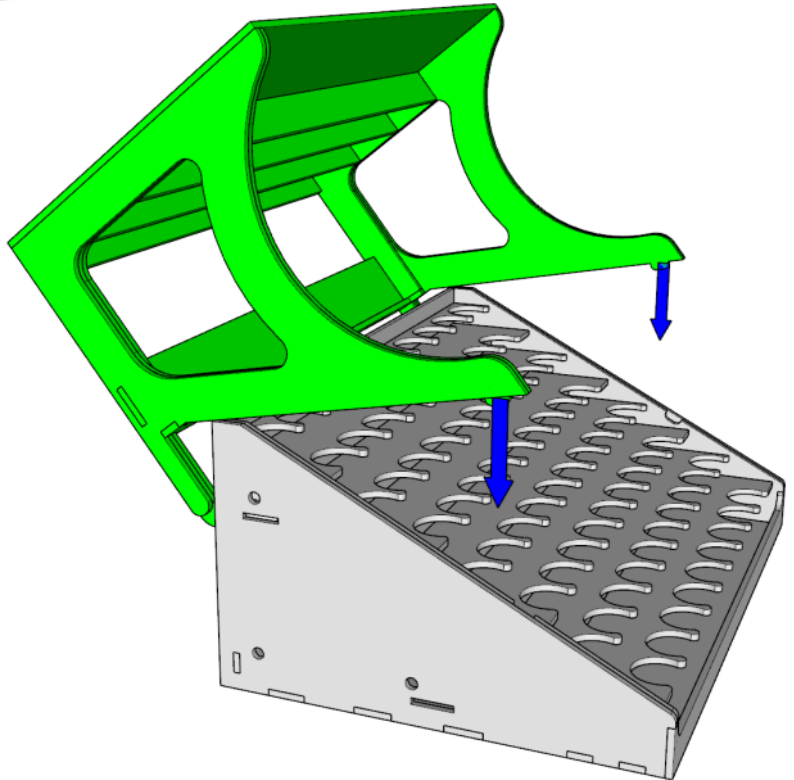

You may like to glue the shelf