
WORK-SITE BARRIERS [X3]

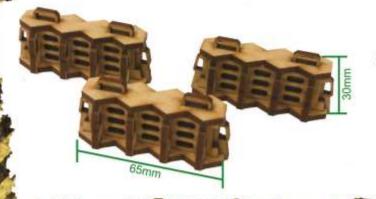


Makes the open road much safer for roadworks and firefights



Contains: 3 MDF Barriers

> Models supplied un-painted and un-assembled



wherta may contain small parts. Not suitable for children under 8 years old. The exclusive copyright on the model designs and components within this case is the property of Ministrus Scenery, 2016. All rights reser




# INSTRUCTIONS WORK-SITE BARRIERS

# PREPARATION

### You will need:

- Cutting mat or something to protect your table.
- PVA/Wood glue or superglue if you prefer.
- Small file or sand paper.
- Small blade / hobby knife

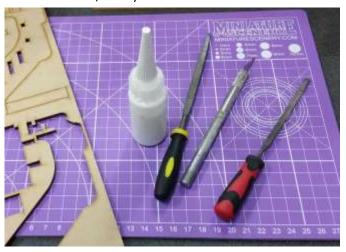

## GENERAL PROCESS

- Clear plenty of table space, you will need it.
- Parts should remove easily from the board by pressing through and popping them out. It's a good idea to cut through the tiny joins first though, and some parts (particularly smaller, more detailed parts) may need more carful persuasion.
- Use file or sand paper to remove the small bur caused by the connection to the frame.
- It's a good idea to familiarise yourself with how the pieces fit together before gluing.
- Slot the parts together as shown by the pictures below, applying glue wherever there is a connection. (unless shown otherwise)
- Parts may be a very tight fit, slight trimming or sanding of parts may be needed for ease of assembly.

