CNC WORKSHOP

MINIATURE SCENERY

Pagoda Skywalk

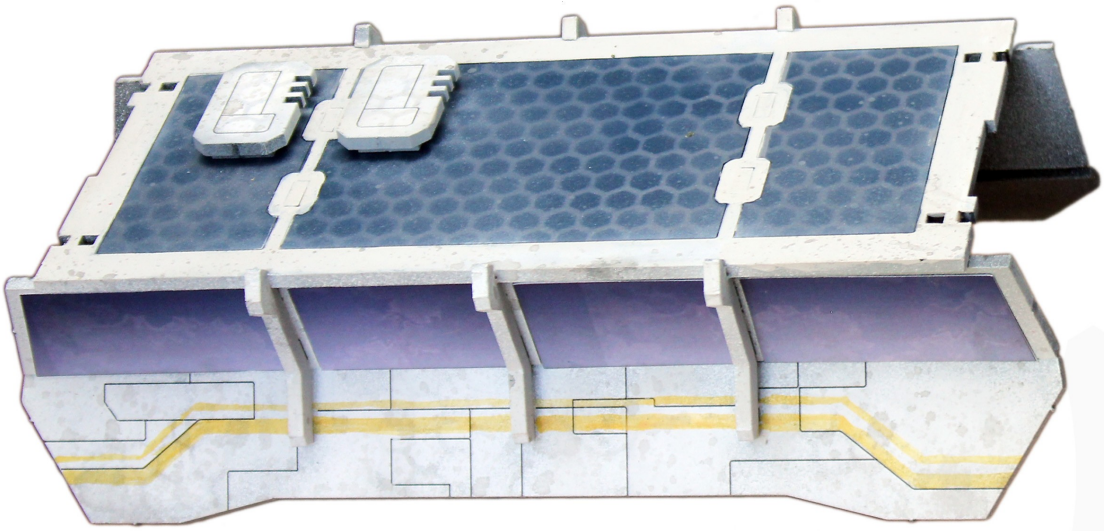

For detailed, easy to follow instructions visit
www.miniaturescenery.com

Make connections and larger structures by simply adding the skywalk to our Pagoda Terrain

CNC WORKSHOP MINIATURE SCENERY

INSTRUCTIONS

Pagoda Skywalk

Preparation
Once you clear some table space you will need a hobby knife and glue (PVA, wood glue, hobby glue) and a file or small piece of sandpaper to be used for cleaning up any tiny imperfections.

It's a good idea to familiarise yourself with how the pieces fit together before gluing.

Getting Started
I. Parts should remove easily from the board by pressing through and popping them out. It's a good idea to cut through the tiny joins first though, and some parts (particularly smaller, more detailed parts) may need more careful persuasion.
II. Use a file or sand paper last to completely remove the tabs that might remain.

Construction
Slot the parts together as shown by the pictures below, applying glue wherever there is a connection.

Some parts of this kit are very fine, or have engraving very close to edges. Make sure you cut through any tabs carefully with a hobby knife first to avoid damage.

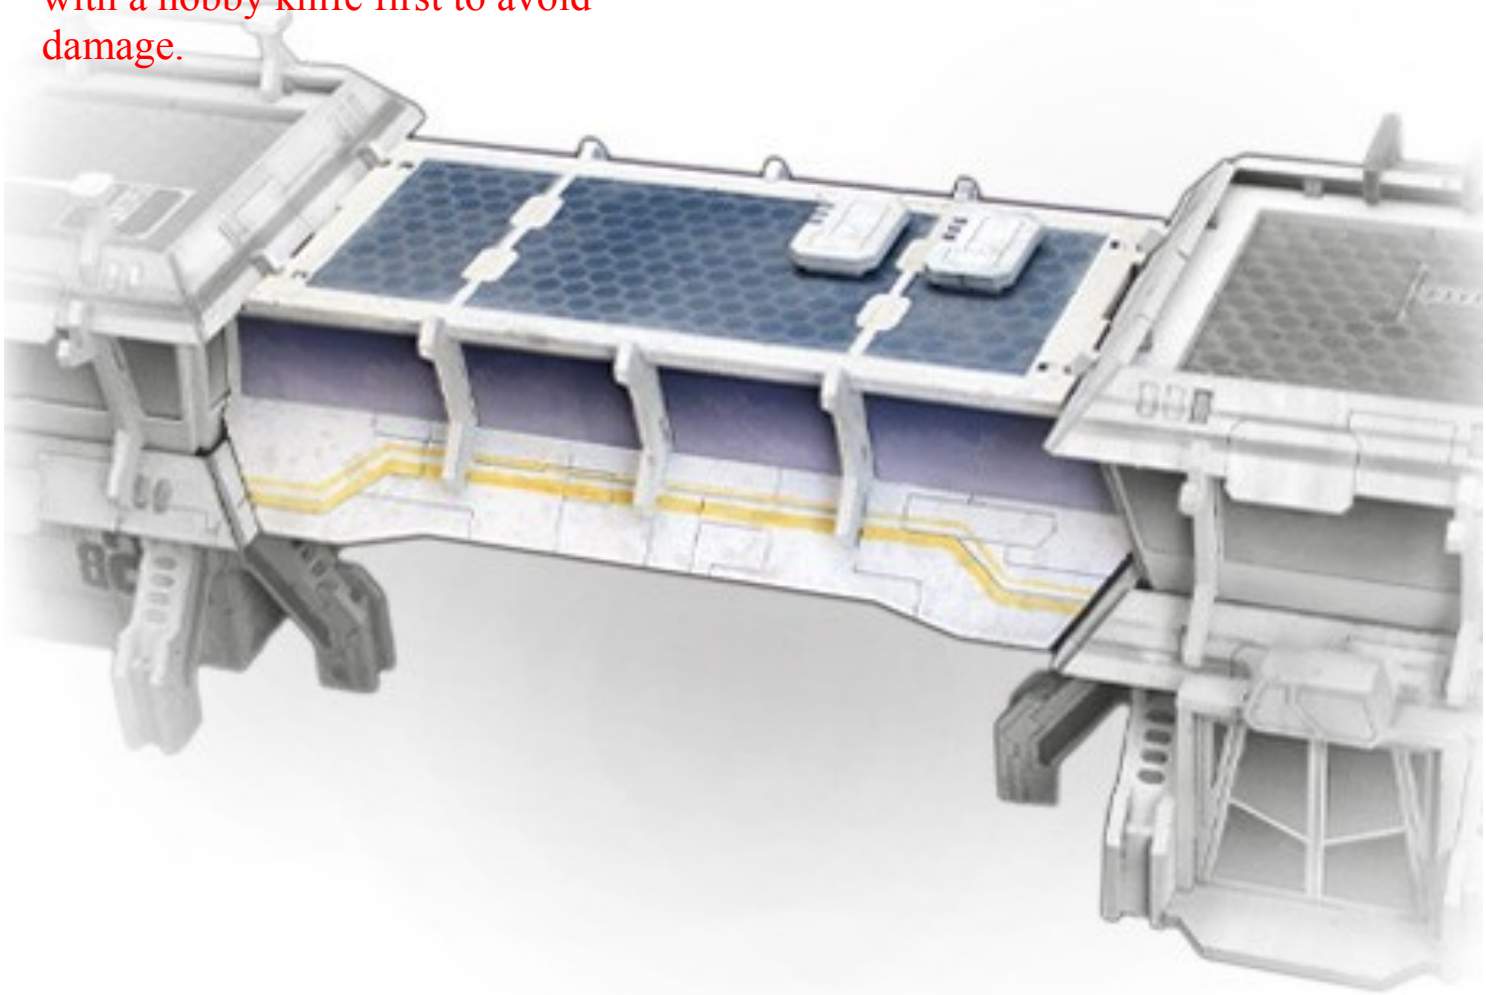

The exclusive copyright on the model designs are the property of CNC Workshop Ltd. © Copyright CNC Workshop Ltd., 2006. All rights reserved. Made in Australia

CNC WORKSHOP

MINIATURE SCENERY

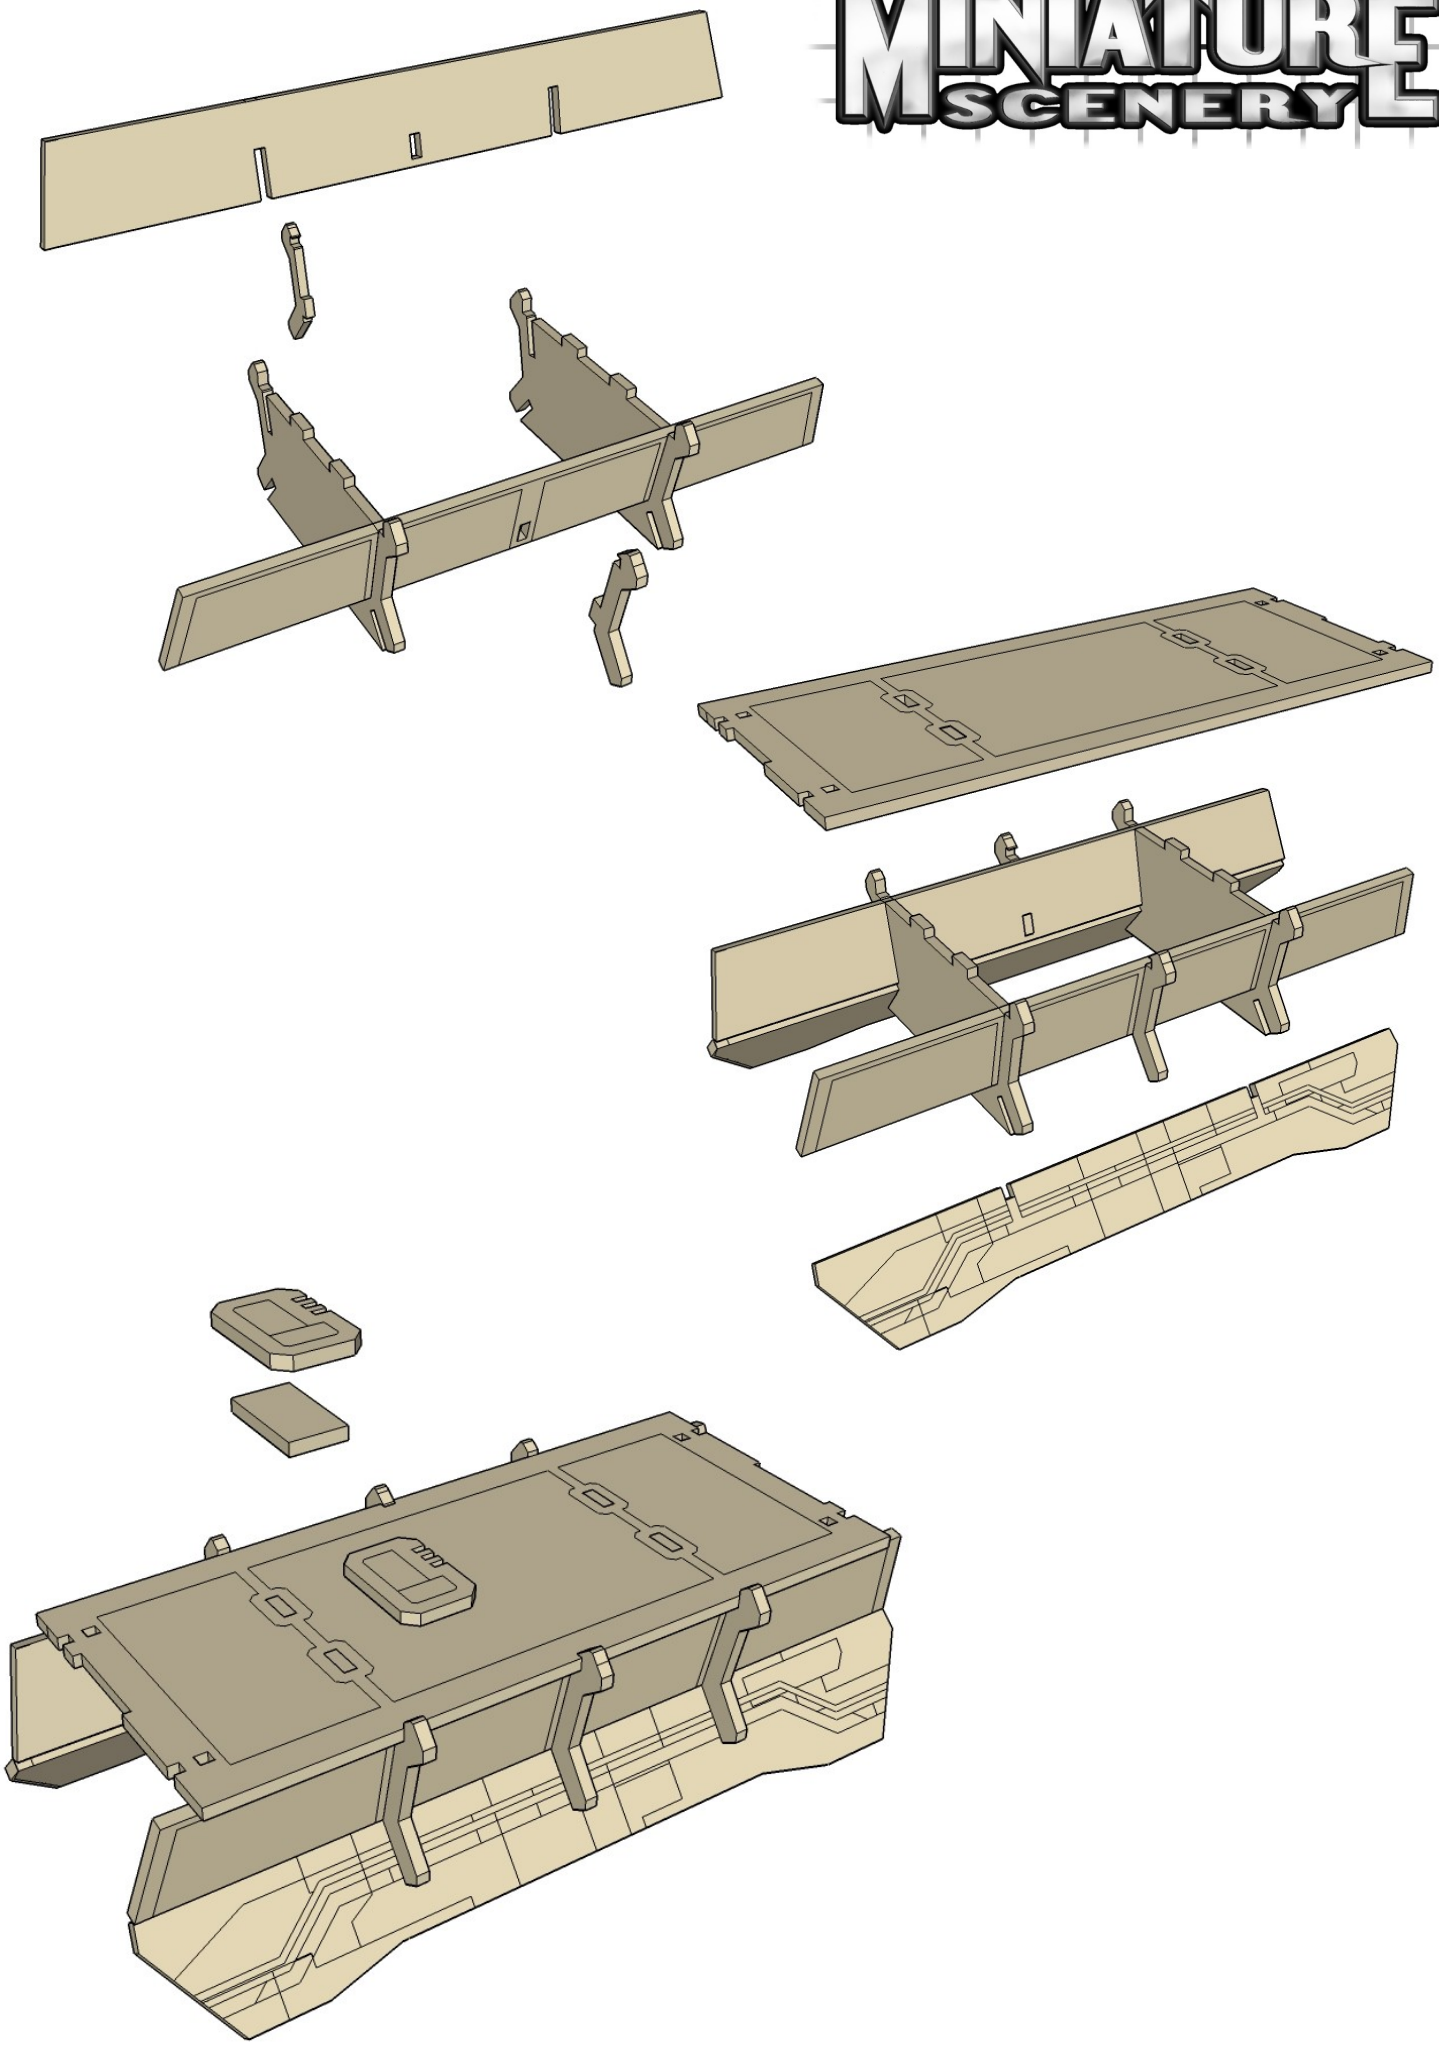

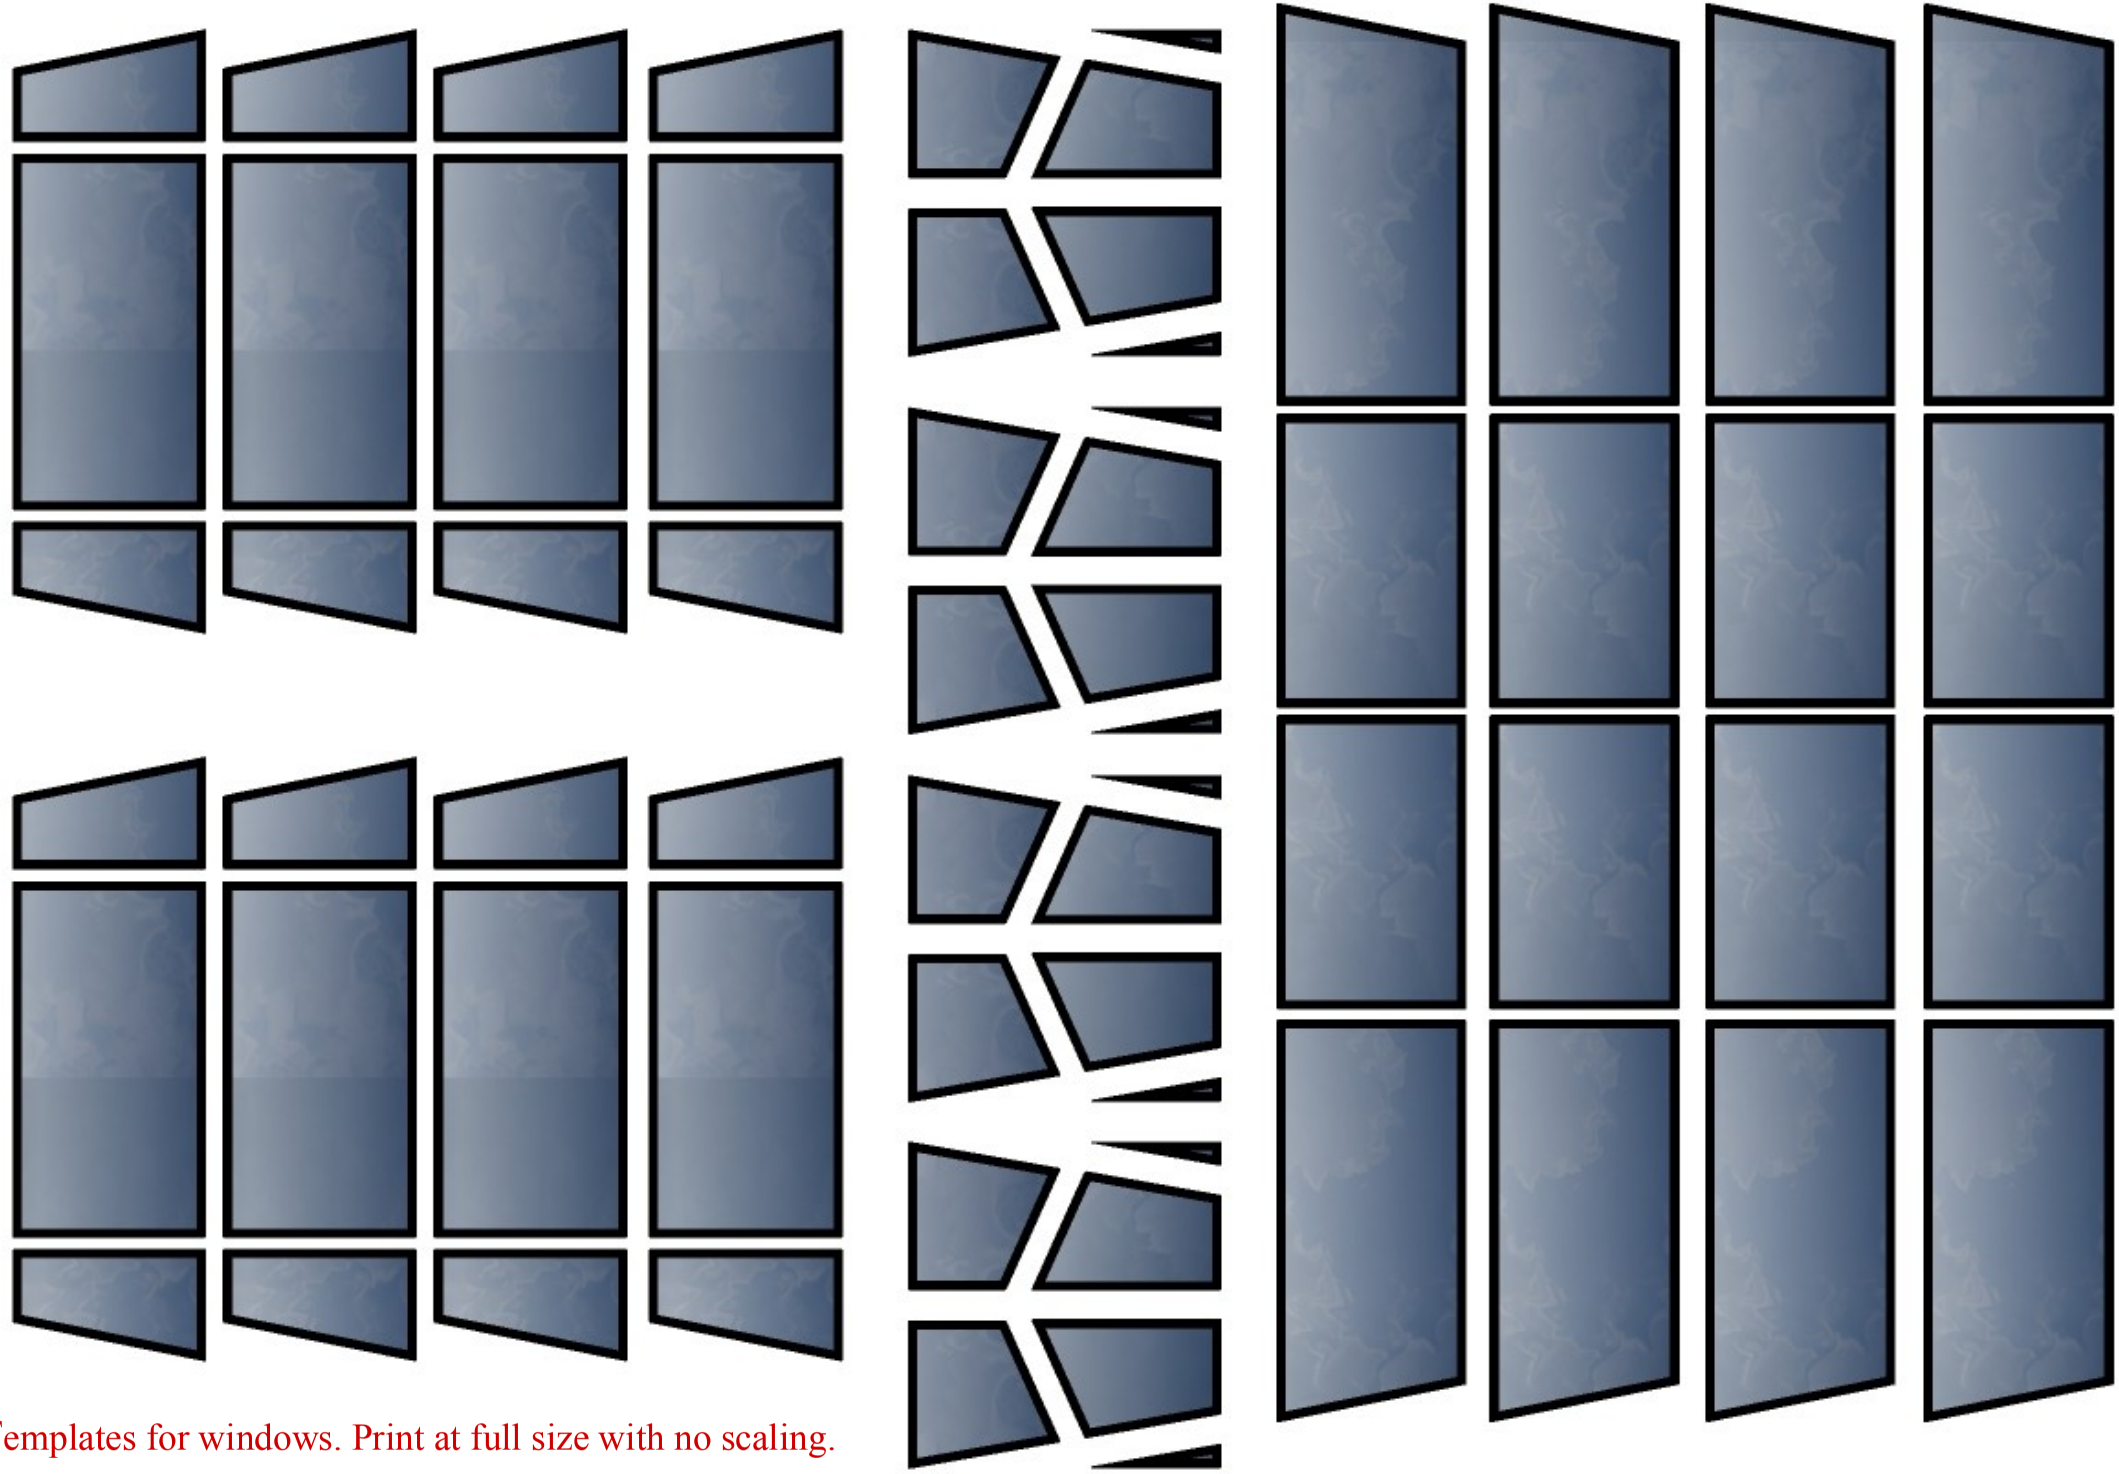

Templates for windows. Print at full size with no scaling.